

MAZDA PROTEGE/PROTEGE5 1999-03

MAZDA PROTEGE/PROTEGE5 1999-03

SECTION INDEX

A/C /HEATER/VENTILATION	325
A/C REFRIGERANT CAPACITIES	325
ABS/BRAKES	327
AIR BAG SYSTEM	328
AIR CLEANER	333
BACK WINDOW	346
CENTER CONSOLE	337
CLEAR COAT IDENTIFICATION	321
COOLING	324
COWL & DASH	335
CRUISE CONTROL SYSTEM	328
ELECTRICAL	334
EMISSION SYSTEM	334
ENGINE UNDER COVER	333
ENGINE/TRANS	332
ENGINE/TRANS MOUNTS	332
EXHAUST	333
FRONT BUMPER	322
FRONT DOOR	340
FRONT DRIVE AXLE	330
FRONT FENDER	326
FRONT INNER STRUCTURE	326
FRONT LAMPS	323
FRONT SEAT	338
FRONT STEERING LINKAGE/GEAR	330
FRONT SUSPENSION	329
FUEL TANK	351
GRILLE	322
HOOD	324
INFORMATION LABELS	322
INSTRUMENT PANEL	336
LIFTGATE	350
LUGGAGE LID	349
PAINT CODE LOCATION	321
QUARTER GLASS	349
REAR BODY	352
REAR BUMPER	353
REAR DOOR	342
REAR LAMPS	352
REAR SEAT	339
REAR SUSPENSION	350
ROCKER/PILLARS/FLOOR	338
ROOF	344
SEAT BELTS	339
SIDE BODY	346
SPECIAL CAUTIONS	321
STEERING PUMP	330
STEERING WHEEL/COLUMN	331
SUNROOF	346
TURBOCHARGER/INTERCOOLER	333
UNDERHOOD DIMENSIONS	326
WHEEL	328
WINDSHIELD	335

SPECIAL CAUTIONS

AIR BAGS

Refer to Procedure Explanation 29 for Supplemental Restraint/Air Bag Special Cautions.

SUSPENSION


Manufacturer advises that some new fasteners must be used whenever old fasteners are loosened or removed.

PAINT CODE LOCATION

Paint code located on left center pillar.


CLEAR COAT IDENTIFICATION

All metallic colors are clear coat.

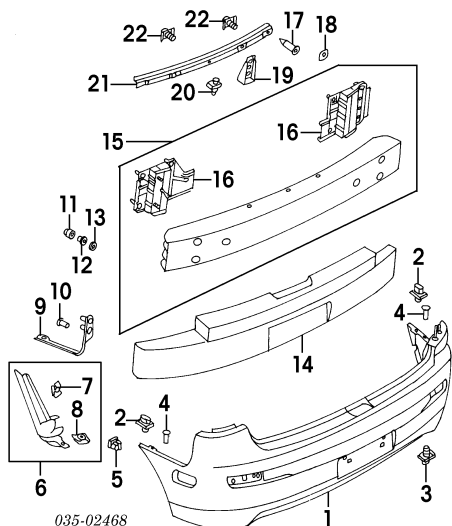

035-02468

- | | |
|------------------------------------|----------|
| 3 Fastener, Lower (4) | N.A. |
| 4 Rivet (4/Side) | R/L N.A. |
| 5 Clip, Side | R/L N.A. |
| 6 Shield Assy, Splash | R/L N.A. |
| 7 Nut, Spring† | R/L N.A. |
| 8 Nut, Clip† | R/L N.A. |
| †Included w/Splash Shield Assy | |
| 9 Guard, Side | R/L N.A. |
| 10 Clip, Guard (2/Side) | R/L N.A. |
| 11 Washer (2/Side) | R/L N.A. |
| 12 Guide (2/Side) | R/L N.A. |
| 13 Gasket (2/Side) | R/L N.A. |
| 14 Absorber, Impact | N.A. |
| 15 Bar Assy, Reinforcement | N.A. |
| 16 Stay, Bumper† | R/L N.A. |
| †Included w/Reinforcement Bar Assy | |
| 17 Pin, Stay | R/L N.A. |
| 18 Gasket, Seal (2/Side) | R/L N.A. |
| 19 Bracket, Bumper | R/L N.A. |
| 20 Fastener, Upper | R/L N.A. |
| 21 Retainer, Cover | N.A. |
| 22 Fastener, Retainer | R/L N.A. |
| Type A | R/L N.A. |
| Type B (3) | N.A. |

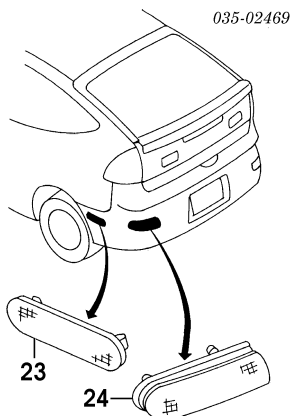


035-02469

- | | |
|--------------------|----------|
| 23 Reflector, Side | R/L N.A. |
| 24 Reflector, Rear | R/L N.A. |

SEDAN


Illustration Located in Next Column

- | | |
|-----------------------|----------------------|
| 1 Cover, Rear | |
| USA (P) | 95 BC1M-50-221 |
| | 96-98 B16H-50-221-8J |
| Canada | |
| Black | N.A. |
| Paint to Match | 95 N.A. |
| | 96-98 N.A. |
| (P) Paint to Match | |
| 2 Grommet, Upper | R/L BC1M-50-025 |
| 3 Fastener, Lower (5) | BF67-50-235 |
| 4 Rivet (3/Side) | R/L 9025-73-205 |
| 5 Grommet, Side | R/L 9991-00-501 |
| 6 Guard, Rear Bumper | 95 R B01J-50-361 |

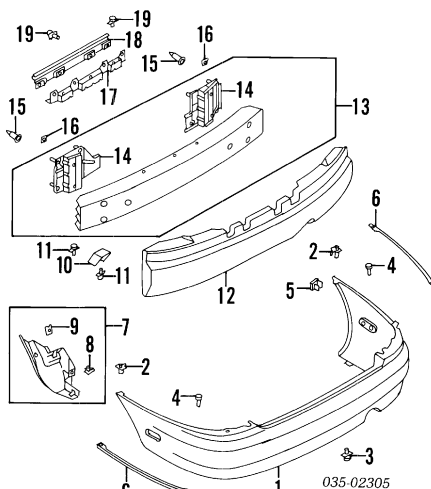

035-02305

- | | |
|------------------------------------|---------------------|
| 7 Shield Assy, Splash | L B01J-50-371 |
| | 96 R BC1F-50-361 |
| | L BC1F-50-371 |
| | 97-98 R B01J-50-361 |
| | L B01J-50-371 |
| | R BC1M-50-340 |
| 8 Nut, Clip† | R/L B092-51-861 |
| 9 Nut, Spring† | R/L FB01-50-733 |
| †Included w/Splash Shield Assy | |
| 10 Bracket, Cover | 95 R/L BC1M-50-3B2 |
| 11 Fastener (2/Side) | 95 R/L BF67-50-235 |
| 12 Absorber, Impact | BC1M-50-311 |
| 13 Bar Assy, Reinforcement | BC1M-50-260C |
| 14 Stay, Bumper† | R BC1M-50-280B |
| | L BC1M-50-290A |
| †Included w/Reinforcement Bar Assy | |
| 15 Pin, Stay | R/L GA5R-50-1K5 |
| 16 Gasket, Seal (2/Side) | R/L G030-50-285 |
| 17 Bracket, Center | BC1M-50-202 |
| 18 Retainer, Cover | B01J-50-2R1 |
| 19 Fastener, Retainer (4) | BF67-50-235 |

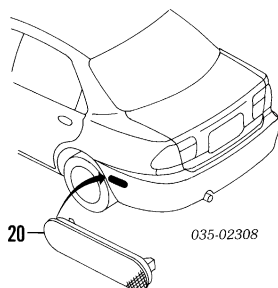


035-02308

- | | |
|--------------------|---------------|
| 20 Reflector, Side | R BC1M-51-5B0 |
| | L BC1M-51-5C0 |

MAZDA PROTEGE/PROTEGE5 1999-03

INFORMATION LABELS

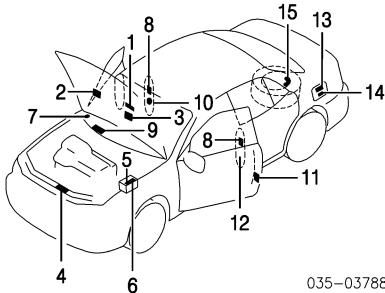


035-03788

- 1 Label, A/C Caution
99-00 BC1M-61-439A
01-03 BJ0M-61-439
- 2 Label, Bolt Caution
1999-00 Z509-69-082
1.6L Eng FS01-69-082A
1.8L Eng
- 3 Label, Emission†
Hatchback BN7H-69-036
Sedan
Man Trans BL8D-69-036
Auto Trans BL8M-69-036
†Order by Application
- 4 Label, Fan Caution
5 Label, Battery Caution
6 Label, Battery Info
7 Label, Fuel Economy†
†Order by Application
- 8 Label, Side Air Bag Caution
9 Label, Air Bag Caution
10 Label, Vehicle Info
11 Label, Tire Pressure
1.6L Eng BJ0E-69-014A
1.8L Eng BJ0N-69-014A
2.0L Eng
w/Rear Disc Brakes BL8P-69-014
w/o Rear Disc Brakes
w/Sport Susp BL8M-69-014
w/o Sport Susp BN7H-69-014A
- 12 Label, Safety Panel
Canada N.A.
- 13 Label, Fuel Warning
14 Label, Gasoline
15 Label, Temporary Spare
English TA01-69-074B
French N.A.

- 11 Nut, Air Dam Clip (4) BL8D-50-C11A
- 12 Bar Assy, Reinforcement BN7H-50-070A
- 13 Absorber, Impact† BN5V-50-111
- 14 Fastener, Otr Absorber† (2/Side) R/L BF82-50-233
- 15 Fastener, Center Absorber† R G045-68-865-00
- 16 Spacer, Bumper Stay† R BN5V-50-CS1A
L BN5V-50-CS0A
- 17 Plate, Seal† L BN5V-50-1U1
R BN5V-50-1U2
- 18 Fastener, Plate† R/L GD7A-50-EA1
†Included w/Reinforcement Bar Assy
- 19 Nut, Flange R/L 9994-00-803

- 8 Grille, Front Cover L BL8D-50-C21A
- 9 Brkt, License Plate BL8D-50-1T1A
- 10 Bar Assy, Reinforcement BL8D-50-070B
- 11 Stay, Bumper† R BJ0J-50-081
L BJ0J-50-091
- 12 Absorber, Impact† R/L BL8D-50-111-2
- 13 Fastener, Absorber† R/L G045-68-865-00
†Included w/Reinforcement Bar Assy
- 14 Nut, Flange R/L 9994-00-803


SEDAN 1999-00

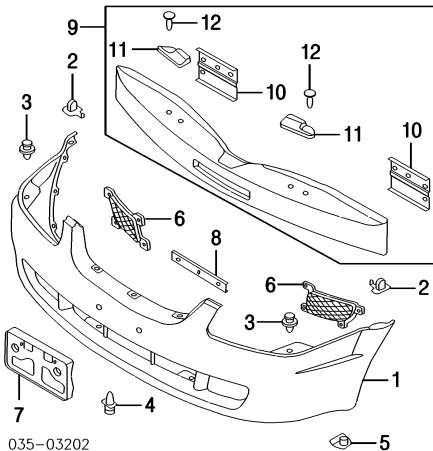

035-03202

- 1 Cover, Front (P) BJ0J-50-031A-8J
(P) Paint to Match
- 2 Grommet R/L BC1M-50-0Z5
- 3 Fastener, Upper R/L GD7A-50-EA1
- 4 Fastener, Lower BF71-50-235
- 5 Nut, Clip (7) B455-56-135
- 6 Cover, Lamp R BJ0J-50-C11
L BJ0J-50-C21
- 7 Brkt, License Plate BJ0J-50-170
- 8 Retainer, License Brkt H005-50-060
- 9 Bar Assy, Reinforcement BJ0J-50-070C
- 10 Stay, Bumper† R BJ0J-50-081
L BJ0J-50-091
- 11 Absorber, Impact† R/L BJ0J-50-111-2
- 12 Fastener, Absorber† R/L G045-68-865-00
†Included w/Reinforcement Bar Assy

SEDAN 2001-03 MP3, MAZDASPEED MODEL

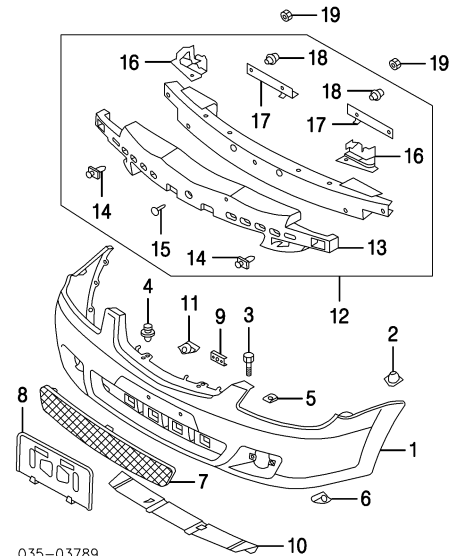


035-03789

- 1 Cover, Front (P) BN7H-50-031-AA
(P) Paint to Match
- 2 Grommet (2/Side) R/L B30D-50-0Z5
- 3 Bolt, Upper R/L 9YA5-90-602
- 4 Fastener, Cover R/L GD7A-50-EA1
- 5 Nut, Upper Clip R/L 9YB3-10-603
- 6 Nut, Lower Clip (6) B455-56-135
- 7 Grille, Front Cover B30P-50-1T1A
- 8 Brkt, License Plate LC62-50-170C
- 9 Retainer, License Brkt J001-50-171
- 10 Dam, Air B30P-51-9K1B
- 11 Nut, Air Dam Clip (4) BL8D-50-C11A
- 12 Bar Assy, Reinforcement BN7H-50-070A
- 13 Absorber, Impact† BN5V-50-111
- 14 Fastener, Otr Absorber† (2/Side) R/L BF82-50-233
- 15 Fastener, Center Absorber† R G045-68-865-00
- 16 Spacer, Bumper Stay† R BN5V-50-CS1A
L BN5V-50-CS0A
- 17 Plate, Seal† R BN5V-50-1U1
L BN5V-50-1U2
- 18 Fastener, Plate† R/L GD7A-50-EA1
†Included w/Reinforcement Bar Assy
- 19 Nut, Flange R/L 9994-00-803

FRONT BUMPER


HATCHBACK

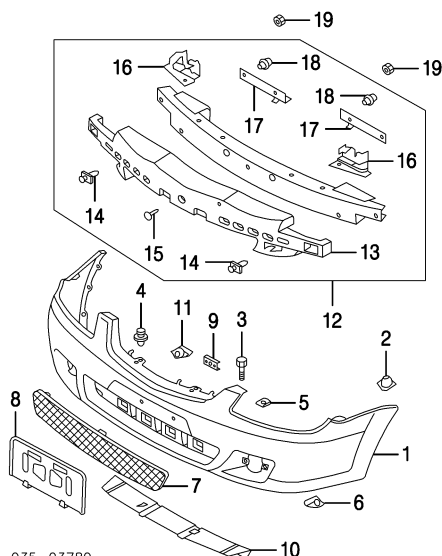

035-03789

- 1 Cover, Front (P) BN5V-50-031B-AA
(P) Paint to Match
- 2 Grommet (2/Side) R/L B30D-50-0Z5
- 3 Bolt, Upper R/L 9YA5-90-602
- 4 Fastener, Cover R/L GD7A-50-EA1
- 5 Nut, Upper Clip R/L 9YB3-10-603
- 6 Nut, Lower Clip (6) B455-56-135
- 7 Grille, Front Cover B30P-50-1T1A
- 8 Brkt, License Plate LC62-50-170C
- 9 Retainer, License Brkt J001-50-171
- 10 Dam, Air B30P-51-9K1B

SEDAN 2001-03 DX, ES, LX, SE MODEL

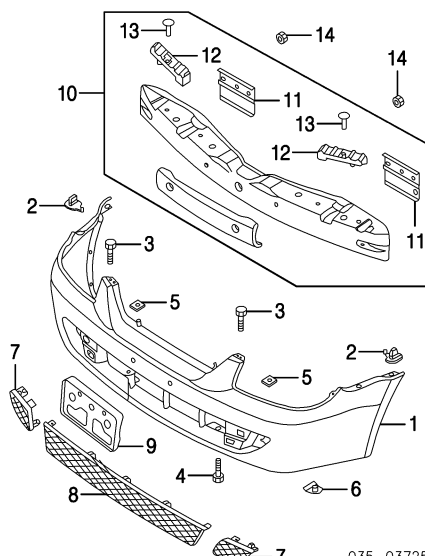


035-03725

- 1 Cover, Front (P) BL8D-50-031C-AA
(P) Paint to Match
- 2 Grommet (2/Side) R/L B30D-50-0Z5
- 3 Bolt, Upper R/L 9YA5-90-602
- 4 Bolt, Lower R/L 9YA1-10-607
- 5 Nut, Upper Clip R/L 9YB3-10-603
- 6 Nut, Lower Clip (6) B455-56-135
- 7 Cover, Lamp R BL8D-50-C11A

GRILLE

HATCHBACK


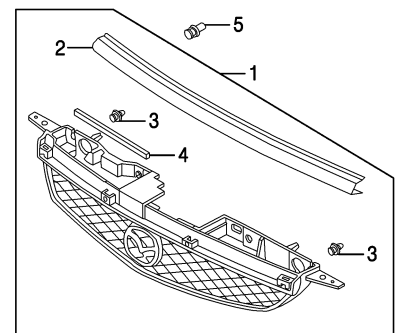


035-03790

- 1 Grille Assy B30P-50-710
- 2 Moulding, Upper† B30P-50-711
- 3 Clip, Grille† R/L B25F-50-714
- 4 Gasket, Grille† B25D-50-7M3
†Included w/Grille Assy
- 5 Fastener, Grille (4) GD7A-50-EA1

MAZDA PROTEGE/PROTEGE5 1999-03


SEDAN 1999-00

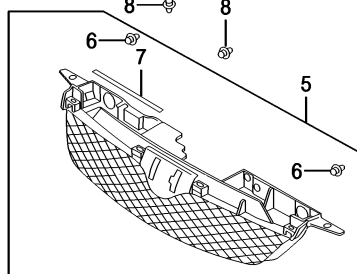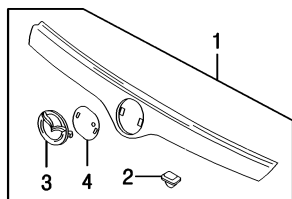

035-03203

- 1 Moulding Assy, Grille BJOE-50-710B
- 2 Clip, Moulding (4) B25D-50-714
- 3 Emblem (Adhesive) GE4T-51-731
- 4 Gasket, Emblem BJOE-51-732
- 5 Grille Assy B25D-50-71YB
- 6 Clip, Grille (2) B25F-50-714
- 7 Gasket, Grille B25D-50-7M3
- 8 Fastener, Grille (5) GD7A-50-EA1

SEDAN 2001-03 DX, ES, LX, SE MODEL

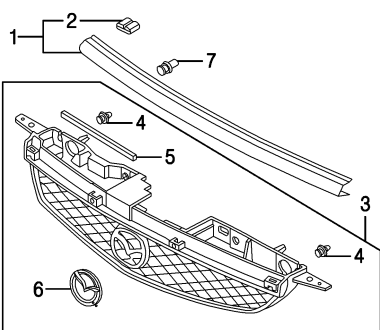


035-03726

- 1 Moulding Assy, Grille (P)
w/Black Bar BLD8-50-710
w/o Black Bar B30D-50-710
(P) Paint to Match
- 2 Gasket, Grille B30D-50-7M3
- 3 Grille Assy BLD8-50-71Y
- 4 Clip, Grille (2) B25F-50-714
- 5 Gasket, Grille B25D-50-7M3
- 6 Emblem (Adhesive) 541A-51-731A
- 7 Fastener, Grille (2) GD7A-50-EA1

SEDAN 2001-03 MP3, MAZDASPEED MODEL

Illustration Located in Next Column

- 1 Grille Assy
MAZDASPEED Model
Black Mica (Code 16W) BP7H-50-710-08
Blazing Yellow (Code 26S) BP7H-50-710-76
Grace Green (Code 18J) BP7H-50-710-46
Garnet Red (Code 25F) BP7H-50-710-21
Orient Green (Code 23G) BP7H-50-710-91
Pure White (Code A3D) BP7H-50-710-09
Sparkling Silver (Code 24E) BP7H-50-710-28

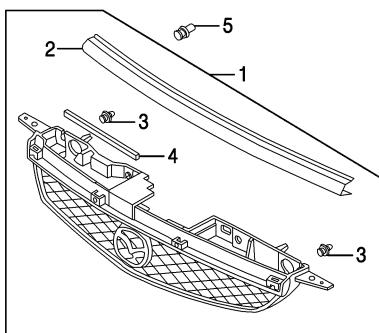


035-03790

- Spicy Orange (Code 25T) BP7H-50-710-35
- Starry Blue (Code 24A) BP7H-50-710-52
- Sunburst Yellow (Code HZ) BP7H-50-710-HZ
- Sunlight Silver (Code 22V) BP7H-50-710-67
- Titanium Gray (Code 25G) BP7H-50-710-66
- B30P-50-710
- MP3 Model
- 2 Moulding, Upper
MAZDASPEED Model
Black Mica (Code 16W) BP7H-50-711-08
- Blazing Yellow (Code 26S) BP7H-50-711-76
- Galaxy Gold (Code 23F) BP7H-50-711-27
- Grace Green (Code 18J) BP7H-50-711-46
- Garnet Red (Code 25F) BP7H-50-711-21
- Orient Green (Code 23G) BP7H-50-711-91
- Pure White (Code A3D) BP7H-50-711-09
- Sparkling Silver (Code 24E) BP7H-50-711-28
- Spicy Orange (Code 25T) BP7H-50-711-35
- Starry Blue (Code 24A) BP7H-50-711-52
- Sunburst Yellow (Code HZ) BP7H-50-711-HZ
- Sunlight Silver (Code 22V) BP7H-50-711-67
- Titanium Gray (Code 25G) BP7H-50-711-66
- B30P-50-711
- 3 Clip, Grille R/L B25F-50-714
- 4 Gasket, Grille R/L B25D-50-7M3
- 5 Fastener, Grille (4) GD7A-50-EA1

FRONT LAMPS


HEADLAMP SEDAN 1999-00

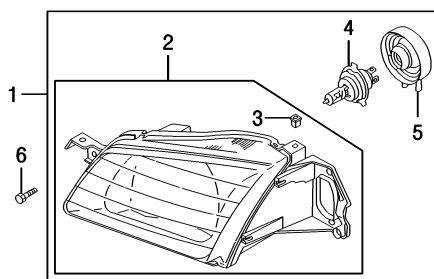

035-03204

- 1 Headlamp Assy R BJOE-51-030A
L BJOE-51-040A
- 2 Lens/Body Assy L BJOE-51-0K0
- 3 Grommet (a) R/L BJOE-51-0L0
- 4 Bulb, Headlamp R/L 9991-00-501
- 5 Cover, Bulb (a) Included w/Lens/Body Assy R/L 0000-11-9003
- 6 Screw, Headlamp (3/Side) R/L A065-51-033
- 6 Screw, Headlamp (6/Side) R/L 9991-00-501

PARK/SIGNAL/SIDE MARKER LAMP SEDAN 1999-00

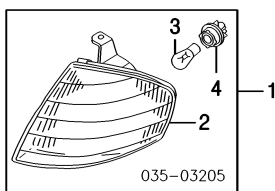


035-03205

- 1 Lamp Assy, Park/Signal/Side Marker R BJOE-51-060B
L BJOE-51-070B
- 2 Lens & Body R BJOE-51-06XB

- 3 Bulb L BJOE-51-07XB
- 4 Socket R/L 0000-11-7528
R/L GA2A-51-064

†Included w/Park/Signal/Side Marker Lamp Assy


COMBINATION LAMP HATCHBACK

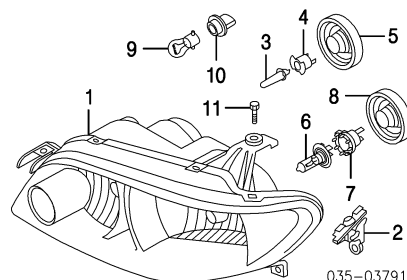

035-03791

- 1 Lens/Body Alum Bezel R BN5V-51-0K0C
L BN5V-51-0L0C
- Metal Coat Bezel R BP4F-51-0K0
L BP4F-51-0L0
- 2 Bracket, Headlamp R B30D-51-0A7A
L B30D-51-0B7A
- 3 Bulb, High Beam R/L 0000-11-9005
- 4 Socket, High Beam R/L B28W-51-0A3
- 5 Cover, High Beam R/L T061-51-0A1
- 6 Bulb, Low Beam R/L 9070-32-550
- 7 Socket, Low Beam R/L B28W-51-0A3
- 8 Cover, Low Beam R/L BN4G-51-0A1
- 9 Bulb, Signal/Park R/L 0000-11-1157-NA
- 10 Socket, Signal/Park R/L BL8D-51-064
- 11 Screw, Headlamp (6/Side) R/L 9GG6-00-616B


COMBINATION LAMP SEDAN 2001-03

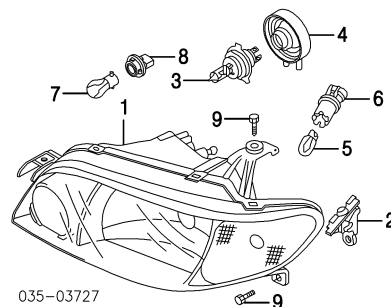

035-03727

- 1 Lens/Body Alum Bezel R BL8D-51-0K0D
L BL8D-51-0L0D
- Metal Coat Bezel R BL8E-51-0K0D
L BL8E-51-0L0D
- 2 Bracket, Headlamp R B30D-51-0A7A
L B30D-51-0B7A
- 3 Bulb, Headlamp R/L 0000-11-9003
- 4 Cover, Bulb R/L A065-51-033
- 5 Bulb, Side Marker R/L 0000-11-0194
- 6 Socket, Side Marker R/L B25D-51-0H8
- 7 Bulb, DRL R/L 0000-11-1157-NA
- 8 Socket, DRL R/L BL8D-51-064
- 9 Screw, Headlamp (6/Side) R/L 9GG6-00-616B

SIDE MARKER LAMP

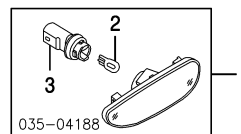

035-04188


- 1 Lamp Assy, Side Marker R BN5V-51-5E0B
L BN5V-51-5F0B
- 2 Bulb, Side Marker R/L 0000-11-0168
- 3 Socket, Bulb R/L H380-51-5E2

†Included w/Side Marker Lamp Assy

MAZDA PROTEGE/PROTEGE5 1999-03


FRONT LAMPS Cont'd

SIDE REPEATER LAMP

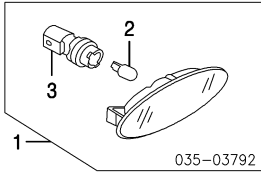


- 1 Lamp Assy, Side Repeater
w/MP3 Model R/L B01W-51-120
w/o MP3 Model R/L B33P-51-120A
- 2 Bulb
w/MP3 Model R/L 0000-11-0194
w/o MP3 Model R/L 9970-16-050Y
- 3 Socket, Bulb R/L B01W-51-124
*Included w/Side Repeater Lamp Assy

FOG LAMP HATCHBACK

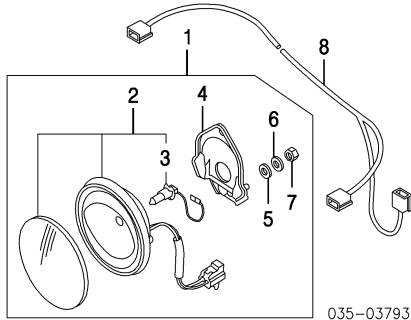

- 1 Lamp Assy, Fog R/L BN5V-51-680
- 2 Lens/Body Assy R/L BN5V-51-68X
- 3 Bulb (a) R/L 0000-11-0H3
(a) Included w/Lens/Body Assy
- 4 Bracket, Lamp R/L B30P-51-688B
- 5 Washer, Front R/L B28V-51-657
- 6 Washer, Rear R/L B28V-51-697
- 7 Nut, Lamp R/L B28V-51-6H4
*Included w/Fog Lamp Assy
- 8 Harness, Fog Lamp B30P-51-688B

FOG LAMP SEDAN DX, ES, LX, SE MODEL

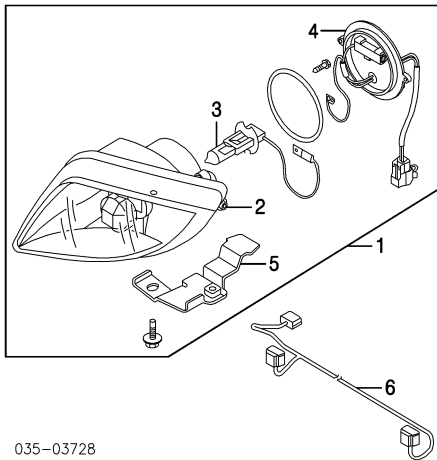


035-03728

- Lamp Kit, Fog Dealer Installed 0000-8Z-C01A
- 1 Lamp Assy, Fog Factory Installed R TC86-51-680
L TC86-51-690
- 2 Lens & Body Dealer Installed R/L 0000-8Z-A24-5
Factory Installed (a) R TC86-51-68X
L TC86-51-69X
*Included w/Fog Lamp Kit
- 3 Bulb (a) Factory Installed R/L 0000-11-0H3
- 4 Cover, Bulb (a)

- Factory Installed R/L T060-51-6G4
- 5 Bracket, Lamp (a) Factory Installed R/L T060-51-684
(a) Included w/Fog Lamp Assy
- 6 Harness, Fog Lamp Dealer Installed* Serviced w/Fog Lamp Assy
Factory Installed BL8D-51-688B
*Included w/Fog Lamp Kit


FOG LAMP SEDAN MP3, MAZDASPEED MODEL

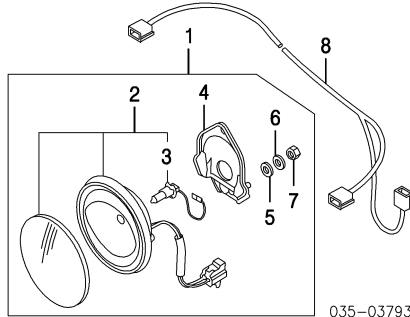

035-03793

- 1 Lamp Assy, Fog R/L BN5V-51-680
- 2 Lens/Body Assy R/L BN5V-51-68X
- 3 Bulb (a) R/L 0000-11-0H3
(a) Included w/Lens/Body Assy
- 4 Bracket, Lamp R/L B30P-51-688B
- 5 Washer, Front R/L B28V-51-657
- 6 Washer, Rear R/L B28V-51-697
- 7 Nut, Lamp R/L B28V-51-6H4
*Included w/Fog Lamp Assy
- 8 Harness, Fog Lamp B30P-51-688B

HOOD

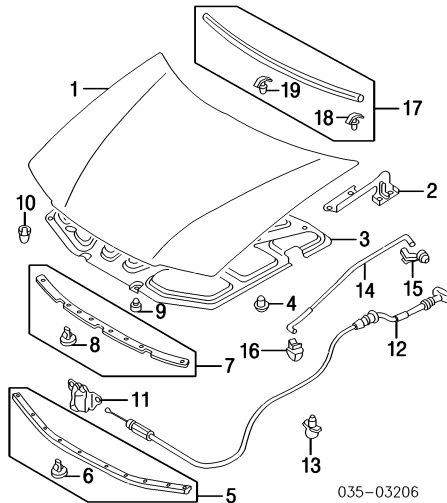


035-03206

- 1 Panel, Hood 99-00 B25D-52-310H
01-03 B30D-52-310C
R B25D-52-410A
L B25D-52-420A
- 2 Hinge, Hood B25N-56-681K
GA2A-56-694
- 3 Insulator, Hood 99-00 B25D-56-770A
01-03 B30D-56-770A
- 4 Fastener, Insulator (14) B01A-56-741
*Included w/Front Weatherstrip Assy
- 5 Weatherstrip Assy, Front B25D-56-750B
UB39-56-741A
*Included w/Front Hood Seal Assy
- 6 Fastener, W/Strip (12) R/L H043-56-786
R/L BC1M-56-786
- 7 Seal Assy, Front Hood 99-00 BJ0E-56-620A
01-03 BL4C-56-620
B25D-56-720
- 8 Fastener, Seal (9) D001-56-731
B25D-56-651
B092-52-518
- 9 Cushion, Outer Hood G030-56-693A
- 10 Cushion, Inner Hood 99-00 B25D-56-760
01-03 B30D-56-760
- 11 Latch, Hood G031-56-762
T001-56-742
- 12 Cable, Hood Release
- 13 Clip, Cable (2)
- 14 Rod, Hood Prop
- 15 Bushing, Rod Pivot
- 16 Holder, Rod
- 17 Weatherstrip Assy, Rear 99-00 B25D-56-760
01-03 B30D-56-760
- 18 Fastener, Outer W/Strip (2) G031-56-762
- 19 Fastener, Inner W/Strip (7) T001-56-742
*Included w/Rear Weatherstrip Assy

Nozzle, Washer-See Windshield Section

COOLING

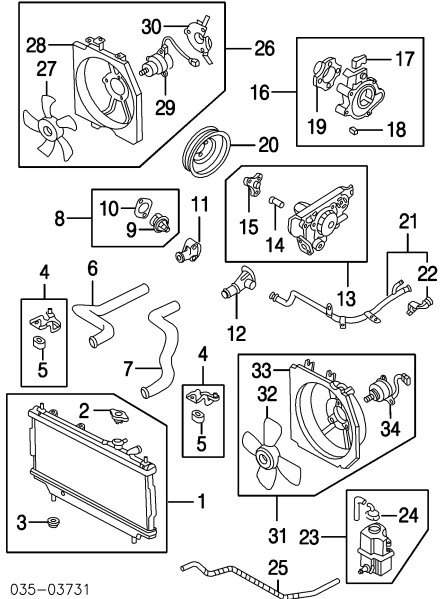

035-03731

- 1 Radiator Assy 1999-00 Man Trans ZL01-15-200A
Auto Trans ZL04-15-200B
2001-03 1.6L Eng
Man Trans ZL33-15-200C
w/A/C B35S-15-200B
Auto Trans FS8M-15-200B
w/A/C FS7P-15-200B
2.0L Eng
Man Trans ZM39-15-200C
w/A/C ZM43-15-200C
Auto Trans FS8M-15-200B
w/A/C FS7P-15-200B
- 2 Cap, Radiator Man Trans WL21-15-205
Auto Trans KL01-15-205
- 3 Mount, Lower Rad 1999-00 Man Trans R/L ZL01-15-202
Auto Trans R/L ZL01-15-202
2001-03 w/A/C R/L K802-15-202
w/o A/C R/L RF2L-15-202
*Included w/Radiator Assy
- 4 Bracket Assy, Upper Radiator w/Turbo R RF15-15-240
L N.A.
w/o Turbo R ZL01-15-240A
L ZL01-15-250
R/L B6BF-15-242A
*Included w/Upper Radiator Bracket Assy
- 5 Mount, Upper Rad 1999-00 1.6L Eng 8ABE-15-171
1.8L Eng-Serviced by Components
2001-03 1.8L, 2.0L Eng-Serviced by Components
- 6 Hose, Upper Rad 1.6L Eng ZL01-15-186A
1.8L Eng FP47-15-186C
2.0L Eng FSAX-15-186
w/Turbo FP47-15-186C
w/o Turbo
- 7 Hose, Lower Rad 1.6L Eng ZL01-15-185A
1.8L, 2.0L Eng FP47-15-185C
- 8 Thermostat Assy 1999-00 1.6L Eng 8ABE-15-171
1.8L Eng-Serviced by Components
2001-03 1.8L, 2.0L Eng-Serviced by Components
- 9 Thermostat 1999-00 1.6L Eng* Serviced w/Thermostat Assy
1.8L Eng KL01-15-171A-9U
2001-03 1.6L Eng BP6F-15-171
2.0L Eng KL01-15-171A-9U
- 10 Gasket, Thermostat 1.6L Eng B621-15-173
1.8L, 2.0L Eng FS02-15-173
*Included w/Thermostat Assy
- 11 Cover, Thermostat 1.6L Eng B6BF-15-172
1.8L, 2.0L Eng FP47-15-172
- 12 Inlet, Water Pump 1.6L Eng B6BF-15-161
- 13 Pump Assy, Water 1.6L Eng ZL01-15-010A
- 14 Pin, Set

MAZDA PROTEGE/PROTEGE5 1999-03

1.6L Eng	F801-15-713
15 Boss, Pulley	
1.6L Eng	E301-15-117
‡Included w/Water Pump Assy	
16 Pump Assy, Water	
1.8L Eng	FP01-15-010G
2.0L Eng	8AG9-15-010
17 Seal, Upper	
1.8L Eng	FP01-10-545
2.0L Eng	FS01-10-545
18 Seal, Lower	
1.8L, 2.0L Eng	FS01-10-546A
19 Boss, Pulley	
1.8L, 2.0L Eng	FS01-15-117A
‡Included w/Water Pump Assy	
20 Pulley, Water Pump	
1.6L Eng	B3C7-15-131
1.8L, 2.0L Eng	FS01-15-131
21 Pipe Assy, By-Pass	
1.6L Eng	ZL01-15-280A
1.8L Eng	FP47-15-280B
2.0L Eng	
w/Turbo	FSM3-15-190C
w/o Turbo	FSM4-15-290B
22 Clip, By-Pass Pipe	
1.6L Eng	B69F-15-286
1.8L Eng	FP47-15-285
2.0L Eng	FP01-15-285
‡Included w/By-Pass Pipe Assy	
23 Tank Assy, Coolant	
Asmo Brand	B6BF-15-350B
Gendai Gousei Brand	ZL01-15-350A
24 Cap, Coolant Tank	
Asmo Brand	B6BF-15-355A
Gendai Gousei Brand	ZL01-15-355A
‡Included w/Coolant Tank Assy	
25 Hose, Coolant Tank	
w/Turbo	FSAX-15-381
w/o Turbo	ZL01-15-381
26 Fan Assy, Right w/ A/C	
1999-00	B595-15-035C
2001-02	FS2V-15-035F
2003	
w/Turbo	FSAX-15-035C
w/o Turbo	FS2V-15-035F
27 Blade, Fan	
w/ A/C	
1999-00	B595-15-140
2001-02	RF1S-15-140
2003	
w/Turbo	RF1A-15-140
w/o Turbo	RF1S-15-140
28 Shroud, Fan	
w/ A/C	
1999-00	B595-15-210A
2001-02	ZM05-15-210A
2003	
w/Turbo	RF1T-15-210A
w/o Turbo	ZM05-15-210A
29 Motor, Fan	
w/ A/C	
1999-00	B595-15-150A
2001-02	RF1S-15-150
2003	
w/Turbo	RF1W-15-150
w/o Turbo	RF1S-15-150
30 Cover, Fan	
w/ A/C	99-00 B595-15-028A
	01-03 FP55-15-028B
‡Included w/Right Fan Assy	
31 Fan Assy, Left w/Turbo	FSAX-15-025
w/o Turbo	
Man Trans	ZL01-15-025B
Auto Trans	ZL04-15-025C
32 Blade, Fan	
w/Turbo	FP59-15-140A
w/o Turbo	
Man Trans	E358-15-140
Auto Trans	ZL04-15-140
33 Shroud, Fan	
w/Turbo	RF1T-15-210A
w/o Turbo	
Man Trans	ZL01-15-210B
Auto Trans	ZL04-15-210B
34 Motor, Fan	
w/Turbo	RF1V-15-150
w/o Turbo	
Man Trans	ZL01-15-150
Auto Trans	ZL04-15-150
‡Included w/Left Fan Assy	


A/C REFRIGERANT CAPACITIES

A/C R-134a Refrigerant Capacity
1999-03: 21.2 Ozs (1.32 Lbs)

A/C /HEATER/VENTILATION


Illustration Located in Next Column

1 Condenser	
Dealer Installed	B25F-61-480B
Factory Installed	
1999-01	BJ0E-61-480A

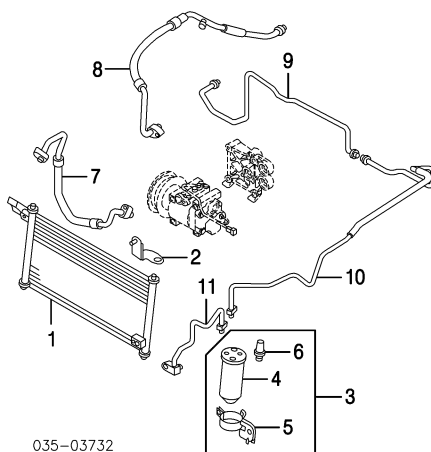

035-03732


2002-03		
w/Turbo		BP7H-61-480A
w/o Turbo		
Hatchback		B25F-61-480B
Sedan		B25P-61-480A
2 Brkt, Condenser		
1999-00	R	BJ0E-61-483
	L	BJ0F-61-483
2001-03-Serviced w/Condenser		
3 Receiver/Drier Assy		
1999		
To 3-1-99		BJ0E-61-500A
From 3-1-99		BJ0E-61-500B
2000		BJ0E-61-500B
2001-02		BJ0M-61-500
2003		
w/Turbo		BP7H-61-500
w/o Turbo		BJ0M-61-500
4 Receiver/Drier		
1999-00		BJ0E-61-501A
2001-03-Serviced w/Receiver/Drier Assy		
5 Bracket, Receiver/Drier		B25F-61-502A
6 Switch, Pressure		99-00 BJ0E-61-503
		01-03 HG54-61-503
‡Included w/Receiver/Drier Assy		
7 Hose, High Pressure		
1999-00		
1.6L Eng		BJ0E-61-461A
1.8L Eng		BJ1H-61-461A
2001-03		
1.6L Eng		BJ0M-61-461A
2.0L Eng		BJ1P-61-461A
8 Hose, Low Pressure		
1999		
1.6L Eng		BJ0E-61-462B
1.8L Eng		
To 3-1-99		BJ1H-61-462C
From 3-1-99		BJ1H-61-462D
2000		
1.6L Eng		BJ0E-61-462B
1.8L Eng		BJ1H-61-462D
2001-03		
1.6L Eng		BJ0M-61-462D
2.0L Eng		BJ1P-61-462E
9 Pipe, Evaporator		
99-00		BJ0E-61-466D
01-03		BL4C-61-466A
10 Pipe, Receiver/Drier		
1999-00		BJ0E-61-465C
2001-02		BJ3D-61-465E
2003		
w/Turbo		BP7H-61-465
w/o Turbo		BJ3D-61-465F
11 Pipe, Condenser		
1999-00		BJ0E-61-464A
2001-03		
Dealer Installed		B25F-61-464
Factory Installed-Serviced w/Condenser		

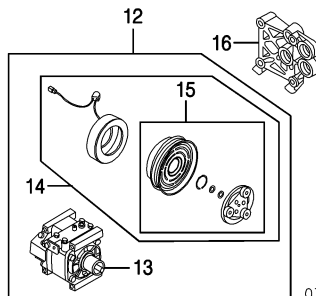

035-03733

12 Compressor Assy	
1999-00	
1.6L Eng	BJ0E-61-450
1.8L Eng	BJ1H-61-450

2001-02		
1.6L Eng		B25F-61-450B
2.0L Eng		B26K-61-450D
2003		
1.6L Eng		B25F-61-450B
2.0L Eng		
w/Turbo		C100-61-450A
w/o Turbo		B26K-61-450D
13 Compressor		
1999-00		BJ0E-61-K00
2001-03		
1.6L Eng		B25F-61-K00A
2.0L Eng		C100-61-K00
14 Clutch Assy, Magnet		
1999-00		
1.6L Eng		BJ0E-61-L13A
1.8L Eng		BJ1H-61-L13A
2001-03		
1.6L Eng		B26K-61-L30
2.0L Eng		D202-61-L30
15 Pulley, Clutch (a)		
1999-00		
1.6L Eng		BJ0E-61-L11
1.8L Eng		BJ1H-61-L11
2001-02		
1.6L Eng		B22B-61-L20
2.0L Eng		GE9E-61-L20
2003		
1.6L Eng		B22B-61-L20
2.0L Eng		
w/Turbo		GE4T-61-L20
w/o Turbo		GE9E-61-L20
‡Included w/Compressor Assy		
(a) Included w/Magnet Clutch Assy		
16 Bracket, Compressor		
1.6L Eng		ZM04-15-810
1.8L, 2.0L Eng		FSJ3-15-811A

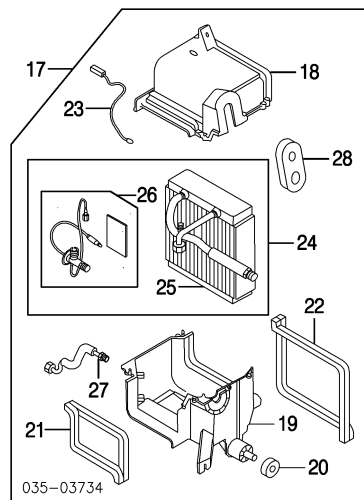


17 Case Assy, Evaporator		
99-00		BJ0E-61-520E
01-03		BJ0M-61-520
18 Case, Upper Evap		
99-00		BJ0E-61-J01
01-03		GE4T-61-J01
19 Case, Lower Evap		
99-00		BJ0E-61-J02A
01-03		GE4T-61-J02
20 Grommet, Evap Case Mtg		
1999-00		BC1M-61-J06B
2001-03-Serviced w/Evaporator Assy		
21 Seal, Front Evap		
99-00		BJ0E-61-J04
01-03		GA5R-61-J04
22 Seal, Rear Evap		
99-00		BJ0E-61-J05
01-03		GE4T-61-J05
23 Thermostat, A/C		
99-00		BJ0E-61-J20
01-03		GE4T-61-J25
24 Core Assy, Evaporator		
1999-00-Serviced by Components		
2001-03		BJ0M-61-J10
25 Core, Evaporator (a)		
1999-00		BJ0E-61-J10A
2001-03-Serviced w/Evaporator Core Assy		
26 Valve, Expansion		
1999-00		NA75-61-J14
2001-03 (a)		GE7T-61-J14A
(a) Included w/Evaporator Core Assy		
27 Pipe, Evap Core		
1999-00		BJ0E-61-J15A
2001-03-Serviced w/Evaporator Core Assy		
28 Seal, Evap Core		
99-00		BJ0E-61-J12B
01-03		GE4T-61-J12
‡Included w/Evaporator Case Assy		

Illustration Located in Next Column

29 Heater Assy	
Man Trans	
w/Rear Heater Duct	BJ0F-61-130F


MAZDA PROTEGE/PROTEGE5 1999-03

A/C /HEATER/VENTILATION Cont'd

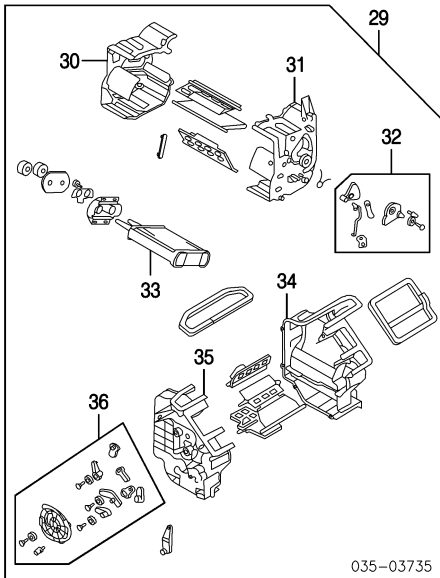

035-03735

- w/o Rear Heater Duct BJOE-61-130F
- Auto Trans w/Rear Heater Duct BJOK-61-130C
- w/o Rear Heater Duct BJQJ-61-130C
- 30 Case, Front Heater† BJOE-61-A02
- 31 Case, Rear Heater† BJOE-61-A01
- 32 Link Kit, Temp† GE4T-61-A20
- 33 Core, Heater† 99-00 B25D-61-A10
- 01-03 BJOE-61-A10
- 34 Case, Right Mode† w/Rear Heater Duct BJOE-61-A03
- w/o Rear Heater Duct BJOE-61-A03
- 35 Case, Left Mode† w/Rear Heater Duct BJOE-61-A04
- w/o Rear Heater Duct BJOE-61-A04
- 36 Link Kit, Mode 1999-01† GE6T-61-A30
- 2002 To 1-1-01 GE6T-61-A30
- From 1-1-01 GG4R-61-A30
- 2003 GG4R-61-A30
- †Included w/Heater Assy

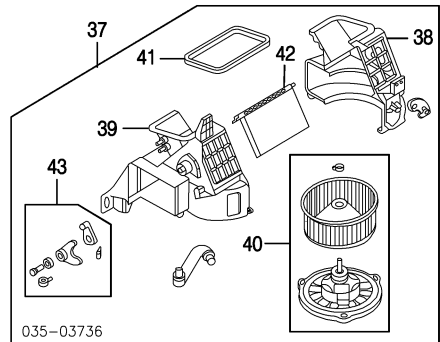


035-03736

- 37 Blower Assy 99-00 BJOE-61-140B
- 01-03 BL4C-61-140
- 38 Case, Right Blower† BJOE-61-B02
- 39 Case, Left Blower† BL4C-61-B01
- 40 Fan & Motor, Blower† CB07-61-B10A
- 41 Seal, Blower† GA5R-61-B04
- 42 Door, Blower† GE4T-61-B05
- 43 Link Kit, Recycle/Fresh† 99-00 GE4T-61-B20
- 01-03 GE4V-61-B20
- †Included w/Blower Assy

FRONT FENDER

Illustration Located in Next Column

- 1 Fender 1999-00 R BJQJ-52-111A
- L BJQJ-52-211A
- 2001 R BL8D-52-111B
- L BL8D-52-211B

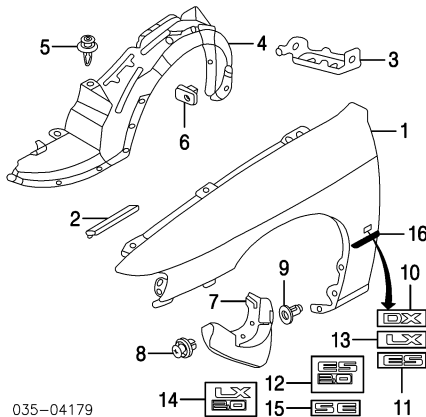


035-04179

- 2002-03 Hatchback R BN5V-52-111
- L BN5V-52-211
- Sedan w/Side Repeater Lamps R B30D-52-111B
- L B30D-52-211B
- w/o Side Repeater Lamps R BL8D-52-111B
- L BL8D-52-211B
- 2 Tape, Seal R/L GA2A-56-092
- 3 Stay, Fender R B25D-52-140A
- L B25D-52-240A
- 4 Liner, Fender 1999-00 Man Trans R B25D-56-131D
- L B25D-56-141D
- Auto Trans R B25E-56-130C
- L B25E-56-140A
- 2001 R B30D-56-131A
- L B30D-56-141A
- 2002-03 Hatchback R B30P-56-130A
- L B30P-56-140A
- Sedan w/Side Repeater Lamps R B30P-56-130A
- L B30P-56-140A
- w/o Side Repeater Lamps R B30D-56-131A
- L B30D-56-141A
- 5 Fastener, Liner (12/Side) Front R/L NA01-56-145
- Rear R/L BC1D-56-145
- 6 Grommet, Liner 99-00 R/L B01A-51-832
- 01-03 R/L B25D-51-832
- R BJOE-51-840
- L BJOE-51-850
- 7 Mudguard, Front R/L B455-56-143
- 1999-00 R/L B092-51-833
- 2001-03 R/L B455-56-145
- 9 Clip, Mud Flap (2/Side) Nameplate, Fender (Adhesive) "DX" R/L BJOE-51-761A-80
- Gray Metallic R/L BJOE-51-761A-85
- Silver Metallic "ES" R/L BJON-51-761A-80
- Gray Metallic R/L BJON-51-761A-85
- Silver Metallic "ES 2.0" R/L BL8E-51-761-80
- Gray Metallic R/L BL8E-51-761-85
- Silver Metallic "LX" R/L BJOE-51-761A-80
- Gray Metallic R/L BJOE-51-761A-85
- Silver Metallic "LX 2.0" R/L BL8D-51-761-80
- Gray Metallic R/L BL8D-51-761-85
- Silver Metallic "SE" R/L N.A.
- Gray Metallic R/L N.A.
- Silver Metallic 16 Moulding, Side (Adhesive) Black R BJOE-50-681
- L BJOE-50-691
- Body Color Aroma Red (Code 18U) 99-00 RBJOE-50-681-13
- L BJOF-50-691-13
- Black Mica (Code 16W) R BJOF-50-681-08
- L BJOF-50-691-08
- Blazing Yellow (Code 26S) 01-03 R BJOF-50-681-76
- L BJOF-50-691-76
- Champagne Silver (Code 4F) 99-00 R BJOF-50-681-4F
- L BJOF-50-691-4F
- Chaste White (Code PT) 99-01 R BJOF-50-681-PT
- L BJOF-50-691-PT
- Classic Red (Code A3E) 99-01 R BJOF-50-681-SU
- L BJOF-50-691-SU
- Galaxy Gold (Code 23F) 01-03 R BJOF-50-681-27
- L BJOF-50-691-27
- Grace Green (Code 18J) R BJOF-50-681-46
- L BJOF-50-691-46
- Garnet Red (Code 25F) 01-03 RBJOE-50-681-21
- L BJOF-50-691-21
- Highlight Silver (Code 18G) 99-00 R BJOF-50-681-92
- L BJOF-50-691-92
- Moonlight Gray (Code 12M) 99-00 R BJOF-50-681-25
- L BJOF-50-691-25
- Orient Green (Code 23G) 01-03 R BJOF-50-681-91


- Passion Red (Code 22K) L BJOF-50-691-91
- R BJOF-50-681-15
- Pure White (Code A3D) 01-03 RBJOE-50-681-09
- L BJOF-50-691-15
- Sparkling Silver (Code 24E) R BJOF-50-681-28
- L BJOF-50-691-28
- Spicy Orange (Code 25T) R BJOF-50-681-35
- L BJOF-50-691-35
- Starry Blue (Code 24A) 02-03 R BJOF-50-681-52
- L BJOF-50-691-52
- Sunburst Yellow (Code HZ) 02-03 R BJOF-50-681-HZ
- L BJOF-50-691-HZ
- Sunlight Silver (Code 22V) 01-03 R BJOF-50-681-67
- L BJOF-50-691-67
- Supreme Blue (Code 22A) R BJOF-50-681-50
- L BJOF-50-691-50
- Titanium Gray (Code 25G) R BJOF-50-681-66
- L BJOF-50-691-66
- Twilight Blue (Code 12K) 99-00 R BJOF-50-681-57
- L BJOF-50-691-57

UNDERHOOD DIMENSIONS

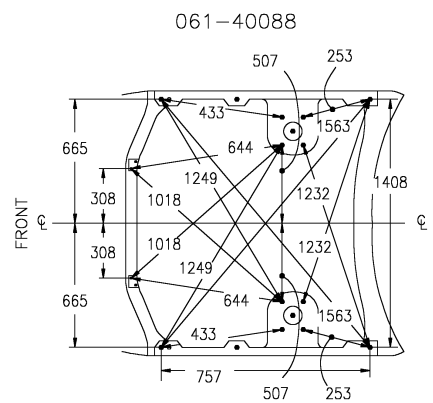

FRONT INNER STRUCTURE


FRONT

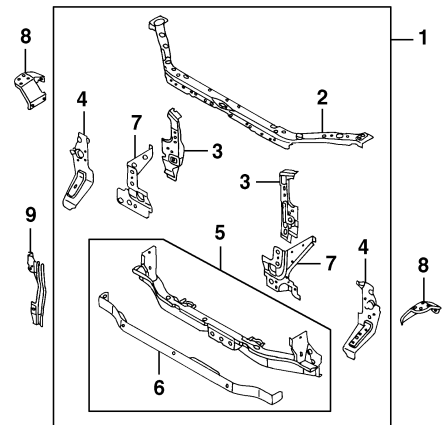

035-03212


- 1 Support Assy, Radiator 99-00 BJQJ-53-100F
- 01-03 BL2A-53-100C
- 2 Bar, Upper Tie† BJQJ-53-150D
- 3 Panel, Side† R BJQJ-53-130
- L BJQJ-54-130
- 4 Panel, Support† 99-00 R BJQJ-53-120B
- L BJQJ-54-120B
- 01-03 R BL2A-53-120
- L BL2A-54-120
- 5 Bar Assy, Lower Tie† B25D-53-16XA
- 6 Crossmember† (a) B25D-53-160
- (a) Included w/Lower Tie Bar Assy
- 7 Brkt, Lower Tie Bar† R BJQJ-53-1F0B
- L BJQJ-54-1F0
- †Included w/Radiator Support Assy
- 8 Bracket, Bumper R B25D-52-124A
- L B25D-52-125B
- 9 Support, Hood Latch B25D-52-15YD

MAZDA PROTEGE/PROTEGE5 1999-03

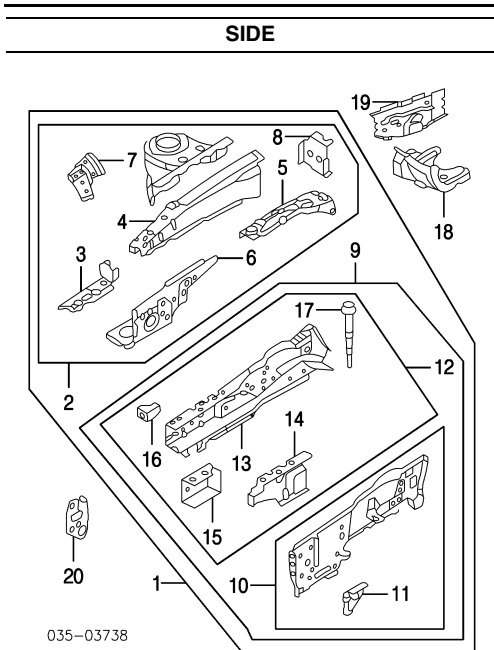


035-03738

- | | |
|--------------------------------------|----------------------------------|
| 1 Apron Assy | R B2YD-53-20YB
L B2YD-54-20YD |
| 2 Panel Assy, Apron | R B2YD-53-21YB
L B2YD-54-21YE |
| 3 Reinf, Upper Front (a) | R BJ0J-53-272A
L BJ0J-54-272A |
| 4 Reinf, Upper Rear (a) | R BJ0J-53-260
L BJ0J-54-260 |
| 1999-00 | R BL2A-53-260
L BL2A-54-260 |
| 2001-03 | R GE4T-53-270B
L GE4T-54-270E |
| 5 Reinf, Lower (a) | R BJ0J-53-220B
L BJ0J-54-220C |
| 6 Panel, Front Apron (a) | R BL2A-53-22X
L BL2A-54-263 |
| 7 Reinf, Eng Mtg (a) | R B25D-53-263
L B25D-54-263 |
| 8 Gusset, Apron (a) | |
| (a) Included w/Apron Panel Assy | |
| 9 Frame Assy, Side | R B25H-53-31XE
L B25H-54-31XC |
| 10 Frame Assy, Outer Side (a) | R B25D-53-320A
L B25D-54-320A |
| 11 Reinf, Bumper (a) (b) | R B25D-53-336
L B25D-54-336 |
| (b) Included w/Outer Side Frame Assy | |
| 12 Frame Assy, Inner Side (a) | R B25H-53-310D
L B25H-54-310B |
| 13 Frame, Inr (a) (b) | R B25D-53-311A
L B25D-54-311B |
| 14 Reinf, Otr Front (a) (b) | R B25D-53-35Y
L B25D-54-35Y |
| 15 Reinf, Inr Front Inr (a) (b) | R B25D-53-351
L B25D-54-351A |
| 16 Brkt, Bumper (a) (b) | R B25D-53-335A
L B25D-54-335A |
| 17 Bolt (a) (b) | R/L B25D-53-317 |
| (a) Included w/Apron Assy | |
| (a) Included w/Side Frame Assy | |
| (b) Included w/Inner Side Frame Assy | |
| 18 Extension, Rear | R GA5R-53-390F
L GA5R-54-390F |
| 19 Reinf, Side Cowl Panel | R B25D-53-281
L B25D-54-281 |
| 20 Hook, Tie-Down | R/L B25D-53-361A |

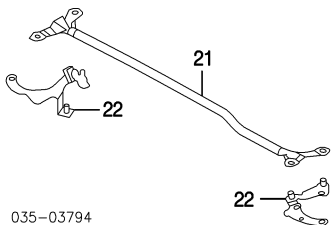

035-03794

- | | |
|--------------------|--|
| 21 Bar, Strut | ES Model B28V-56-49XE
MAZDASPEED Model BN7H-56-49X
MP3 Model BP7H-56-49X |
| 22 Stay, Strut Bar | ES, MAZDASPEED, MP3 Model R BN5V-56-5CX
L B28V-56-5DX |

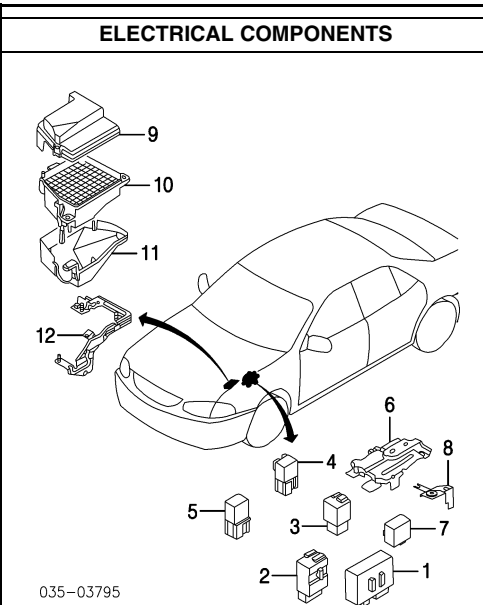


035-03795

- | | |
|---------------------------------|--|
| 1 Control Unit, DRL | Canada N.A. |
| 2 Control Unit, Door Lock/Timer | w/Keyless Entry BJ0G-67-830
w/o Keyless Entry BG1P-67-830 |
| 3 Flasher | 99-00 BG1P-66-830A
01-03 LC62-66-830 |
| 4 Relay, Panic | 99-00 B150-67-720
01-03 B150-67-730 |
| 5 Relay, Fog Lamp | 99-00 GE4T-67-9A1 |
| 6 Bracket, Relay | 01-03 BL2A-67-9A1 |
| 7 Cont Unit, Keyless Entry | BJ0E-67-5D2 |
| 8 Bracket, Cont Unit | BJ0E-67-5D8A |
| 9 Cover, Upper Fuse Block | B25D-66-761B |
| 10 Block, Main Fuse | B25D-66-760D |
| 11 Cover, Lower Fuse Block | B25D-66-767 |
| 12 Bracket, Fuse Block | B25D-67-B1X |


ABS/BRAKES

1999 (TO 7-28-99)

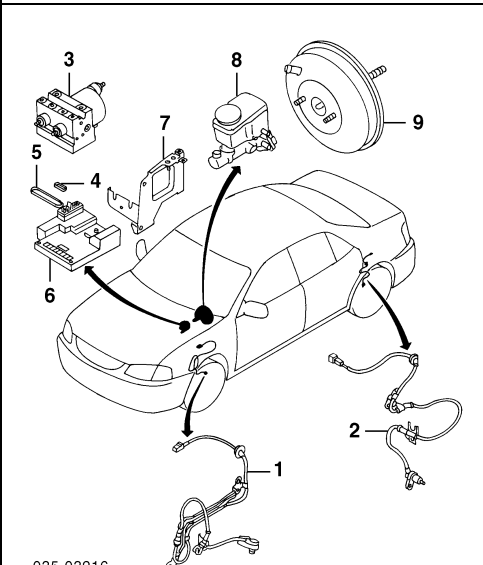

035-03216


- | | |
|-----------------------------|--|
| 1 Sensor, Front ABS | R B25D-43-70XG
L B25D-43-73XG |
| 2 Sensor, Rear ABS | R B25D-43-71YB
L B25D-43-72YB |
| 3 Actuator, Hydraulic | BVDH-43-7A0 |
| 4 Seal, Motor | GE7C-43-7B4 |
| 5 Seal, Ring | GE7C-43-7B5 |
| 6 Control Unit, ABS | B2YD-67-650A |
| 7 Bracket, Actuator/Control | BJ0G-43-310 |
| 8 Cylinder, Brake Master | w/ABS BJ0G-43-40Z
1.6L Eng BJ0P-43-400
1.8L Eng
w/o ABS BJ0E-43-40Z
1.6L Eng BJ0S-43-100
1.8L Eng |
| 9 Booster, Brake | GE4T-43-800 |

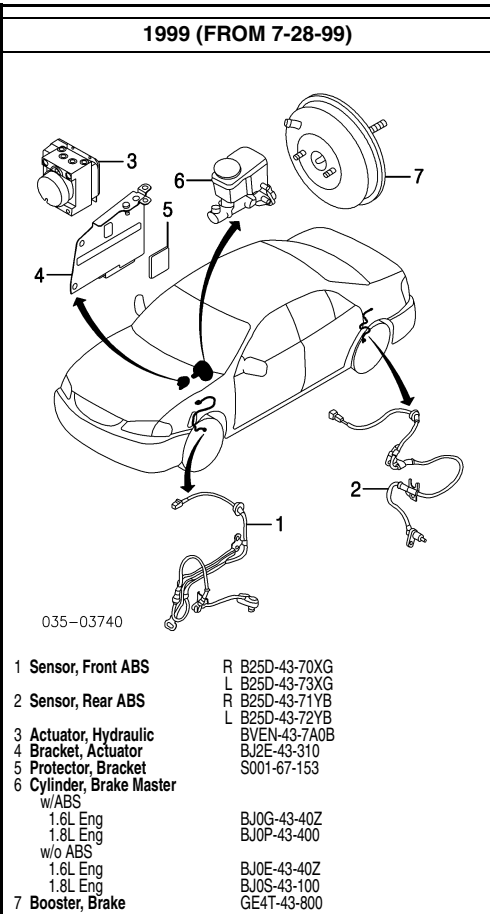

035-03740

- | | |
|--------------------------|--|
| 1 Sensor, Front ABS | R B25D-43-70XG
L B25D-43-73XG |
| 2 Sensor, Rear ABS | R B25D-43-71YB
L B25D-43-72YB |
| 3 Actuator, Hydraulic | BVEN-43-7A0B |
| 4 Bracket, Actuator | BJ2E-43-310 |
| 5 Protector, Bracket | S001-67-153 |
| 6 Cylinder, Brake Master | w/ABS BJ0G-43-40Z
1.6L Eng BJ0P-43-400
1.8L Eng
w/o ABS BJ0E-43-40Z
1.6L Eng BJ0S-43-100
1.8L Eng |
| 7 Booster, Brake | GE4T-43-800 |

2000-03

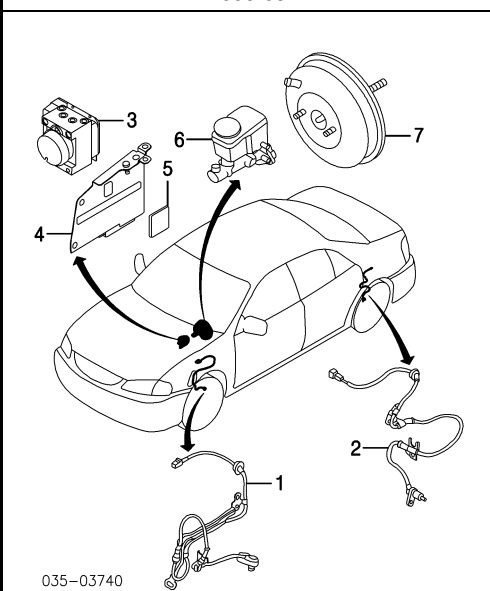


035-03740


- | | |
|--------------------------|---|
| 1 Sensor, Front ABS | R B25D-43-70XG
L B25D-43-73XG |
| 2 Sensor, Rear ABS | 2000 R B25D-43-71YB
L B25D-43-72YB
2001-03 w/Rear Disc Brakes R GE7C-43-71YC
L GE7C-43-72YC
w/o Rear Disc Brakes R B25D-43-71YB
L B25D-43-72YB |
| 3 Actuator, Hydraulic | w/Turbo BPYH-43-7A0A
w/o Turbo BVEN-43-7A0B |
| 4 Bracket, Actuator | BJ2E-43-310 |
| 5 Protector, Bracket | S001-67-153 |
| 6 Cylinder, Brake Master | 2000 w/ABS BJ0G-43-40Z
1.6L Eng BJ0P-43-400
1.8L Eng |


MAZDA PROTEGE/PROTEGE5 1999-03

ABS/BRAKES Cont'd	
2000-03 Cont'd	
w/o ABS	
1.6L Eng	BJ0E-43-40Z
1.8L Eng	BJ0S-43-100
2001-03	
w/ABS	
1.6L Eng	BJ0G-43-40Z
2.0L Eng	BJ3K-43-40Z
w/o ABS	
1.6L Eng	BJ0E-43-40Z
2.0L Eng	BJ4T-43-40Z
7 Booster, Brake	
2000	GE4T-43-800
2001-02	
1.6L Eng	GE4T-43-800
2.0L Eng	BL8M-43-800
2003	
1.6L Eng	GE4T-43-800
2.0L Eng	
w/Turbo	BL4G-43-800
w/o Turbo	BL8M-43-800


AIR BAG SYSTEM

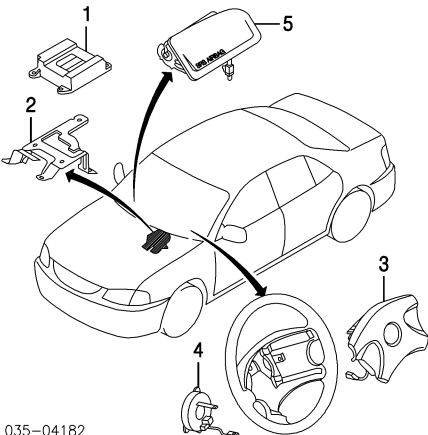
FRONT	
2000-03 Cont'd	
	
035-04182	
1 Control Unit, Diagnosis	
1999-00	
w/Side Air Bags	B25D-57-K30A
w/o Side Air Bags	B25E-57-K30B
2001-03	B30E-57-K30B
2 Bracket, Control Unit	B25D-57-KX0A
3 Module, Driver Air Bag	
1999	
Brown	
To 7-28-99	BJ0E-57-K00-90
From 7-28-99	BJ0F-57-K00B-90
Gray	
To 7-28-99	BJ0E-57-K00-43
From 7-28-99	BJ0F-57-K00B-43
2000	
Brown	BJ0F-57-K00B-90
Gray	BJ0F-57-K00B-43
2001	
DX, ES, LX, SE Model	
Black	BJ0F-57-K00B-00
Brown	BJ0F-57-K00A-22
MP3 Model	B28V-57-K00
2002-03	
Hatchback	
Black	B33M-57-K00-00
Brown	B33M-57-K00-22
Sedan	
Black	02 BJ0F-57-K00B-00
	03 B33M-57-K00-00
Brown	02 BJ0F-57-K00A-22
	03 B33M-57-K00-22
4 Clockspring	
1999-00	GE4T-66-CS0A
2001-03	
Alps Brand	N066-66-CS0
Tokai Rika Brand	GE4T-66-CS0A
5 Module, Pass Air Bag	
1999-00	
Brown	BJ0E-57-K70C-90
Gray	BJ0E-57-K70C-43
2001-03	
Black	BJ0E-57-K70C-65
Brown	BJ0E-57-K70C-22

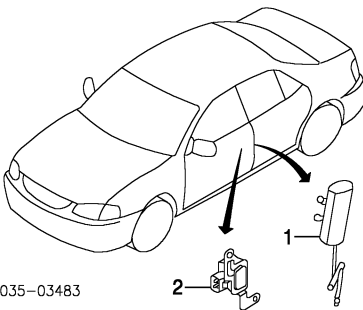SIDE	
2000-03 Cont'd	
	
035-03483	
1 Module, Side Air Bag	
Hatchback	Service w/Seat Back Assy
Sedan	
	R B25D-57-KA0D
	L B25D-57-KB0D
2 Sensor, Side Air Bag	
	R B25D-57-KC0B
	L B25D-57-KD0B

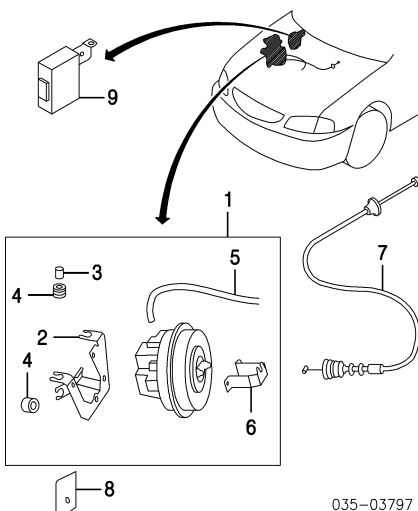CRUISE CONTROL SYSTEM	
HATCHBACK	
	
035-03797	
1 Actuator Assy, Cruise	BN5W-66-310A
2 Bracket, Actuator	BN5W-66-3AY
3 Spacer	UE54-66-3A5
4 Grommet (2)	B6S7-13-349
5 Hose, Cruise	BJ0F-66-361B
6 Bracket, Cable	LC62-66-3A8
*Included w/Cruise Actuator Assy	
7 Cable, Cruise Control	BL8D-66-311A
8 Bracket, Lower Actuator	BN5W-66-3B2
9 Control Unit, Cruise	
w/Sport Mode	BP5V-66-320
w/o Sport Mode	BL8M-66-320

SEDAN	
<i>Illustration Located in Next Column</i>	
1 Actuator Assy, Cruise	
1999-00	
1.6L Eng	
Man Trans	BJ0F-66-310D
w/Calif Emission	BJ0E-66-310
w/o Calif Emission	BJ0F-66-310D
Auto Trans	BJ0P-66-310C
1.8L Eng	
2001-03	BL8H-66-310B
2 Bracket, Actuator	BJ0F-66-3B5B
3 Spacer (3)	UE54-66-3A5
4 Grommet (3)	UE54-66-3A4
5 Sensor, MAP	KL47-18-211A
6 Hose, Sensor/Solenoid (a)	9935-10-4999
(a) Cut to Fit	
7 Valve, Solenoid	BP4Y-18-741
8 Pipe, Manifold	
1999-00	
1.6L Eng	BJ0F-66-361B
1.8L Eng	BJ0P-66-361A

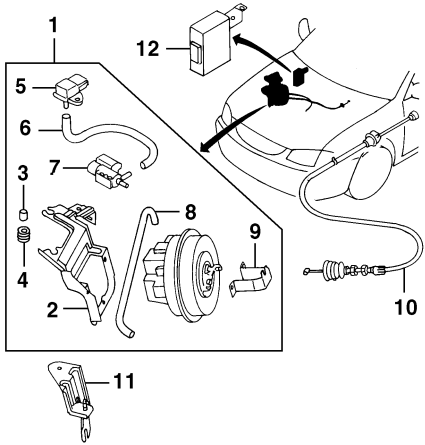
	
035-03217	
2001-03	BJ0F-66-361B
9 Bracket, Cable	
1999-00	GA2B-66-3A8
2001-03	LC62-66-3A8
*Included w/Cruise Actuator Assy	
10 Cable, Cruise Actuator	
1999-00	BJ0F-66-311A
2001-03	
1.6L Eng	BL8H-66-311A
2.0L Eng	BL8D-66-311A
11 Bracket, Actuator/Manif	BJ0F-66-3BXA
12 Control Unit, Cruise	
1999-00	
1.6L Eng	BJ0F-66-320A
1.8L Eng	BJ0P-66-320A
2001-03	
1.6L Eng	BL8D-66-320A
2.0L Eng	
w/Sport Mode	BP5V-66-320
w/o Sport Mode	BL8M-66-320

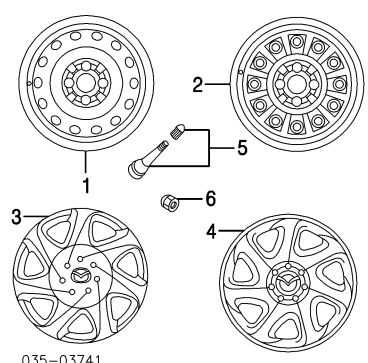WHEEL	
STEEL WHEEL	
	
035-03741	
Wheel, Steel	
1 14x5-1/2"	9965-J2-5540
2 15x6"	9965-82-6050
Cover, Wheel	
3 14" Wheels	99-00 B25F-37-170A
	01-03 B30F-37-170
4 15" Wheels	BL2E-37-170A
5 Stem, Valve	9963-60-4130
6 Nut, Lug	0603-26-161A

ALLOY WHEEL	
<i>Illustration Located in Next Column</i>	
Wheel, Alloy	
15x6"	
1 Type 1	9965-G2-6050
2 Type 2	9965-L1-6050
Wheel, Alloy	
3 16x6"	
Hatchback	
U-Mold Brand	
Buffed Type	9965-41-6060
Non-Buffed Type	9965-44-6060
Sedan	9965-42-6060
Wheel, Alloy	

MAZDA PROTEGE/PROTEGE5 1999-03


FRONT SUSPENSION

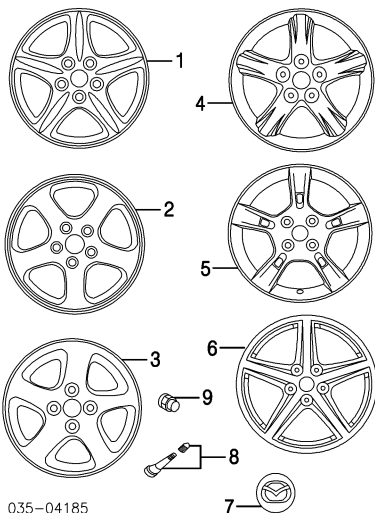

035-04185


- 4 Sedan
 - Hitachi Brand 9965-47-6060
 - U-Mold Brand
 - Buffed Type 9965-49-6060
 - Non-Buffed Type 9965-48-6060
- Wheel, Alloy 17x7
- 5 MAZDASPEED Model† 9965-49-6060
- 6 MP3 Model 9965-05-7070
- †Order by Application
- 7 Cap, Center
 - 15x6" Wheels GJ6G-37-192
 - 16x6" Wheels
 - Type 1 B30P-37-192
 - Type 2 B33M-37-192
 - 17x7" Wheels
 - Type 1 BN7H-37-192
 - Type 2 BN7H-37-192
- 8 Stem, Valve 9963-60-4130
- 9 Nut, Lug B002-37-160A

Spare Wheel & Hardware

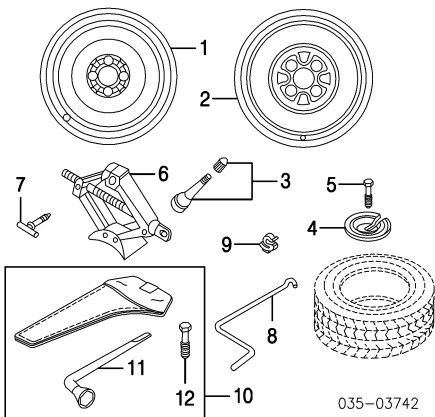

035-03742


- Wheel, Spare
 - 1 14x4" 99-00 9965-21-4040
 - 2 15x4" 99-00 9965-31-4050
 - 01-03 9965-35-4050
 - Wheel, Spare
 - 16" N.A.
 - 17" N.A.
 - 3 Valve, Stem 9963-60-4130
 - 4 Clamp, Spare Wheel GA5R-56-971C
 - 5 Bolt, Anchor
 - 50mm G14R-56-961
 - 65mm 8532-56-961
 - 75mm G030-56-961
 - 6 Jack
 - 99-00 B45V-37-790C
 - 01-03 B25D-37-790B
 - 7 Bolt, Jack B001-56-170C
 - 8 Handle, Jack B210-37-810
 - 9 Holder, Jack Handle G030-56-176
 - 10 Tool Assy
 - Hatchback BN5V-69-650
 - Sedan
 - DX, ES, LX, SE Model BR70-69-650B
 - MAZDASPEED, MP3 Model BL8M-69-650
 - 11 Wrench, Hub† NA01-68-070
 - 12 Bolt†
 - Hatchback B093-56-961
 - Sedan G091-56-961
- †Included w/Tool Assy

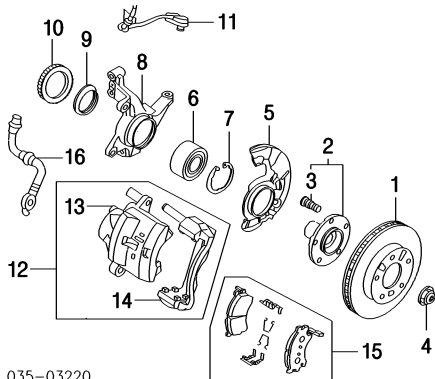

035-03220

- 1 Rotor, Brake
 - 1.6L Eng R/L BJ0Y-33-25X
 - 1.8L Eng R/L BJ1Y-33-25X
 - 2.0L Eng
 - w/Rear Disc Brakes R/L GA4Y-33-25XJ
 - w/o Rear Disc Brakes R/L BJ1Y-33-25X
- 2 Hub Assy, Wheel
 - w/Rear Disc Brakes R/L C100-33-060
 - w/o Rear Disc Brakes R/L B01A-33-060A
- 3 Stud, Wheel† (4/Side)
 - w/Rear Disc Brakes R/L B455-33-062
 - w/o Rear Disc Brakes R/L B01Y-33-062
- †Included w/Wheel Hub Assy
- 4 Nut, Axle R/L GJ21-33-042B
- 5 Shield, Splash R B25D-33-261
- L B25D-33-271
- R/L B455-33-047D-MV
- R/L B21M-33-048
- 6 Bearing, Wheel
- 7 Ring, Snap
- 8 Knuckle, Steering
 - 1999
 - w/ABS R B25D-33-021B
 - To 6-25-99 L B25D-33-031B
 - R C100-33-021B
 - L C100-33-031B
 - w/o ABS
 - To 6-25-99 R BJ0E-33-021B
 - L BJ0E-33-031B
 - From 6-25-99 R CB01-33-021A
 - L CB01-33-031A
 - 2000-03
 - w/ABS R C100-33-021B
 - L C100-33-031B
 - w/o ABS R CB01-33-021A
 - L CB01-33-031A
 - R/L G304-33-065
- 9 Seal, Oil R/L G304-33-065
- 10 Rotor, ABS Sensor-See Front Drive Axle Section
- 11 Sensor, Front ABS-See ABS/Brakes Section
- 12 Caliper Assy, Brake
 - 1999-02
 - 1.6L Eng R B2YC-33-98ZR
 - L B2YC-33-99ZR
 - 1.8L, 2.0L Eng
 - R GAZR-33-98Z
 - L GAZR-33-99Z
 - 2003
 - 1.6L Eng R B2YC-33-98ZR
 - L B2YC-33-99ZR
 - 2.0L Eng
 - w/Turbo R BPYH-33-98Z
 - L BPYH-33-99Z
 - w/o Turbo R GAZR-33-98Z
 - L GAZR-33-99Z
- 13 Caliper, Brake†
 - 1999-02
 - 1.6L Eng R B26C-33-61X
 - L B26C-33-71X
 - 1.8L, 2.0L Eng
 - R GA5R-33-61X
 - L GA5R-33-71X
 - 2003
 - 1.6L Eng R B26C-33-61X
 - L B26C-33-71X
 - 2.0L Eng
 - w/Turbo R BP7H-33-61X
 - L BP7H-33-71X
 - w/o Turbo R GA5R-33-61X
 - L GA5R-33-71X
- 14 Carrier, Caliper†
 - 1999-02
 - 1.6L Eng R/L B26C-33-281
 - 1.8L, 2.0L Eng R GA5R-33-28X
 - L GA5R-33-29X
 - 2003
 - 1.6L Eng R/L B26C-33-281
 - 2.0L Eng
 - w/Turbo R BP7H-33-28X
 - L BP7H-33-29X
 - w/o Turbo R GA5R-33-28X
 - L GA5R-33-29X
- †Included w/Brake Caliper Assy
- 15 Pad Set, Brake
 - 1999-02
 - 1.6L Eng B2YD-33-23Z
 - 1.8L Eng GCYD-33-23ZE

- 2.0L Eng BLYM-33-23Z
- 2003 B2YD-33-23Z
- 1.6L Eng
- 2.0L Eng
- w/Turbo
- w/o Turbo
- 16 Hose, Brake
 - CBY3-33-23Z
 - BLYM-33-23Z
 - R/L B25D-43-980A

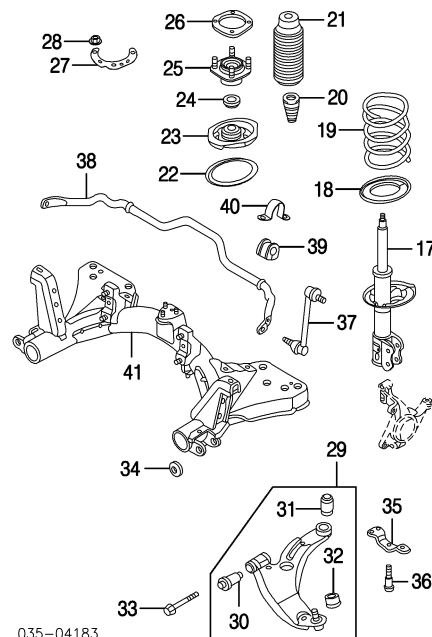

035-04183


- 17 Strut
 - 1999-00
 - R B26R-34-700A
 - L B26R-34-900A
 - 2001
 - w/Rear Disc Brakes
 - ES, LX, SE Model R BL8P-34-700A
 - L BL8P-34-900A
 - MP3 Model R BN7H-34-700A
 - L BN7H-34-900A
 - w/o Rear Disc Brakes
 - To 1-01 R BL2A-34-700A
 - L BL2A-34-900A
 - From 1-01 R BL2A-34-700B
 - L BL2A-34-900B
 - 2002
 - Hatchback
 - To 4-1-02 R BN5V-34-700
 - L BN5V-34-900
 - From 4-1-02 R BL8P-34-700B
 - L BL8P-34-900B
 - Sedan
 - w/Rear Disc Brakes
 - To 4-1-02 R BL8P-34-700A
 - L BL8P-34-900A
 - From 4-1-02 R BL8P-34-700B
 - L BL8P-34-900B
 - w/o Rear Disc Brakes
 - L BL8P-34-900B
 - R BL2A-34-700B
 - L BL2A-34-900B
 - 2003
 - Hatchback
 - R BL8P-34-700B
 - L BL8P-34-900B
 - Sedan
 - DX, ES, LX, SE Model
 - w/Rear Disc Brakes R BL8P-34-700B
 - L BL8P-34-900B
 - w/o Rear Disc Brakes R BL2A-34-700B
 - L BL2A-34-900B
 - MAZDASPEED Model
 - R BP7H-34-700B
 - L BP7H-34-900B
- 18 Seat, Lower Rubber R/L B25D-34-0A3
- 19 Spring, Coil
 - 1999-00
 - 1.6L Eng R/L BJ3P-34-011A
 - 1.8L Eng
 - Man Trans R/L BJ3P-34-011A
 - Auto Trans R/L BJ4P-34-011A
 - 2001
 - DX, ES, LX, SE Model
 - Man Trans R/L B26M-34-011B
 - Auto Trans R/L B27R-34-011A
 - MP3 Model R/L BN7H-34-011A
 - 2002
 - Hatchback R/L B26M-34-011B
 - Sedan
 - Man Trans R/L B26M-34-011B
 - Auto Trans
 - To 3-1-02 R/L B27R-34-011A
 - From 3-1-02 R/L B26M-34-011B
 - 2003
 - DX, ES, LX, SE Model
 - MAZDASPEED Model R/L B26M-34-011B
 - R/L BN7H-34-011A
- 20 Bumper, Rebound
 - DX, ES, LX, SE Model R/L C100-34-111A
 - MAZDASPEED, MP3 Model R/L BN7H-34-111
- 21 Boot, Dust 00-03 R/L C100-34-0A5

MAZDA PROTEGE/PROTEGE5 1999-03

1 Pump, Steering 1.6L Eng 1.8L, 2.0L Eng	B25D-32-600R-0B B26K-32-650B
2 Bracket, Mounting 1999-00 1.6L Eng 1.8L Eng 2001 1.6L Eng 2.0L Eng 2002-03 1.6L Eng 2.0L Eng	B25D-32-680 GA5R-32-603D B25D-32-680 GA5R-32-603D B25D-32-680 GE4T-32-603
3 Bolt, Mounting 1.6L Eng 1.8L, 2.0L Eng	B456-32-761A GA2B-32-761
4 Bracket, Adjuster Strap 1.6L Eng	B25D-32-609
5 Strap, Adjuster 1.6L Eng 1.8L Eng 2.0L Eng	B456-32-60YB GE7T-32-61X G14H-32-61X
6 Bolt, Adjuster 1.6L Eng 1.8L, 2.0L Eng	9YA0-21-016 GA2A-32-173
7 Bolt, Locking 99-00 01-03	B366-15-966B B366-15-966C
8 Belt, Steering Pump 1.6L Eng w/ A/C Bando Brand Goodyear Brand w/o A/C 1.8L, 2.0L Eng w/ A/C w/o A/C Bando Brand Goodyear Brand	BPE7-15-909 BPE7-15-909 ZL01-15-907 FS12-15-909A FS05-15-907 FS05-15-907
9 Tank Assy, Reservoir 10 Cap, Reservoir *Included w/Reservoir Tank Assy	B25D-32-690A B01C-32-691
11 Gasket, Cap 12 Strainer, Tank 13 Bracket, Tank 14 Hose, Suction 1.6L Eng 1.8L, 2.0L Eng	T001-32-554 BR71-32-503A B25D-32-530D B25D-32-688 B26K-32-688A
15 Hose Assy, Pressure 1.6L Eng 1.8L, 2.0L Eng	B25D-32-410F B26K-32-410J
16 Mount, Rubber 17 Pipe, Return *Included w/Pressure Hose Assy	F285-13-363 B25D-32-6E0
18 Bracket, Pressure Hose 19 Hose, Return Pipe 20 Hose, Cooler Pipe 21 Pipe, Cooler Man Trans Auto Trans 1999-01 2002 To 2-1-02 From 2-1-02 2003	B25D-32-197B B25D-32-684 B26K-32-683 B25D-32-470C B26K-32-470C B25D-32-470C B25D-32-470C B25D-32-470C
22 Hose, Pump Return	B26K-32-682B

STEERING WHEEL/COLUMN


WHEEL & TRIM 1999-01

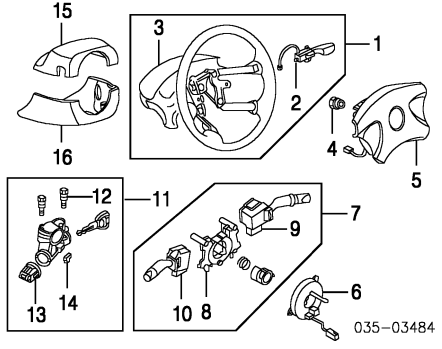

1 Wheel Assy, Steering w/Cruise Control 1999 Brown To 7-28-99 From 7-28-99 Gray To 7-28-99 From 7-28-99 2000 Brown Gray 2001 Black Brown	BJOE-32-980A-90 GG4K-32-980B-90 BJOE-32-980A-43 GG4K-32-980B-43 GG4K-32-980B-90 GG4K-32-980B-43 GG4K-32-980B-00 GG4K-32-980A-22
---	--


w/o Cruise Control 1999 Brown To 7-28-99 From 7-28-99 Gray To 7-28-99 From 7-28-99 2000 Brown Gray 2001 DX, ES, LX, SE Model Black Brown MP3 Model Harness, Steering MP3 Model 2 Switch, Cruise Control DX, ES, LX, SE Model 3 Cover, Wheel Base w/Cruise Control 1999 To 7-28-99 From 7-28-99 Brown Gray 2000 Brown Gray 2001 DX, ES, LX, SE Model Black Brown MP3 Model-Serviced w/Steering Wheel Assy w/o Cruise Control 1999 Brown To 7-28-99 From 7-28-99 Gray To 7-28-99 From 7-28-99 2000 Brown Gray 2001 DX, ES, LX, SE Model Black Brown MP3 Model-Serviced w/Steering Wheel Assy *Included w/Steering Wheel Assy 4 Nut, Steering Wheel 5 Module, Driver Air Bag-See Air Bag System Section 6 Clockspring-See Air Bag System Section 7 Switch Assy, Combination 1999-00 2001-Serviced by Components 8 Body, Combination Switch 9 Switch, Wiper 10 Switch, Dimmer/Signal *Included w/Combination Switch Assy Lock Set, Vehicle (Complete) Hatchback Man Trans Auto Trans Sedan Man Locks Man Trans Auto Trans Pwr Locks Man Trans Auto Trans 11 Lock Assy, Ignition (a) Hatchback-Serviced w/Vehicle Lock Set Sedan Man Trans Auto Trans 12 Bolt, Shear (a) (b) 13 Switch, Ignition (a) (b) 14 Switch, Keyless Entry (a) (b) (a) Included w/Vehicle Lock Set (b) Included w/Ignition Lock Assy 15 Cover, Upper Column 1999-00 Brown Gray 2001 Black Brown 16 Cover, Lower Column 1999-00 Brown Gray 2001 Black Brown	G14F-32-980C-90 GG4J-32-980B-90 G14F-32-980C-43 GG4J-32-980B-43 GG4J-32-980B-90 GG4J-32-980B-43 GG4K-32-980B-00 GG4K-32-980A-22 B28V-32-980A B25E-32-9YX BJ0F-66-3D1 GE7V-32-049 LC63-32-049-90 LC63-32-049A-43 LC63-32-049-90 LC63-32-049A-43 LC63-32-049A-00 LC63-32-049-22 G14F-32-049-90 C100-32-049-90 G14F-32-049-43 C100-32-049-90 LC62-32-049-90 C100-32-049-43 C100-32-049A-00 C100-32-049A-22 9994-81-200 9994-81-200 GE6L-66-120A GE6T-66-1B1 GE6L-66-128 GE4T-66-122 BN5V-09-010 BN6C-09-010 99-00 BJOE-09-010C 01 BL8J-09-010 99-00 BJ0J-09-010C 01 BL8H-09-010 99-00 BJ0F-09-010D 01 BL8E-09-010 99-00 BJ0K-09-010D 01 BL8J-09-010 99-00 BJYE-76-290 01 BLYD-76-290 99-00 GEYM-76-290 01 GGYB-76-290 R KA01-66-154 L H043-66-154 99-00 GE4T-66-151 01 LC70-66-151 GE4T-66-157 BJ0J-60-221-90 BJ0J-60-221-43 BJ0J-60-221-00 BJ0J-60-221-22 BJ0J-60-231A-90 BJ0J-60-231A-43 B25D-60-230A-00 B25D-60-230A-22
---	---

WHEEL & TRIM 2002-03 HATCHBACK

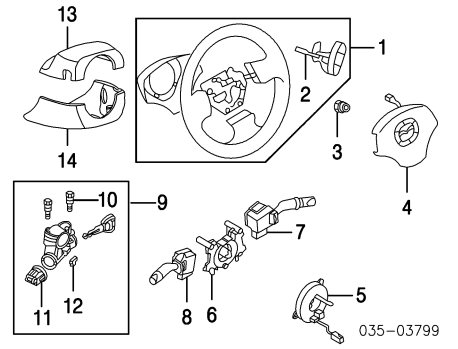

1 Wheel Assy, Steering Leather Black Brown Urethane w/Cruise Control Black Brown w/o Cruise Control Black Brown 2 Switch, Cruise Control *Included w/Steering Wheel Assy 3 Nut, Steering Wheel 4 Module, Driver Air Bag-See Air Bag System Section 5 Clockspring-See Air Bag System Section 6 Body, Combination Switch 7 Switch, Wiper 8 Switch, Dimmer/Signal Lock Set, Vehicle (Complete) Man Locks Man Trans Auto Trans Pwr Locks Man Trans Auto Trans 9 Lock Assy, Ignition Man Trans Auto Trans 10 Bolt, Shear (a) 11 Switch, Ignition (a) 12 Switch, Keyless Entry (a) *Included w/Vehicle Lock Set (a) Included w/Ignition Lock Assy 13 Cover, Upper Column Black Brown 14 Cover, Lower Column Black Brown	BN5W-32-980B-00 BN5W-32-980B-22 BN5V-32-980B-00 BN5V-32-980B-22 D305-32-980-00 D305-32-980-22 BN5V-66-3D1 9994-81-200 R KA01-66-154 L H043-66-154 LC70-66-151 GE4T-66-157 BLYD-76-290 GGYB-76-290 KA01-66-154 H043-66-154 LC70-66-151 GE4T-66-157 BJ0J-60-221-00 BJ0J-60-221-22 B25D-60-230A-00 B25D-60-230A-22
---	--

WHEEL & TRIM 2002-03 SEDAN

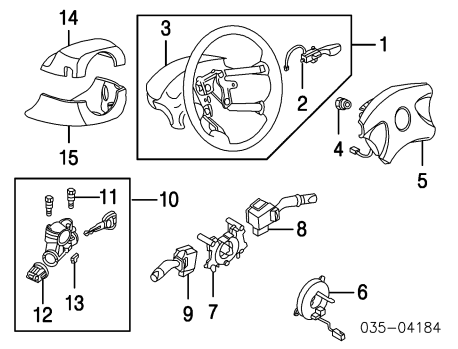


1 Wheel Assy, Steering 2002 w/Cruise Control To 11-1-01 Black Brown From 11-1-01 Black Brown w/o Cruise Control Black Brown 2003	GG4K-32-980B-00 GG4K-32-980A-22 GG4K-32-980B-00 GG4K-32-980B-22 GG4J-32-980B-00 GG4J-32-980B-22
---	--

MAZDA PROTEGE/PROTEGE5 1999-03

STEERING WHEEL/COLUMN Cont'd

WHEEL & TRIM	
2002-03 SEDAN Cont'd	
w/Cruise Control	
Black	GG4K-32-980B-00
Brown	GG4K-32-980B-22
w/o Cruise Control	
Black	GG4J-32-980B-00
Brown	GG4J-32-980B-22
2 Switch, Cruise Control ¶	BJ0F-66-3D1
3 Cover, Wheel Base ¶	
Black	C100-32-049A-00
Brown	C100-32-049A-22
¶Included w/Steering Wheel Assy	
4 Nut, Steering Wheel	9994-81-200
5 Module, Driver Air Bag-See Air Bag System Section	
6 Clockspring-See Air Bag System Section	
7 Body, Combination Switch	GE6T-66-1B1
8 Switch, Wiper	GE4T-66-128
9 Switch, Dimmer/Signal	GE4T-66-122
Lock Set, Vehicle (Complete)	
Man Locks	
Man Trans	BL8J-09-010
Auto Trans	BL8H-09-010
Pwr Locks	
Man Trans	BL8E-09-010
Auto Trans	BL8J-09-010
10 Lock Assy, Ignition ¶	
Man Trans	BL9D-76-290
Auto Trans	GGYB-76-290
11 Bolt, Shear ¶ (a)	R KA01-66-154
	L H043-66-154
	LC70-66-151
12 Switch, Ignition ¶ (a)	GE4T-66-157
13 Switch, Keyless Entry ¶ (a)	
¶Included w/Vehicle Lock Set	
(a) Included w/Ignition Lock Assy	
14 Cover, Upper Column	
Black	BJ0J-60-221-00
Brown	BJ0J-60-221-22
15 Cover, Lower Column	
Black	B25D-60-230A-00
Brown	B25D-60-230A-22

COLUMN

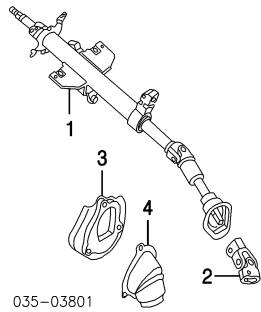

035-03801


1 Column, Steering	99-00 BJ0E-32-100D
	01-03 BL8D-32-100
2 Joint, Lower	99-02 BJ0E-32-850C
	03 BJ0E-32-850D
3 Plate, Boot	GA2A-32-212E
4 Boot, Lower Joint	BJ0E-32-211A

ENGINE/TRANS

1.6L ENG


Illustration Located in Next Column

1 Pulley, Crankshaft	ZL01-11-401
Eaglepicher Brand	
NOK Brand	B6BG-11-401
2 Bolt, Crankshaft	B3C7-11-406
3 Cover, Upper Timing	Z501-10-511
4 Cover, Center Timing	B6BF-10-521
5 Cover, Lower Timing	B660-10-501E
6 Belt, Timing	Z502-12-205-9U
7 Pulley, Camshaft	R/L Z502-12-425
8 Pulley, Idler	B660-12-730C
9 Tensioner, Timing Belt	B660-12-700F
10 Spring, Tensioner	Z502-12-711
11 Pump, Engine Oil	BP4W-14-100A
12 Dipstick, Engine Oil	BPD3-10-450C
13 Tube, Engine Dipstick	B660-10-441
14 Cover Assy, Valve	ZL01-10-210B
15 Gasket, Valve Cover ¶	ZL01-10-235
¶Included w/Valve Cover Assy	
16 Pan, Engine Oil	B366-10-400A
17 Plate, Baffle	ZL01-10-40YA
18 Sealant, Engine Oil Pan	N.A.
19 Pan, Trans Oil	FN11-21-51X

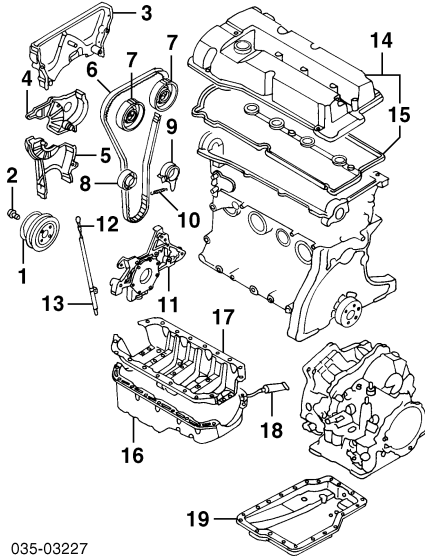

035-03227

1.8L, 2.0L ENG

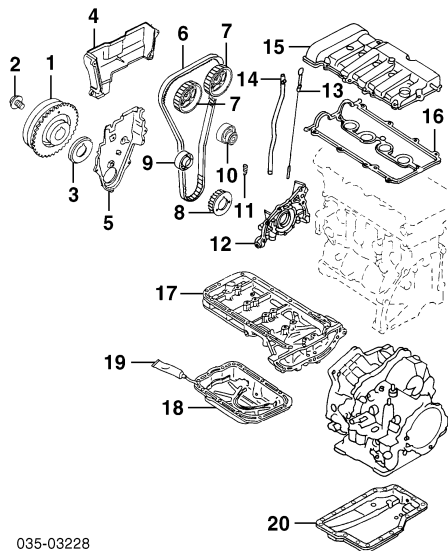


035-03228

1 Pulley, Crankshaft	FSB8-11-400
2 Bolt, Crankshaft	FS01-11-406A
3 Plate, Timing Belt	FS01-11-404
4 Cover, Upper Timing	FP01-10-520C
5 Cover, Lower Timing	
1.8L Eng	FP33-10-500
2.0L Eng	FS01-10-500D
6 Belt, Timing	
1.8L Eng	FP01-12-205A-9U
2.0L Eng	FSY1-12-205
7 Pulley, Camshaft	R/L FSN5-12-425
8 Pulley, Crank Timing	FS05-11-321
9 Pulley, Idler	FS01-12-730A
10 Tensioner, Timing Belt	
1.8L Eng	FP01-12-700A
2.0L Eng	FS01-12-700B
11 Spring, Tensioner	
1.8L Eng	FS01-12-711
2.0L Eng	Z502-12-711
12 Pump, Engine Oil	FS01-14-100N
13 Dipstick, Engine Oil	FS01-10-450A
14 Tube, Engine Dipstick	
1.8L Eng	FP01-10-440A
2.0L Eng	FS01-10-440A
15 Cover, Valve	
1.8L Eng	FSD7-10-220D
2.0L Eng	FP85-10-220A
16 Gasket, Valve Cover	FSD7-10-235
17 Pan, Upper Engine Oil	
1.8L Eng	FS31-10-380G
2.0L Eng	
Man Trans	FS01-10-380F
Auto Trans	FS31-10-380G
18 Pan, Lower Engine Oil	FS59-10-400A
19 Sealant, Engine Oil Pan	N.A.
20 Pan, Trans Oil	FN11-21-51X

ENGINE/TRANS MOUNTS

1.6L ENG

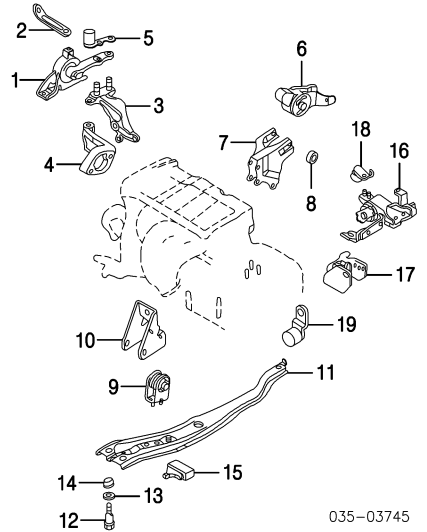

035-03745


1 Mount, Front Engine	B25D-39-06YC
2 Bracket, Side Body	B26K-39-0A1
3 Bracket, Side Engine	
1999-00	
w/Calif Emission	BJ0W-39-030B
w/o Calif Emission	B25F-39-030B
2001-03	BJ0W-39-030B
4 Stay, Eng Side Bracket	BC1D-39-035A
5 Damper, Side Eng Mount	B25D-39-06Z
6 Mount, Right Engine	
Man Trans	B25F-39-040B
Auto Trans	B25G-39-040D
7 Bracket, Right Engine	
Man Trans	B25D-39-010A
Auto Trans	B26D-39-010B
8 Damper, Right Mount	
Man Trans	B25D-39-01XA
9 Mount, Left Engine	B25D-39-050C
10 Bracket, Left Engine	
Man Trans	B25D-39-020A
Auto Trans	B26J-39-020
11 Member, Engine Support	B25D-39-800B
12 Bolt, Engine Support (2)	B455-39-813
13 Washer, Bolt (2)	B092-39-815A
14 Insulator, Bolt (2)	B092-39-811
15 Damper, Front	
99-00	B25D-39-970A
01-03	B25F-39-970
16 Mount, Trans	
Man Trans	B25D-39-070C
Auto Trans	B25E-39-070D
17 Bracket, Trans	
Man Trans	B25D-39-080
Auto Trans	B25E-39-080C
Damper, Rear	
Man Trans	BJ2C-39-06ZA
Auto Trans	GD7A-39-01X

1.8L, 2.0L ENG

Illustration Located in Next Column

1 Mount, Front Engine	
w/Turbo	BP7H-39-06Y
w/o Turbo	BJ0N-39-06YE
2 Bracket, Side Body	B26K-39-0A1
3 Bracket, Side Engine	GA2A-39-030E
4 Mount, Right Engine	
Man Trans	BL3K-39-010
Auto Trans	BJ0N-39-040C
5 Bracket, Right Engine	
Man Trans	BJ0N-39-010A
Auto Trans	B26D-39-010B
6 Damper, Dynamic	
Man Trans	B25D-39-01XA
7 Mount, Left Engine	B25D-39-050C
8 Bracket, Left Engine	
1.8L Eng	BJ0N-39-020
2.0L Eng	
Man Trans	B26K-39-020A
Auto Trans	B28V-39-020A
9 Member, Engine Support	
1.8L Eng	B25D-39-800B
2.0L Eng	B28V-39-800B
10 Bolt, Engine Support (2)	B455-39-813
11 Washer, Bolt (2)	B092-39-815A
12 Insulator, Bolt (2)	B092-39-811
13 Damper, Upper Dynamic	


MAZDA PROTEGE/PROTEGE5 1999-03

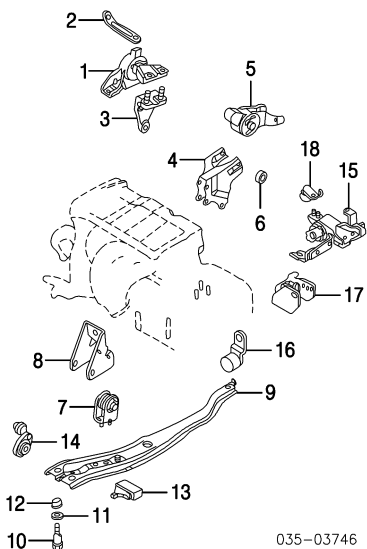

035-03746

- | | |
|---------------------------------|--------------|
| Auto Trans | B28V-39-990 |
| 14 Damper, Lower Dynamic | |
| 1.8L Eng | B25D-39-970A |
| 2.0L Eng | B25F-39-970 |
| 15 Mount, Trans | |
| Man Trans | |
| 1.8L Eng | B25D-39-070C |
| 2.0L Eng | BL3K-39-070A |
| Auto Trans | B25E-39-070D |
| 16 Damper, Dynamic | |
| Man Trans | BL3K-39-08XA |
| Auto Trans | GD7A-39-01X |
| 17 Bracket, Trans | |
| Man Trans | B26C-39-080 |
| 1.8L Eng | BL3K-39-080G |
| 2.0L Eng | |
| Auto Trans | |
| 1.8L Eng | B25E-39-080C |
| 2.0L Eng | B25E-39-080D |
| 18 Damper, Dynamic | |
| Man Trans | BJ2C-39-06ZA |

ENGINE UNDER COVER

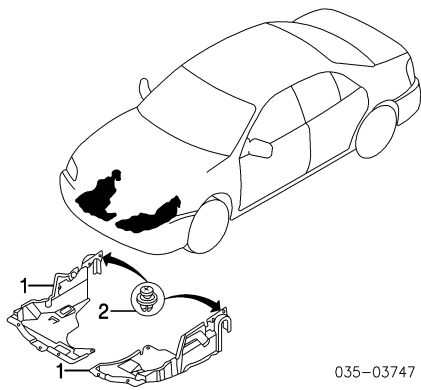


035-03747

- | | |
|------------------------------|-----------------|
| 1 Shield, Splash | R B25D-56-321J |
| | L B25D-56-341H |
| 2 Clip, Splash Shield | R/L BC1D-56-145 |

AIR CLEANER

Illustration Located in Next Column


- | | |
|-------------------------------|----------------|
| 1 Cleaner Assy, Air | ZL01-13-320B |
| 1.6L Eng | FP47-13-320C |
| 1.8L, 2.0L Eng | |
| 2 Cover, Upper | ZM34-13-Z0X |
| 1.6L Eng | FP47-13-Z0X |
| 1.8L, 2.0L Eng | B595-13-Z40-9U |
| 3 Element, Filter | B593-13-Z27 |
| 4 Clip, Cover (2) | FS05-13-321 |
| 5 Spacer, Mounting (4) | FS05-13-321 |
| 6 Mount, Rubber (4) | FE51-13-363 |
| *Included w/Air Cleaner Assy | |
| 7 Bracket, Air Cleaner | ZL01-20-210B |

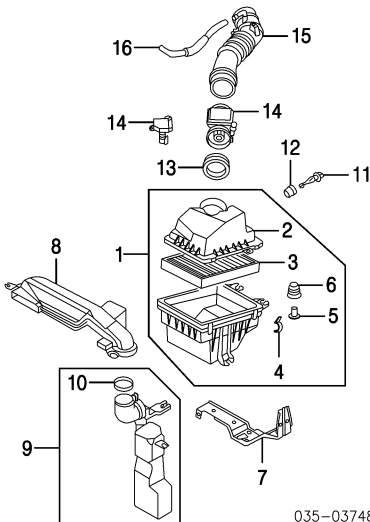

035-03748

- | | |
|------------------------------------|-----------------|
| 8 Duct, Fresh Air | ZL01-13-200C |
| 9 Chamber Assy, Resonance | ZL01-13-19XB |
| 10 Seal † | ZL01-13-ZR1 |
| *Included w/Resonance Chamber Assy | |
| 11 Sensor, Air Temp | BP4W-18-845 |
| 12 Grommet, Sensor | KL47-13-375 |
| 13 Seal, Air Flow Meter | B578-13-245B |
| 14 Meter, Air Flow | |
| 1.6L Eng | ZL01-13-215R-00 |
| 1.8L Eng | FP39-13-215R-00 |
| 2.0L Eng | FS1E-13-215R-00 |
| 15 Hose, Intake Air | |
| 1.6L Eng | ZM01-13-220 |
| 1.8L, 2.0L Eng | FP47-13-220A |
| 16 Hose, Vent | |
| 1.6L Eng | ZL01-13-742 |
| 1.8L, 2.0L Eng | FP47-13-741 |

TURBOCHARGER/INTERCOOLER

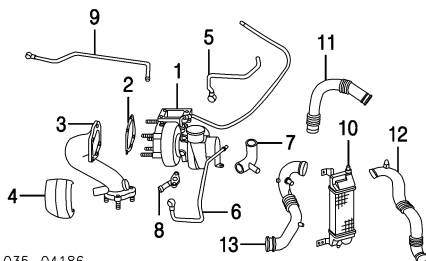

035-04186


- | | |
|-------------------------------|--------------|
| 1 Turbocharger | 0000-88-C42 |
| 2 Gasket, Turbocharger | 0000-88-C17 |
| 3 Pipe, Exhaust | 0000-88-C45 |
| 4 Shield, Pipe | 0000-88-C43 |
| 5 Pipe, Water Inlet | 0000-88-C52 |
| 6 Pipe, Water Outlet | 0000-88-C49 |
| 7 Hose, Return | 0000-88-C54 |
| 8 Flange, Water | 0000-88-C48 |
| 9 Pipe, Water Feed | 0000-88-C76 |
| 10 Intercooler | RF4P-13-565A |
| 11 Hose, Inlet | 0000-88-C57 |
| 12 Hose, Outlet | 0000-88-C58 |
| 13 Hose, Air | 0000-88-C56 |

EXHAUST

DX, ES, LX, MP3, SE MODEL

Illustration Located in Next Column








- | | |
|----------------------------------|--------------|
| 1 Manifold, Exhaust | ZM01-13-450A |
| 1.6L Eng | FP49-13-450 |
| 1.8L, 2.0L Eng | |
| 2 Gasket, Manifold | |
| 1.6L Eng | ZL01-13-460 |
| 1.8L, 2.0L Eng | FS01-13-460A |
| 3 Shield, Heat | |
| 1.6L Eng | ZM01-13-390 |
| 1.8L, 2.0L Eng | FP49-13-390 |
| 4 Gasket, Upper Converter | ZM01-20-520 |
| 5 Converter, Catalytic | |
| 1.6L, 1.8L Eng | ZM02-20-50XA |

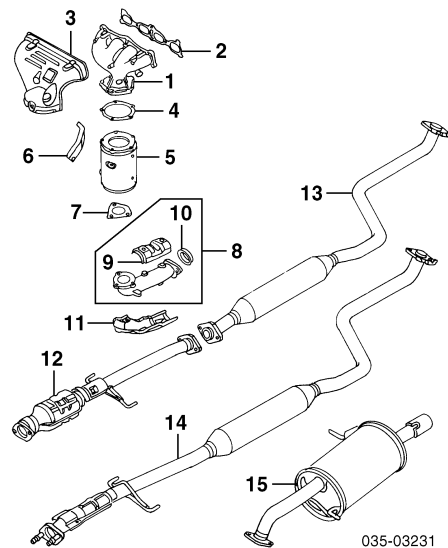

035-03231


- | | |
|-------------------------------------|--------------|
| 2.0L Eng | FS7N-20-50XA |
| 6 Bracket, Converter | |
| 1.6L Eng | ZM01-40-081 |
| 1.8L Eng | FP30-40-081 |
| 2.0L Eng | FSE6-40-081 |
| 7 Gasket, Lower Converter | KL19-40-450 |
| 8 Pipe Assy, Front Exhaust | |
| 1.6L Eng | ZM01-40-500A |
| 1.8L Eng | FP30-40-500A |
| 2.0L Eng | FSE6-40-500B |
| 9 Shield, Upper Pipe † | |
| 1.6L, 1.8L Eng | ZM01-40-811A |
| 2.0L Eng | FSE6-40-810 |
| 10 Gasket, Pipe † | BP48-40-561A |
| *Included w/Front Exhaust Pipe Assy | |
| 11 Shield, Pipe Lower | |
| 1.6L Eng | ZM01-40-820D |
| 1.8L Eng | FP30-40-821A |
| 2.0L Eng | FP30-40-820A |
| 12 Converter, Catalytic | |
| w/Calif Emission | |
| 1.6L Eng | ZM02-20-600A |
| 1.8L Eng | FP46-40-100E |
| 1999 | FP46-40-100E |
| 2000 | FP46-40-100E |
| Man Trans | FP46-40-100E |
| Auto Trans | FP46-40-100E |
| To 2-1-00 | FP46-40-100E |
| From 2-1-00 | FP47-40-100 |
| 2.0L Eng | |
| Man Trans | |
| 2001 | FS7N-20-600A |
| 2002 | FS7N-20-600A |
| To 3-13-02 | FS7N-20-600A |
| From 3-13-02 | FSAG-20-600A |
| 2003 | FSAG-20-600A |
| Auto Trans | |
| 2001 | FS7P-20-600A |
| 2002 | |
| To 3-13-02 | FSAF-20-600A |
| From 3-13-02 | FSAH-20-600A |
| 2003 | FSAH-20-600A |
| 13 Pipe, Intermediate | |
| w/Calif Emission | |
| 1.6L Eng | FP31-40-300B |
| 1.8L Eng | |
| Man Trans | FP31-40-300B |
| Auto Trans | FP46-40-300 |
| 2.0L Eng | |
| Man Trans | |
| DX, ES, LX, SE Model | FSF1-40-300 |
| MP3 Model | FSG8-40-300 |
| Auto Trans | FSF2-40-300 |
| w/Calif Emission | |
| 1.6L Eng | ZM01-40-300C |
| 1.8L Eng | FP30-40-300C |
| 2.0L Eng | |
| Man Trans | FSF1-40-300 |
| Auto Trans | FSF2-40-300 |
| *Order by Application | |
| 15 Muffler | |
| 1.6L Eng | FP41-40-100E |
| w/Tail Pipe Extension | FP30-40-100E |
| w/o Tail Pipe Extension | FP46-40-100E |
| 1.8L Eng | |
| 2.0L Eng | FSG1-40-100B |
| Hatchback | |
| Sedan | |
| w/Tail Pipe Extension | FSF1-40-100C |
| w/o Tail Pipe Extension | FSF2-40-100B |

MAZDA PROTEGE/PROTEGE5 1999-03

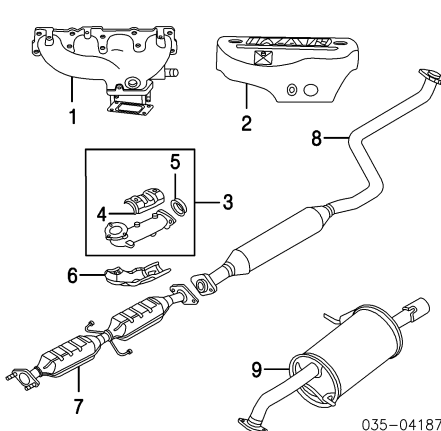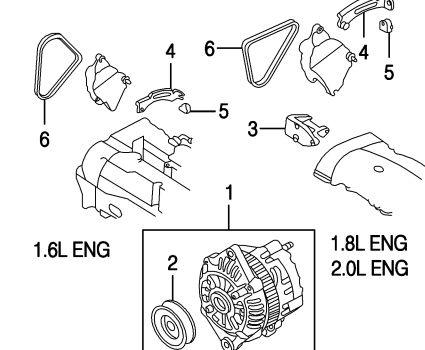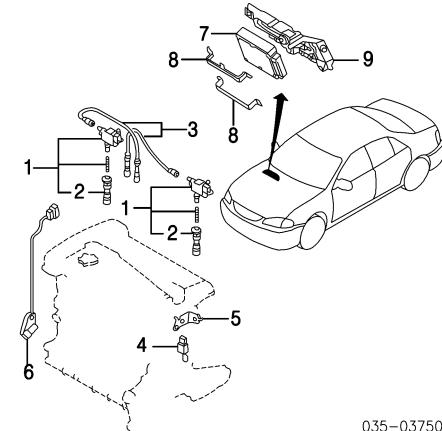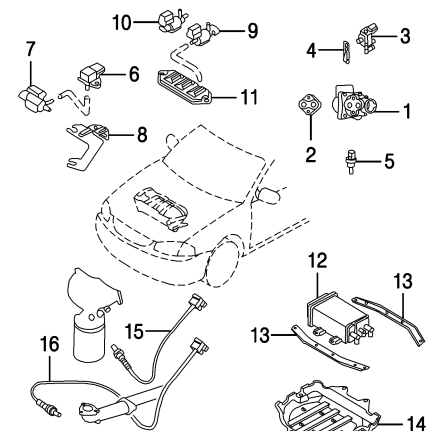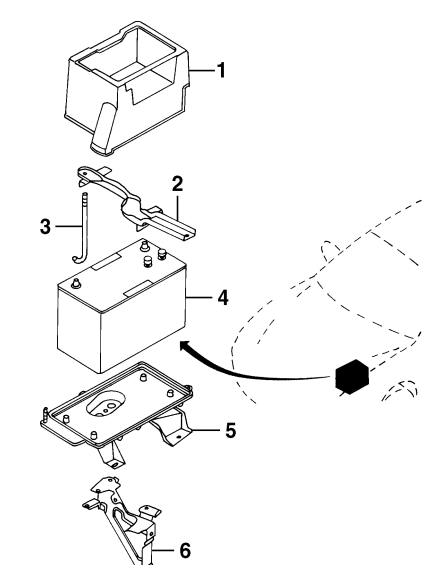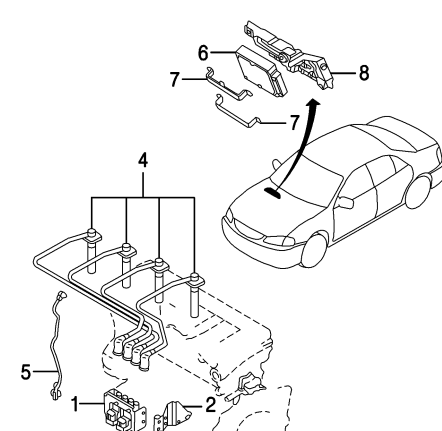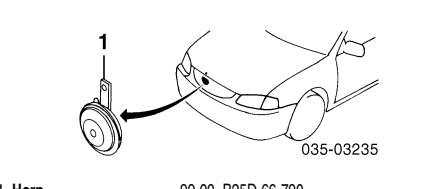EXHAUST Cont'd	1.8L, 2.0L Eng FP50-18-861A-9U	IGNITION 1.6L ENG																																																																																																														
MAZDASPEED MODEL	ELECTRICAL																																																																																																															
ALTERNATOR																																																																																																																
 <p>035-04187</p> <table border="0"> <tr><td>1 Manifold, Exhaust</td><td>0000-88-C40</td></tr> <tr><td>2 Gasket, Manifold</td><td>N.A.</td></tr> <tr><td>3 Shield, Heat</td><td>0000-88-C53</td></tr> <tr><td>4 Pipe Assy, Front Exhaust</td><td>FSE6-40-500B</td></tr> <tr><td>5 Shield, Upper Pipe</td><td>FSE6-40-810</td></tr> <tr><td>6 Gasket, Pipe</td><td>BP48-40-581A</td></tr> <tr><td colspan="2">*Included w/Front Exhaust Pipe Assy</td></tr> <tr><td>7 Shield, Pipe Lower</td><td>FP30-40-820A</td></tr> <tr><td>8 Converter, Catalytic</td><td>FSAX-20-55X</td></tr> <tr><td>9 Pipe, Intermediate</td><td>FSG1-40-300</td></tr> <tr><td>9 Muffler</td><td>N.A.</td></tr> </table>	1 Manifold, Exhaust	0000-88-C40	2 Gasket, Manifold	N.A.	3 Shield, Heat	0000-88-C53	4 Pipe Assy, Front Exhaust	FSE6-40-500B	5 Shield, Upper Pipe	FSE6-40-810	6 Gasket, Pipe	BP48-40-581A	*Included w/Front Exhaust Pipe Assy		7 Shield, Pipe Lower	FP30-40-820A	8 Converter, Catalytic	FSAX-20-55X	9 Pipe, Intermediate	FSG1-40-300	9 Muffler	N.A.	 <p>035-03779</p> <table border="0"> <tr><td>1 Alternator Assy</td><td>Z599-18-300R-00</td></tr> <tr><td>1.6L Eng</td><td>FP34-18-300R-00</td></tr> <tr><td>1.8L, 2.0L Eng</td><td></td></tr> <tr><td>2 Pulley, Alternator</td><td>B3C7-18-W10</td></tr> <tr><td>1.6L Eng</td><td>FS05-18-W11</td></tr> <tr><td>1.8L, 2.0L Eng</td><td></td></tr> <tr><td colspan="2">*Included w/Alternator Assy</td></tr> <tr><td>3 Bracket, Mounting</td><td>FS01-18-371A</td></tr> <tr><td>1.8L, 2.0L Eng</td><td></td></tr> <tr><td>4 Strap, Alternator</td><td>B6BF-18-361C</td></tr> <tr><td>1.6L Eng</td><td>FS05-18-361D</td></tr> <tr><td>1.8L, 2.0L Eng</td><td>FP01-18-363</td></tr> <tr><td>5 Block, Adjusting</td><td></td></tr> <tr><td>6 Belt, Alternator</td><td>B6BF-18-381-9U</td></tr> <tr><td>1.6L Eng</td><td></td></tr> <tr><td>1.8L, 2.0L Eng</td><td>FSJ2-18-381</td></tr> <tr><td>Bando Brand</td><td>FS12-18-381A</td></tr> <tr><td>Goodyear Brand</td><td></td></tr> </table>	1 Alternator Assy	Z599-18-300R-00	1.6L Eng	FP34-18-300R-00	1.8L, 2.0L Eng		2 Pulley, Alternator	B3C7-18-W10	1.6L Eng	FS05-18-W11	1.8L, 2.0L Eng		*Included w/Alternator Assy		3 Bracket, Mounting	FS01-18-371A	1.8L, 2.0L Eng		4 Strap, Alternator	B6BF-18-361C	1.6L Eng	FS05-18-361D	1.8L, 2.0L Eng	FP01-18-363	5 Block, Adjusting		6 Belt, Alternator	B6BF-18-381-9U	1.6L Eng		1.8L, 2.0L Eng	FSJ2-18-381	Bando Brand	FS12-18-381A	Goodyear Brand		 <p>035-03750</p> <table border="0"> <tr><td>1 Coil Assy, Ignition (2)</td><td>ZM01-18-100</td></tr> <tr><td>2 Boot, Spark Plug (2)</td><td>ZM01-18-T08</td></tr> <tr><td colspan="2">*Included w/Ignition Coil Assy</td></tr> <tr><td>3 Wire Set, Ignition</td><td>0000-18-153A</td></tr> <tr><td>4 Condenser</td><td>ZL01-66-991</td></tr> <tr><td>5 Bracket, Condenser</td><td>ZL02-18-28XC</td></tr> <tr><td>6 Sensor, Crank Angle</td><td>ZM01-18-221A</td></tr> <tr><td>7 Module, Powertrain Control</td><td></td></tr> <tr><td>1999-00</td><td></td></tr> <tr><td>w/Calif Emission</td><td></td></tr> <tr><td>Man Trans</td><td>ZM03-18-881C</td></tr> <tr><td>Auto Trans</td><td>ZM04-18-881R-0E</td></tr> <tr><td>w/o Calif Emission</td><td></td></tr> <tr><td>Man Trans</td><td>ZM01-18-881R-0C</td></tr> <tr><td>Auto Trans</td><td>ZM02-18-881R-0E</td></tr> <tr><td>2001-03</td><td></td></tr> <tr><td>Man Trans</td><td>ZM45-18-881C</td></tr> <tr><td>Auto Trans</td><td>ZM46-18-881D</td></tr> <tr><td>8 Bracket, Module (2)</td><td>FP33-18-788</td></tr> <tr><td>9 Cover, Module</td><td>FSJ2-18-88ZA</td></tr> </table>	1 Coil Assy, Ignition (2)	ZM01-18-100	2 Boot, Spark Plug (2)	ZM01-18-T08	*Included w/Ignition Coil Assy		3 Wire Set, Ignition	0000-18-153A	4 Condenser	ZL01-66-991	5 Bracket, Condenser	ZL02-18-28XC	6 Sensor, Crank Angle	ZM01-18-221A	7 Module, Powertrain Control		1999-00		w/Calif Emission		Man Trans	ZM03-18-881C	Auto Trans	ZM04-18-881R-0E	w/o Calif Emission		Man Trans	ZM01-18-881R-0C	Auto Trans	ZM02-18-881R-0E	2001-03		Man Trans	ZM45-18-881C	Auto Trans	ZM46-18-881D	8 Bracket, Module (2)	FP33-18-788	9 Cover, Module	FSJ2-18-88ZA												
1 Manifold, Exhaust	0000-88-C40																																																																																																															
2 Gasket, Manifold	N.A.																																																																																																															
3 Shield, Heat	0000-88-C53																																																																																																															
4 Pipe Assy, Front Exhaust	FSE6-40-500B																																																																																																															
5 Shield, Upper Pipe	FSE6-40-810																																																																																																															
6 Gasket, Pipe	BP48-40-581A																																																																																																															
*Included w/Front Exhaust Pipe Assy																																																																																																																
7 Shield, Pipe Lower	FP30-40-820A																																																																																																															
8 Converter, Catalytic	FSAX-20-55X																																																																																																															
9 Pipe, Intermediate	FSG1-40-300																																																																																																															
9 Muffler	N.A.																																																																																																															
1 Alternator Assy	Z599-18-300R-00																																																																																																															
1.6L Eng	FP34-18-300R-00																																																																																																															
1.8L, 2.0L Eng																																																																																																																
2 Pulley, Alternator	B3C7-18-W10																																																																																																															
1.6L Eng	FS05-18-W11																																																																																																															
1.8L, 2.0L Eng																																																																																																																
*Included w/Alternator Assy																																																																																																																
3 Bracket, Mounting	FS01-18-371A																																																																																																															
1.8L, 2.0L Eng																																																																																																																
4 Strap, Alternator	B6BF-18-361C																																																																																																															
1.6L Eng	FS05-18-361D																																																																																																															
1.8L, 2.0L Eng	FP01-18-363																																																																																																															
5 Block, Adjusting																																																																																																																
6 Belt, Alternator	B6BF-18-381-9U																																																																																																															
1.6L Eng																																																																																																																
1.8L, 2.0L Eng	FSJ2-18-381																																																																																																															
Bando Brand	FS12-18-381A																																																																																																															
Goodyear Brand																																																																																																																
1 Coil Assy, Ignition (2)	ZM01-18-100																																																																																																															
2 Boot, Spark Plug (2)	ZM01-18-T08																																																																																																															
*Included w/Ignition Coil Assy																																																																																																																
3 Wire Set, Ignition	0000-18-153A																																																																																																															
4 Condenser	ZL01-66-991																																																																																																															
5 Bracket, Condenser	ZL02-18-28XC																																																																																																															
6 Sensor, Crank Angle	ZM01-18-221A																																																																																																															
7 Module, Powertrain Control																																																																																																																
1999-00																																																																																																																
w/Calif Emission																																																																																																																
Man Trans	ZM03-18-881C																																																																																																															
Auto Trans	ZM04-18-881R-0E																																																																																																															
w/o Calif Emission																																																																																																																
Man Trans	ZM01-18-881R-0C																																																																																																															
Auto Trans	ZM02-18-881R-0E																																																																																																															
2001-03																																																																																																																
Man Trans	ZM45-18-881C																																																																																																															
Auto Trans	ZM46-18-881D																																																																																																															
8 Bracket, Module (2)	FP33-18-788																																																																																																															
9 Cover, Module	FSJ2-18-88ZA																																																																																																															
EMISSION SYSTEM	BATTERY	IGNITION 1.8L ENG																																																																																																														
 <p>035-03749</p> <table border="0"> <tr><td>1 Valve, EGR</td><td>BP4W-20-300A</td></tr> <tr><td>1.6L Eng</td><td>FSY1-20-300</td></tr> <tr><td>1.8L, 2.0L Eng</td><td>JE27-20-305A</td></tr> <tr><td>2 Gasket, EGR Valve</td><td>Z504-18-741A</td></tr> <tr><td>3 Valve, Solenoid</td><td>ZM01-18-837</td></tr> <tr><td>4 Gasket, Solenoid Valve</td><td>99-00 KLK1-18-840</td></tr> <tr><td>5 Sensor, Coolant Temp</td><td>01-03 B593-18-840A</td></tr> <tr><td>6 Sensor, MAP-See Cruise Control System Section</td><td></td></tr> <tr><td>7 Valve, Solenoid-See Cruise Control System Section</td><td></td></tr> <tr><td>8 Bracket, Sensor/Valve</td><td>ZM03-18-835A</td></tr> <tr><td>9 Valve, No. 1 Solenoid</td><td></td></tr> <tr><td>1.6L Eng</td><td>BP5W-18-741</td></tr> <tr><td>1.8L, 2.0L Eng</td><td>FS05-18-741</td></tr> <tr><td>10 Valve, No. 2 Solenoid</td><td></td></tr> <tr><td>1.6L Eng</td><td>ZM03-18-741</td></tr> <tr><td>1.8L, 2.0L Eng</td><td>KL01-18-741</td></tr> <tr><td>11 Bracket, Solenoid Valve</td><td></td></tr> <tr><td>1999-00</td><td></td></tr> <tr><td>1.6L Eng</td><td>JE97-18-837B</td></tr> <tr><td>w/Calif Emission</td><td>ZM01-18-837</td></tr> <tr><td>w/o Calif Emission</td><td></td></tr> <tr><td>1.8L</td><td>JE98-18-836</td></tr> <tr><td>2001-03</td><td>JE98-18-836</td></tr> <tr><td>12 Canister, Vapor</td><td>KLG4-13-970</td></tr> <tr><td>13 Bracket, Vapor Canister (2)</td><td>ZM01-18-835</td></tr> <tr><td>14 Protector, Canister</td><td>BJ0E-42-791A</td></tr> <tr><td>15 Sensor, Exh Manifold Oxygen</td><td></td></tr> <tr><td>1.6L Eng</td><td>ZM03-18-861A-9U</td></tr> <tr><td>w/Calif Emission</td><td>ZM01-18-861A-9U</td></tr> <tr><td>w/o Calif Emission</td><td>FP49-18-861-9U</td></tr> <tr><td>1.8L Eng</td><td>FS7N-18-861-9U</td></tr> <tr><td>2.0L Eng</td><td></td></tr> <tr><td>16 Sensor, Exh Pipe Oxygen</td><td></td></tr> <tr><td>1.6L Eng</td><td>ZM02-18-861A-9U</td></tr> </table>	1 Valve, EGR	BP4W-20-300A	1.6L Eng	FSY1-20-300	1.8L, 2.0L Eng	JE27-20-305A	2 Gasket, EGR Valve	Z504-18-741A	3 Valve, Solenoid	ZM01-18-837	4 Gasket, Solenoid Valve	99-00 KLK1-18-840	5 Sensor, Coolant Temp	01-03 B593-18-840A	6 Sensor, MAP-See Cruise Control System Section		7 Valve, Solenoid-See Cruise Control System Section		8 Bracket, Sensor/Valve	ZM03-18-835A	9 Valve, No. 1 Solenoid		1.6L Eng	BP5W-18-741	1.8L, 2.0L Eng	FS05-18-741	10 Valve, No. 2 Solenoid		1.6L Eng	ZM03-18-741	1.8L, 2.0L Eng	KL01-18-741	11 Bracket, Solenoid Valve		1999-00		1.6L Eng	JE97-18-837B	w/Calif Emission	ZM01-18-837	w/o Calif Emission		1.8L	JE98-18-836	2001-03	JE98-18-836	12 Canister, Vapor	KLG4-13-970	13 Bracket, Vapor Canister (2)	ZM01-18-835	14 Protector, Canister	BJ0E-42-791A	15 Sensor, Exh Manifold Oxygen		1.6L Eng	ZM03-18-861A-9U	w/Calif Emission	ZM01-18-861A-9U	w/o Calif Emission	FP49-18-861-9U	1.8L Eng	FS7N-18-861-9U	2.0L Eng		16 Sensor, Exh Pipe Oxygen		1.6L Eng	ZM02-18-861A-9U	 <p>035-03234</p> <table border="0"> <tr><td>1 Box, Battery</td><td>B6BF-18-591</td></tr> <tr><td>2 Clamp, Battery</td><td>B26H-56-03XD</td></tr> <tr><td>3 Bolt, Clamp</td><td>0223-54-225</td></tr> <tr><td>4 Battery</td><td>N.A.</td></tr> <tr><td colspan="2">*Order by Application</td></tr> <tr><td>5 Tray, Battery</td><td>B26E-56-041C</td></tr> <tr><td>6 Bracket, Battery Tray</td><td>B25D-56-04YA</td></tr> </table>	1 Box, Battery	B6BF-18-591	2 Clamp, Battery	B26H-56-03XD	3 Bolt, Clamp	0223-54-225	4 Battery	N.A.	*Order by Application		5 Tray, Battery	B26E-56-041C	6 Bracket, Battery Tray	B25D-56-04YA	 <p>035-03751</p> <table border="0"> <tr><td>1 Coil/Igniter</td><td>FPY2-18-10X</td></tr> <tr><td>2 Bracket, Ignition Coil</td><td>FP47-18-105</td></tr> <tr><td>3 Condenser</td><td>FP39-66-991</td></tr> <tr><td>4 Wire Set, Ignition</td><td>0000-18-152A</td></tr> <tr><td>5 Sensor, Crank Angle</td><td>FSD7-18-221B</td></tr> <tr><td>6 Module, Powertrain Control</td><td></td></tr> <tr><td>w/Calif Emission</td><td></td></tr> <tr><td>Man Trans</td><td>FP51-18-881C</td></tr> <tr><td>Auto Trans</td><td>FP52-18-881R-0E</td></tr> <tr><td>w/o Calif Emission</td><td></td></tr> <tr><td>Man Trans</td><td>FP49-18-881C</td></tr> <tr><td>Auto Trans</td><td>FP50-18-881R-0E</td></tr> <tr><td>7 Bracket, Module (2)</td><td>FP33-18-788</td></tr> <tr><td>8 Cover, Module</td><td>FSJ2-18-88ZA</td></tr> </table>	1 Coil/Igniter	FPY2-18-10X	2 Bracket, Ignition Coil	FP47-18-105	3 Condenser	FP39-66-991	4 Wire Set, Ignition	0000-18-152A	5 Sensor, Crank Angle	FSD7-18-221B	6 Module, Powertrain Control		w/Calif Emission		Man Trans	FP51-18-881C	Auto Trans	FP52-18-881R-0E	w/o Calif Emission		Man Trans	FP49-18-881C	Auto Trans	FP50-18-881R-0E	7 Bracket, Module (2)	FP33-18-788	8 Cover, Module	FSJ2-18-88ZA
1 Valve, EGR	BP4W-20-300A																																																																																																															
1.6L Eng	FSY1-20-300																																																																																																															
1.8L, 2.0L Eng	JE27-20-305A																																																																																																															
2 Gasket, EGR Valve	Z504-18-741A																																																																																																															
3 Valve, Solenoid	ZM01-18-837																																																																																																															
4 Gasket, Solenoid Valve	99-00 KLK1-18-840																																																																																																															
5 Sensor, Coolant Temp	01-03 B593-18-840A																																																																																																															
6 Sensor, MAP-See Cruise Control System Section																																																																																																																
7 Valve, Solenoid-See Cruise Control System Section																																																																																																																
8 Bracket, Sensor/Valve	ZM03-18-835A																																																																																																															
9 Valve, No. 1 Solenoid																																																																																																																
1.6L Eng	BP5W-18-741																																																																																																															
1.8L, 2.0L Eng	FS05-18-741																																																																																																															
10 Valve, No. 2 Solenoid																																																																																																																
1.6L Eng	ZM03-18-741																																																																																																															
1.8L, 2.0L Eng	KL01-18-741																																																																																																															
11 Bracket, Solenoid Valve																																																																																																																
1999-00																																																																																																																
1.6L Eng	JE97-18-837B																																																																																																															
w/Calif Emission	ZM01-18-837																																																																																																															
w/o Calif Emission																																																																																																																
1.8L	JE98-18-836																																																																																																															
2001-03	JE98-18-836																																																																																																															
12 Canister, Vapor	KLG4-13-970																																																																																																															
13 Bracket, Vapor Canister (2)	ZM01-18-835																																																																																																															
14 Protector, Canister	BJ0E-42-791A																																																																																																															
15 Sensor, Exh Manifold Oxygen																																																																																																																
1.6L Eng	ZM03-18-861A-9U																																																																																																															
w/Calif Emission	ZM01-18-861A-9U																																																																																																															
w/o Calif Emission	FP49-18-861-9U																																																																																																															
1.8L Eng	FS7N-18-861-9U																																																																																																															
2.0L Eng																																																																																																																
16 Sensor, Exh Pipe Oxygen																																																																																																																
1.6L Eng	ZM02-18-861A-9U																																																																																																															
1 Box, Battery	B6BF-18-591																																																																																																															
2 Clamp, Battery	B26H-56-03XD																																																																																																															
3 Bolt, Clamp	0223-54-225																																																																																																															
4 Battery	N.A.																																																																																																															
*Order by Application																																																																																																																
5 Tray, Battery	B26E-56-041C																																																																																																															
6 Bracket, Battery Tray	B25D-56-04YA																																																																																																															
1 Coil/Igniter	FPY2-18-10X																																																																																																															
2 Bracket, Ignition Coil	FP47-18-105																																																																																																															
3 Condenser	FP39-66-991																																																																																																															
4 Wire Set, Ignition	0000-18-152A																																																																																																															
5 Sensor, Crank Angle	FSD7-18-221B																																																																																																															
6 Module, Powertrain Control																																																																																																																
w/Calif Emission																																																																																																																
Man Trans	FP51-18-881C																																																																																																															
Auto Trans	FP52-18-881R-0E																																																																																																															
w/o Calif Emission																																																																																																																
Man Trans	FP49-18-881C																																																																																																															
Auto Trans	FP50-18-881R-0E																																																																																																															
7 Bracket, Module (2)	FP33-18-788																																																																																																															
8 Cover, Module	FSJ2-18-88ZA																																																																																																															
	HORN																																																																																																															
	 <p>035-03235</p> <table border="0"> <tr><td>1 Horn</td><td>99-00 B25D-66-790</td></tr> <tr><td></td><td>01-03 B30E-64-790</td></tr> </table>	1 Horn	99-00 B25D-66-790		01-03 B30E-64-790																																																																																																											
1 Horn	99-00 B25D-66-790																																																																																																															
	01-03 B30E-64-790																																																																																																															

MAZDA PROTEGE/PROTEGE5 1999-03


IGNITION 2.0L ENG

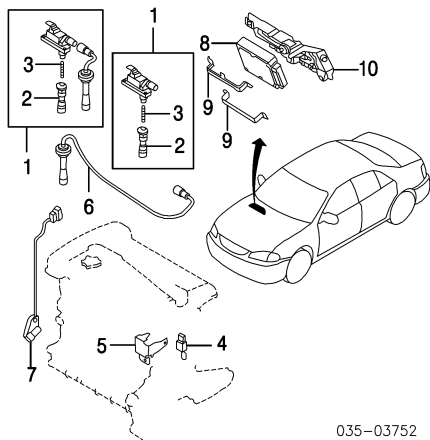

035-03752

- 1 Coil Assy, Ignition (2) FFY1-18-100
- 2 Boot, Spark Plug (2) KJ01-18-T08
- 3 Spring, Ignition Coil (2) KJ01-18-T07
*Included w/Ignition Coil Assy
- 4 Condenser ZL01-66-991
- 5 Bracket, Condenser FP85-18-28XB
- 6 Wire Set, Ignition
No. 1 FP85-18-140A
No. 2 FP86-18-140A
- 7 Sensor, Crank Angle
No. 1 FSD7-18-221B
No. 2 N3A1-18-221A
- 8 Module, Powertrain Control
2001
DX, ES, LX, SE Model
w/Sport Mode
Man Trans FS9N-18-881C
Auto Trans FSAR-18-881
w/o Sport Mode
Man Trans FS8L-18-881C
Auto Trans FS8M-18-881C
MP3 Model FS9N-18-881C
2002
w/Sport Mode
Man Trans N.A.
Auto Trans FSAR-18-881
w/o Sport Mode
Man Trans FS8L-18-881C
Auto Trans FS8M-18-881C
2003
DX, ES, LX, SE Model
w/Sport Mode
Man Trans FS9N-18-881C
Auto Trans FSBB-18-881C
w/o Sport Mode
Man Trans FS8L-18-881C
Auto Trans FSAF-18-881C
MAZDASPEED Model FSAE-18-881D
9 Bracket, Module (2) FP33-18-788
- 10 Cover, Module FSJ2-18-88ZA

STARTER

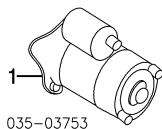


035-03753

- 1 Starter
1.6L Eng
1999-00
Man Trans
Denso Brand B676-18-400R-00
Mitsubishi B676-18-400R-00
Auto Trans BPD4-18-400R-00
2001-03 BPD4-18-400R-00
1.8L Eng
Man Trans FP13-18-400R-00
Auto Trans FP50-18-400R-00
2.0L Eng
Man Trans FP13-18-400R-00
Auto Trans FP50-18-400R-00

WINDSHIELD


Illustration Located in Next Column

- 1 Windshield Assy

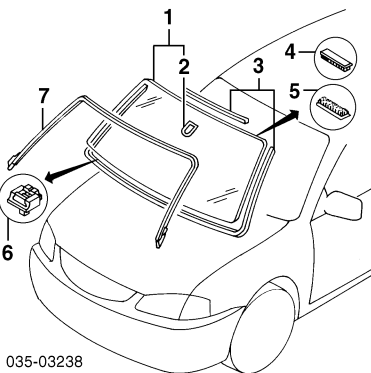

035-03238


- Mazda
DX, ES, LX, MP3, SE Model BJ0G-63-900D
MAZDASPEED Model BP7H-63-900B
BC1C-69-240
- 2 Base, Mirror *Included w/Windshield Assy
 - 3 Dam, Windshield GA7B-50-899
 - 4 Fastener, No. 1 Glass (2) S09A-50-896A
 - 5 Fastener, No. 2 Glass (2) GE4T-50-898A
 - 6 Spacer, Windshield (2) B16A-50-891
 - 7 Moulding, Windshield B25D-50-601D

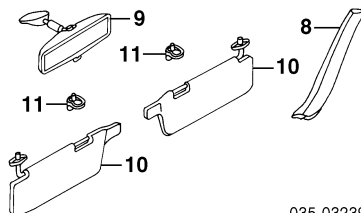

035-03239

- 8 Moulding, W/S Garnish
1999-00 * R B25D-68-160-48
L B25D-68-170-48
2001-03
Beige R BL8D-68-160-80
L BL8D-68-170-80
Gray R BL8D-68-160-03
L BL8D-68-170-03
*Gray listed, Order by Application
- 9 Mirror, Rear View HG82-69-220A
- 10 Visor, Sun R BJ0W-69-270A-48
L BJ0W-69-320A-48
R/L B01A-69-261A-48
- 11 Clip, Visor *Gray listed, Order by Application


WIPER SYSTEM

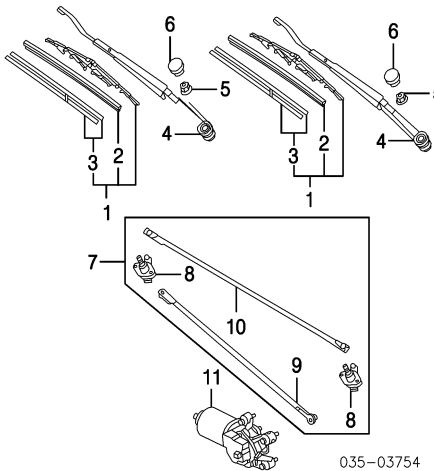

035-03754

- 1 Blade Assy, Wiper R BJ0F-67-330-9U
L BJ0E-67-330-9U
- 2 Insert, Wiper R/L BJ0F-67-333
- 3 Plate, Backing R BJ0E-67-332
L BJ0F-67-332
*Included w/Wiper Blade Assy
- 4 Arm, Wiper R BJ0F-67-321
L BJ0E-67-321
- 5 Nut, Wiper Arm R/L 9090-10-801
- 6 Cap, Wiper Arm R/L LA01-67-395C
- 7 Linkage Assy, Wiper
w/Cold Climate Spec BJ0F-67-360B
w/o Cold Climate Spec BJ0E-67-360C

- 8 Pivot, Wiper w/Cold Climate Spec R/L BJ0F-67-363-4
w/o Cold Climate Spec R/L BJ0E-67-363-4
- 9 Link, Wiper Motor BJ0E-67-361A
- 10 Link, Wiper Pivot BJ0E-67-362
*Included w/Wiper Linkage Assy
- 11 Motor, Wiper BJ0E-67-340E

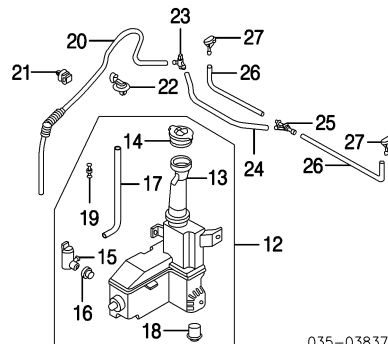

035-03837

- 12 Tank Assy, Washer
Hatchback
2.2 Liter Tank B30P-67-480A
5.1 Liter Tank BN5V-67-480A
Sedan
1999-00 B25D-67-480E
2001
To 4-1-01
2.2 Liter Tank B25D-67-480E
5.1 Liter Tank BJ0E-67-480F
From 4-1-01
2.2 Liter Tank B25D-67-480G
5.1 Liter Tank BJ0E-67-480H
2002-03
2.2 Liter Tank B30D-67-480
5.1 Liter Tank BL9B-67-480
- 13 Tank, Washer Hatchback
2.2 Liter Tank B30P-67-481
5.1 Liter Tank N.A.
Sedan
2.2 Liter Tank B25D-67-481
5.1 Liter Tank BJ0E-67-480
- 14 Cap, Tank Hatchback
FD01-67-483
Sedan
GJ21-67-483
- 15 Pump, Washer 1999-01 S084-76-672
2002-03
Hatchback (2) B25D-67-482A
Sedan B25D-67-482A
- 16 Grommet, Pump Hatchback (2) S084-76-677
Sedan S084-76-677
- 17 Hose, Pump Sedan
1999-00 B25G-67-501A
2001
To 4-1-01 B25G-67-501A
From 4-1-01 B25G-67-501B
2002-03 B25G-67-501B
- 18 Sensor, Level Canada N.A.
DB05-67-502
- 19 Connector, Hose *Included w/Washer Tank Assy
- 20 Hose, Washer Fluid B25E-67-501B
- 21 Clip, Hose N326-20-811
- 22 Clip, Hose B092-67-519A
- 23 Connector, Hose M020-67-505
- 24 Hose, Washer B25D-67-501
- 25 Tee, Washer Hose GA2A-67-505
- 26 Hose, Washer Nozzle R S084-67-502
L C105-67-501
R BJ0F-67-510B
L BJ0E-67-510C
- 27 Nozzle, Washer


COWL & DASH

Illustration Located in Next Column

- 1 Grille Assy, Cowl BJ0J-50-790A
- 2 Clip, Grille (5) GA7B-50-797A
*Included w/Cowl Grille Assy
- 3 Grommet, Screw R/L BJ0J-50-798
- 4 Cap, Screw R/L E016-50-796
- 5 Panel Assy, Cowl BJ0J-53-500L
- 6 Member, Upper Dash 1999-00 BJ0J-53-522C
2001-03-Service w/Cowl Panel Assy
- 7 Bracket, Wiper Motor 1999-00 BJ0J-54-513
2001-03-Service w/Cowl Panel Assy
- 8 Panel, Front Cowl 1999-00 BJ0J-53-5B0B
2001-03-Service w/Cowl Panel Assy
*Included w/Cowl Panel Assy

MAZDA PROTEGE/PROTEGE5 1999-03


COWL & DASH Cont'd

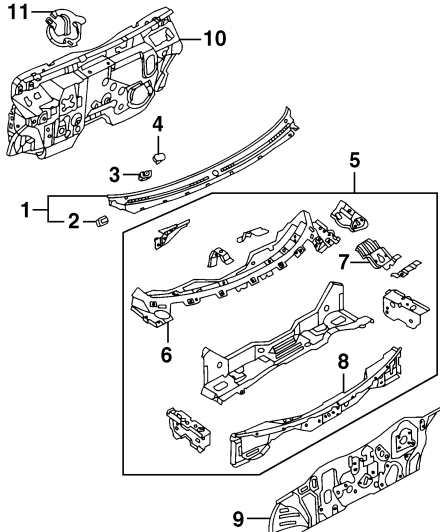

035-03241

- 9 Panel, Lower Dash BJJY-53-4A0C
- 10 Insulator, Dash
 - 1.6L Eng BJOE-68-63XD
 - Man Trans BJ2G-68-63X
 - Auto Trans
 - 1.8L, 2.0L Eng BJOE-68-63XD
 - Man Trans BJ2G-68-63XA
 - Auto Trans BJOE-68-63Z
- 11 Cover, Hole


INSTRUMENT PANEL

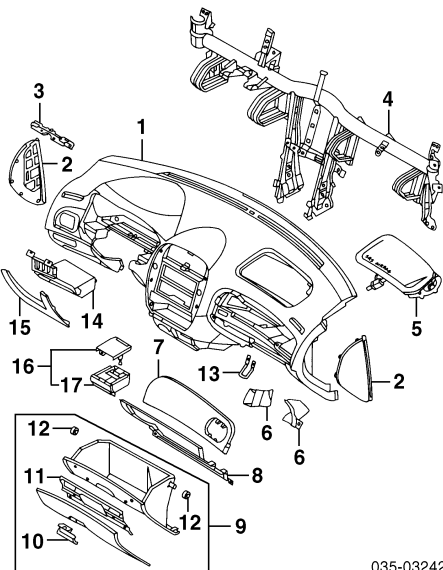

035-03242

- 1 Panel, Instrument
 - 1999-00 Brown BJOJ-60-401B-90
 - Gray BJOJ-60-401B-43
 - 2001-03 Black BJOJ-60-401C-65
 - Black/Gray BJOJ-60-401C-67
 - Brown/Beige BJOJ-60-401C-82
- 2 Panel, Side
 - 1999-00 Brown R B25G-64-950B-90
 - L B25G-64-960B-90
 - Gray R B25G-64-950B-43
 - L B25G-64-960B-43
 - 2001-03 Beige R B25G-64-950B-22
 - L B25G-64-960B-22
 - Black R B25G-64-950B-65
 - L B25G-64-960B-65
 - B25D-55-991A
- 3 Bracket, Panel
- 4 Crossmember, Panel 99-00 BJOJ-60-420B
- 01-03 BL8D-60-420A
- 5 Module, Pass Air Bag-See Air Bag System Section
- 6 Collar, Instrument Panel Front BJOJ-60-403

- 7 Pad, Instrument Panel Rear BJOJ-60-404A
- 1999-00 Brown BJOJ-60-360-90
- Gray BJOJ-60-360-43
- 2001-03 Black BJOJ-60-360-65
- Brown BJOJ-60-360-22
- Black/Gray BJOJ-64-260A
- 8 Panel, Lower
- 9 Box Assy, Glove
 - 1999-00 Brown BJOJ-64-030D-90
 - Gray BJOJ-64-030D-43
 - 2001-03 Beige BL8D-64-030A-80
 - Black BL8D-64-030A-65
 - Gray BL8D-64-030A-05
- 10 Latch, Glove Box
 - 1999-00 Brown BJOE-64-090-90
 - Gray BJOE-64-090-43
 - 2001-03 Beige GE4T-64-090F-80
 - Black GE4T-64-090F-65
 - Gray GE4T-64-090F-05
 - Black BJOE-64-061
 - Gray BJOE-64-073
- 11 Reinf, Glove Box
 - 1999-00 Brown BJOE-64-090-90
 - Gray BJOE-64-090-43
 - 2001-03 Beige GE4T-64-090F-80
 - Black GE4T-64-090F-65
 - Gray GE4T-64-090F-05
 - Black BJOE-64-061
 - Gray BJOE-64-073
- 12 Stopper, Glove Box
 - 1999-00 Brown BJOE-64-090-90
 - Gray BJOE-64-090-43
 - 2001-03 Beige GE4T-64-090F-80
 - Black GE4T-64-090F-65
 - Gray GE4T-64-090F-05
 - Black BJOE-64-061
 - Gray BJOE-64-073
- 13 Striker, Latch LB82-64-101
- 14 Pocket, Panel BJOJ-64-181
- 15 Panel, Lower
 - 1999-00 Brown BJOJ-64-280-90
 - Gray BJOJ-64-280-43
 - 2001-03 Beige BJOJ-64-280-80
 - Black BJOJ-64-280-65
 - Gray BJOJ-64-280-05
- 16 Ashtray Assy
 - 1999-00 Brown B25G-64-610C-90
 - Gray B25G-64-610C-43
 - 2001-03 Beige B25G-64-610C-80
 - Black B25G-64-610C-65
 - Gray B25G-64-610C-05
- 17 Ashtray
 - 1999-00 Brown B25G-64-630C-90
 - Gray B25G-64-630C-43
 - 2001-03 Beige B25G-64-610C-80
 - Black B25G-64-630C-65
 - Gray B25G-64-610C-05

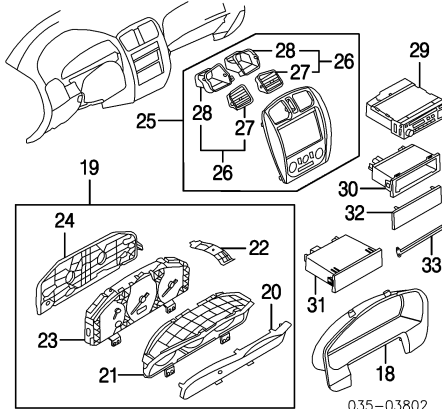


035-03802

- 18 Bezel, Cluster B25G-55-420A
- 19 Cluster Assy, Instrument
 - w/Tachometer 1999 w/Keyless Entry To 7-28-99 BJOJ-55-430B
 - From 7-28-99 BJOJ-55-430C
 - w/o Keyless Entry To 7-28-99 BJOJ-55-430B
 - From 7-28-99 BJOJ-55-430C
 - 2000 w/Keyless Entry BJOJ-55-430C
 - w/o Keyless Entry BJOJ-55-430C
 - 2001-03-Serviced by Components w/o Tachometer 1999 To 7-28-99 BJOH-55-430B
 - From 7-28-99 BJOH-55-430C
 - 2000 BJOH-55-430C
 - 2001-03-Serviced by Components B25F-55-447
- 20 Lens, Meter
- 21 Plate, Lens
 - 1999 To 7-28-99 BJOJ-55-446
 - From 7-28-99 C100-55-446
 - 2000-03 C100-55-446
 - BHOV-55-468
- 22 Bracket, Meter
- 23 Speedometer
 - Hatchback BN5W-55-471


- Sedan w/Tachometer 1999 To 7-28-99 BJOH-55-471A
- From 7-28-99 BJOH-55-471B
- 2000 BJOH-55-471B
- 2001-03 Std Panel w/Keyless Entry BL8J-55-471B
- w/o Keyless Entry BL8H-55-471B
- White Panel BN5W-55-471
- w/o Tachometer w/Keyless Entry 1999 To 7-28-99 BJOJ-55-471A
- From 7-28-99 BJOJ-55-471B
- 2000 BJOJ-55-471B
- 2001-03 w/o Keyless Entry BL8J-55-471B
- 1999 To 7-28-99 BJOJ-55-471A
- From 7-28-99 BJOJ-55-471B
- 2000 BJOJ-55-471B
- 2001-03 BL8E-55-471B
- 24 Case, Meter
 - 1999 B25F-55-441
 - 25 Panel Assy, Center Trim
 - Hatchback 2002 To 3-1-01 BN5V-55-210-20
 - From 3-1-01 BP6B-55-210-25
 - 2003 BP6B-55-210-25
 - Sedan 1999-00 BJOJ-55-210D-00
 - 2001-03 DX, ES, LX, SE Model w/Silver Panel BL8M-55-210B-20
 - w/o Silver Panel BL4C-55-210-25
 - Beige BL4C-55-210-61
 - Gray MP3 Model BN5V-55-210-20
 - MAZDASPEED Model BP6B-55-210-25
 - 26 Vent Assy
 - 1999-00 R B25G-64-930B
 - L B25F-64-930D-00
 - 2001-03 Black R B25G-64-930D-65
 - L B25F-64-930D-65
 - Brown R B25G-64-930D-22
 - L B25F-64-930D-22
 - 27 Louver, Vent
 - (a) 1999-00 R B25G-64-91XA-00
 - L B25F-64-91XA-00
 - 2001-03 Black R B25G-64-91XA-65
 - L B25F-64-91XA-65
 - R B25G-64-91XA-22
 - L B25F-64-91XA-22
 - Brown R B25G-64-932B
 - L B25F-64-932B
 - 2001-03 R B25G-64-932C
 - L B25F-64-932C
 - 28 Case, Louver
 - (a) 1999-00 R B25G-64-932B
 - L B25F-64-932B
 - 2001-03 R B25G-64-932C
 - L B25F-64-932C
 - 29 Radio
 - Hatchback BL8D-66-AS0
 - Sedan 1999-00 GD7C-66-9R0
 - 2001-03 w/CD Player BL8D-66-9S0A
 - Amber Illuminated BL8G-66-9R0
 - Green Illumination
 - w/o CD Player BL8D-66-AS0
 - Amber Illuminated BL8G-66-9R0
 - Green Illumination B02A-66-9M0A
 - 30 Pocket, Filler Ornament, Radio MP3, MAZDASPEED Model
 - 31 No. 1 BJOH-66-9M0
 - 32 No. 2 B03A-66-9M0
 - 33 Bracket, Ornament MP3, MAZDASPEED Model TA06-66-9B1
- 34 Control Assy, Heater 1999-00 BJOE-61-190J
- 2001-03 w/A/C BL8W-61-190F
- Amber Illuminated BL8F-61-190D
- Green Illumination
- w/o A/C BL8T-61-190C
- Amber Illuminated

035-03803

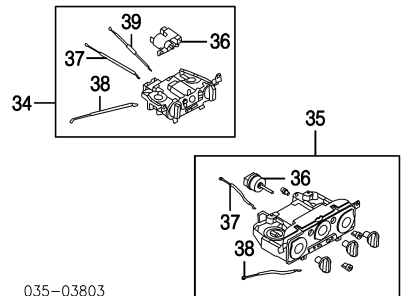


MAZDA PROTEGE/PROTEGE5 1999-03

- 36 **Switch, Fan**] Green Illumination
99-00 BL8D-61-190D
01-03 S38A-61-C50
- 37 **Wire, Temp Control**] 99-00 LB83-61-200A
01-03 BJ0E-61-C25A
- 38 **Wire, Mode Control**] 01-03 BL4C-61-C25A
99-00 BJ0E-61-C35A
- 39 **Wire, Recycle/Fresh**] 01-03 BL4C-61-C35B
BJ0E-61-C45C
*Included w/Heater Control Assy

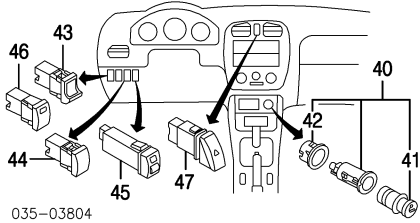

035-03804

- 40 **Lighter Assy**
1999-00 G13H-66-250
2001-03
Amber Illuminated F146-66-250
Green Illumination G13H-66-250
- 41 **Element, Lighter**
C001-66-252
- 42 **Ring, Illumination**] 1999-00 B001-66-251
2001-03
Amber Illuminated N066-66-251
Green Illumination B001-66-251
*Included w/Lighter Assy
- 43 **Cover, Hole** G14F-55-225A
- 44 **Cover, Hole (2)** GE4T-55-225A
- 45 **Rheostat, Dash Light**
Amber Illuminated BN4G-66-6R0
Green Illumination GE4T-66-6R0B
- 46 **Switch, Fog Lamp**
Amber Illuminated D342-66-4B0
Green Illumination GE4T-66-4B0
- 47 **Switch, Hazard**
1999-00
Kostal Japan Brand B25D-66-4H0-00
Tokai Rika Brand B25E-66-4H0-00
2001-03
Black B25E-66-4H0-65
Brown B25E-66-4H0-22

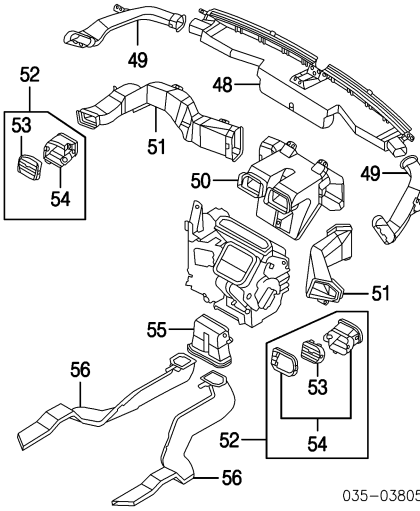


035-03805

- 48 **Duct, Defroster** BJ0J-60-120
- 49 **Duct, Side Defroster** R BJ0J-60-181
L BJ0J-60-191
- 50 **Duct, Center** BJ0J-64-94Y
- 51 **Duct, Outer** R BJ0J-64-74X
L BJ0J-64-841A
- 52 **Vent Assy**
1999-00 R BJ0J-64-730-90
Brown L BJ0J-64-830A-90
Gray R BJ0J-64-730-43
L BJ0J-64-830A-43
2001-03
Black R BJ0J-64-730-65
Brown L BJ0J-64-830A-65
R BJ0J-64-730-22
L BJ0J-64-830A-22
- 53 **Louver, Vent**] 1999-00 R B25G-64-71X-90
Brown L B25G-64-81X-90
Gray R B25G-64-71X-43
L B25G-64-81X-43
2001-03
Black R B25G-64-71X-65
L B25G-64-81X-65

- 54 **Case, Louver**] 1999-00 R B25G-64-71X-22
Brown L B25G-64-81X-22
- 55 **Duct, Front Lower-Serviced w/Heater Assy**
2001-03-Serviced w/Vent Assy
*Included w/Vent Assy
- 56 **Duct, Rear Lower** R/L GE4T-61-272-3

CENTER CONSOLE

1999-00 DX MODEL

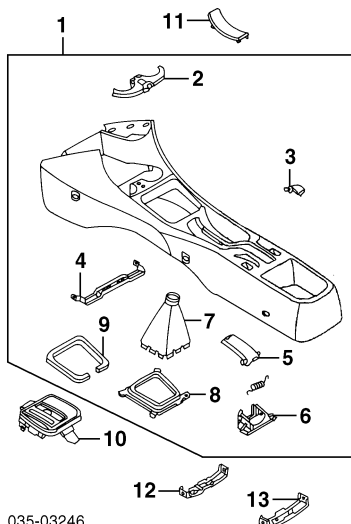


035-03246

- 1 **Console Assy**
Brown B25F-64-420C-90
Gray B25F-64-420C-43
- 2 **Holder, Cup**] Brown B25G-64-39X-90
Gray B25G-64-39X-43
- 3 **Cover, Hole**] Brown B25G-64-424-90
Gray B25G-64-424-43
GE4T-64-416C
- 4 **Bracket, Front**] Gray
- 5 **Panel, Upper**] Brown GE4T-64-431B-90
Gray GE4T-64-431B-43
B25G-64-393
- 6 **Cover**] Gray
- 7 **Boot, Shift**] Man Trans GA5R-64-331
- 8 **Plate, Shift**] Man Trans GE4T-64-333
- 9 **Auto Trans-Serviced w/Console Assy**
*Included w/Console Assy
- 10 **Indicator, Shift**
Auto Trans BJ0J-64-350
- 11 **Plate, Filler**
Brown B25D-64-362-90
Gray B25D-64-362-43
- 12 **Bracket, Center** B25G-64-426
- 13 **Bracket, Rear Lower** GE4T-64-436

1999-00 LX, ES, SE MODEL

Illustration Located in Next Column


- 1 **Console Assy**
Brown B25N-64-420A-90
Gray B25N-64-420A-43
- 2 **Holder, Cup**] Brown B25G-64-39X-90
Gray B25G-64-39X-43
- 3 **Cover, Hole**] Brown BJ0J-64-424A-90
Gray BJ0J-64-424A-43
BJ0J-64-432
- 4 **Boot, Parking Brake**] Gray
- 5 **Lid Assy, Console**] Brown BJ0J-64-450B-90
Gray BJ0J-64-450B-43
BC1G-64-45YA
BJ0J-64-45X
(a) Included w/Console Lid Assy
- 6 **Latch, Lid**] (a)
- 7 **Hinge, Lid**] (a)
- 8 **Cover, Rear**] Brown GC5D-64-626A-90
Gray GC5D-64-626A-43
- 9 **Bracket, Front**] GE4T-64-416C

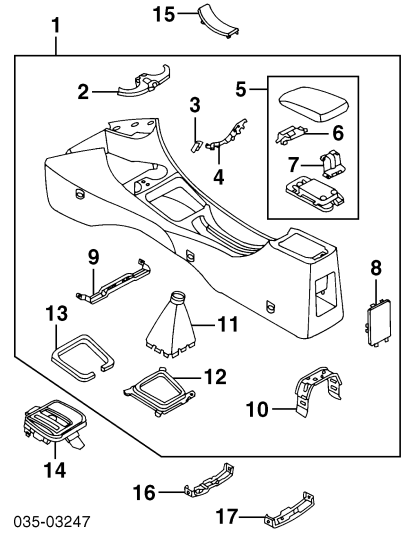

035-03247

- 10 **Bracket, Rear Upper**] BJ0J-64-446
- 11 **Boot, Shift**] Man Trans GA5R-64-331
- 12 **Plate, Shift**] Man Trans GE4T-64-333
- 13 **Auto Trans-Serviced w/Console Assy**
*Included w/Console Assy
- 14 **Indicator, Shift**
Auto Trans BJ0J-64-350
- 15 **Plate, Filler**
Brown GE4T-64-362C-90
Gray GE4T-64-362C-43
- 16 **Bracket, Center** B25G-64-426
- 17 **Bracket, Rear Lower** GE4T-64-436

2001-03

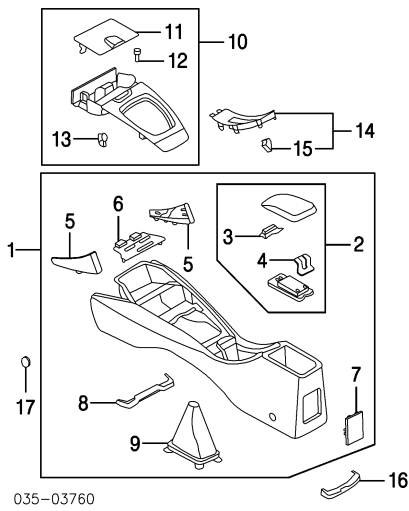

035-03760


- 1 **Console Assy**
2001
Man Trans
Beige/Brown B30D-64-420B-80
Black/Black B30D-64-420B-65
Gray/Brown B30D-64-420B-05
Auto Trans
Beige B30E-64-420B-80
Black B30E-64-420B-65
Gray B30E-64-420B-05
2002
To 3-1-02
Man Trans
Beige/Brown B30D-64-420B-80
Black/Black B30D-64-420B-65
Gray/Brown B30D-64-420B-05
Auto Trans
Beige B30E-64-420B-80
Black B30E-64-420B-65
Gray B30E-64-420B-05
From 3-1-02
Man Trans
Beige BL8D-64-420-80
Black BL8D-64-420-65
Gray BL8D-64-420-05
Auto Trans
Beige BL8H-64-420-80
Black BL8H-64-420-65

MAZDA PROTEGE/PROTEGE5 1999-03


CENTER CONSOLE Cont'd	
2001-03 Cont'd	
Gray	BL8H-64-420-05
2003 DX, ES, LX, SE Model Man Trans	
Beige	BL8D-64-420-80
Black	BL8D-64-420-65
Gray	BL8D-64-420-05
Auto Trans	
Beige	BL8H-64-420-80
Black	BL8H-64-420-65
Gray	BL8H-64-420-05
MAZDASPEED Model	
Beige/Brown	BP7H-64-420A-80
Black/Black	BP7H-64-420A-65
Gray/Black	BP7H-64-420A-05
2 Lid Assy, Console	
Beige	BJ0J-64-450B-80
Black	BJ0J-64-450B-65
Gray	BJ0J-64-450B-05
3 Latch, Lid (a)	BC1G-64-45YA
4 Hinge, Lid (a)	BJ0J-64-45X
<i>(a) Included w/Console Lid Assy</i>	
5 Cover, Front Side	
2001	
Beige	R B30D-64-231A-80
	L B30D-64-241A-80
Black	R B30D-64-231A-65
	L B30D-64-241A-65
Gray	R B30D-64-231A-05
	L B30D-64-241A-05
2002	
To 3-1-02	
Beige	R B30D-64-231A-80
	L B30D-64-241A-80
Black	R B30D-64-231A-65
	L B30D-64-241A-65
Gray	R B30D-64-231A-05
	L B30D-64-241A-05
From 3-1-02	
Beige	R BL8D-64-231-80
	L BL8D-64-241-80
Black	R BL8D-64-231-65
	L BL8D-64-241-65
Gray	R BL8D-64-231-05
	L BL8D-64-241-05
2003	
Beige	R BL8D-64-231-80
	L BL8D-64-241-80
Black	R BL8D-64-231-65
	L BL8D-64-241-65
Gray	R BL8D-64-231-05
	L BL8D-64-241-05
6 Cover, Front Center	
Beige	B30D-64-424-80
Black	B30D-64-424-65
Gray	B30D-64-424-05
7 Cover, Rear	
Beige	GC5D-64-626A-80
Black	GC5D-64-626A-65
Gray	GC5D-64-626A-05
8 Bracket, Front Console	B30D-64-416
9 Boot, Shift	
DX, ES, LX, MP3, SE Model Man Trans	
Beige	GG2M-64-330-22
Black	GG2M-64-330-00
MAZDASPEED Model	BP7H-64-330A
<i>(a) Included w/Console Assy</i>	
10 Plate Assy, Upper	
Hatchback	
2002	
To 3-1-02	
Man Trans	B30P-64-340-25
Auto Trans	B31B-64-340A-20
From 3-1-02	
Man Trans	BN5V-64-340-25
Auto Trans	BN6C-64-340-25
2003	
Man Trans	BN5V-64-340-25
Auto Trans	BN6C-64-340-25
Sedan	
2001	
DX, ES, LX, SE Model Man Trans	
Beige	B30D-64-340A-22
Black	B30D-64-340A-00
Auto Trans	
Beige	B30E-64-340A-22
Black	B30E-64-340A-00
MP3 Model	BN7H-64-340A-20
2002	
To 3-1-02	
Man Trans	B30D-66-340A-22
Beige	B30D-64-340A-00
Black	
Auto Trans	
Beige	B30E-64-340A-22
Black	B30E-64-340A-00
From 3-1-02	
Man Trans	
Black	BL8D-64-340-00
Brown	BL8D-64-340-22
Silver Plated	BN5V-64-340-25
Auto Trans	
Black	BL8H-64-340-00
Brown	BL8H-64-340-22
Silver Plated	BN6C-64-340-25

2003 Man Trans	
Black	BL8D-64-340-00
Brown	BL8D-64-340-22
Silver Plated	BN5V-64-340-25
Auto Trans	
Black	BL8H-64-340-00
Brown	BL8H-64-340-22
Silver Plated	BN6C-64-340-25
11 Cover, Upper	
Hatchback	
Sedan	B31A-64-393A-20
DX, ES, LX, SE Model	
Beige	B30D-64-393A-22
Gray	B30D-64-393A-00
MP3 Model	B31A-64-393A-20
12 Cushion, Cover (3)	B092-64-046
13 Spring, Upper Plate (a)	B30D-64-345
<i>(a) Included w/Upper Plate Assy</i>	
<i>(a) As Required</i>	
14 Plate Assy, Rear	
Beige	B30D-64-43YB-80
Black	B30D-64-43YB-65
Gray	B30D-64-43YB-05
15 Spring, Rear Plate (a)	B30D-64-345
<i>(a) Included w/Rear Plate Assy</i>	
<i>(a) As Required</i>	
16 Bracket, Rear Console	GE4T-64-436
17 Cover, Side Hole	
Beige	R/L GG5H-55-225-80
Black	R/L GG5H-55-225-65
Gray	R/L GG5H-55-225-05

ROCKER/PILLARS/FLOOR

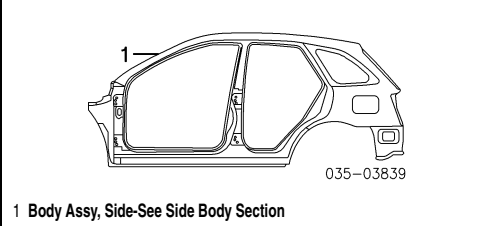


1 Body Assy, Side-See Side Body Section

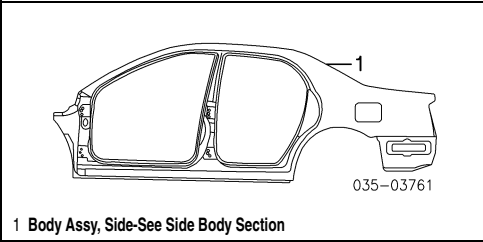


1 Body Assy, Side-See Side Body Section

FLOOR

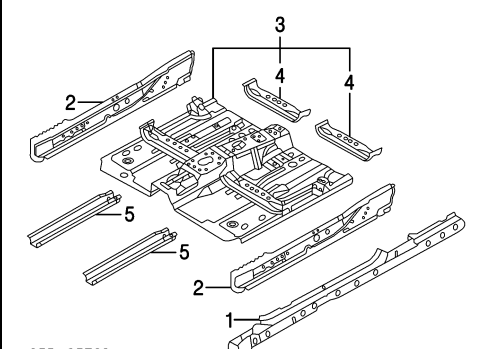

035-03762	
1 Reinf, Rocker Panel	R BJ0J-70-130D L BJ0J-71-130D
2 Panel, Inner Rocker	
Hatchback	R BN5V-53-950 L BN5V-54-950
Sedan	R GE8K-53-950C L GE8K-54-950C
3 Pan Assy, Front Floor	BJ0J-53-600A
4 Crossmember, Floor	R GE4T-53-650A L B25D-54-650
<i>(a) Included w/Front Floor Pan Assy</i>	
5 Frame, Floor	R/L BJ0J-53-660

FRONT SEAT

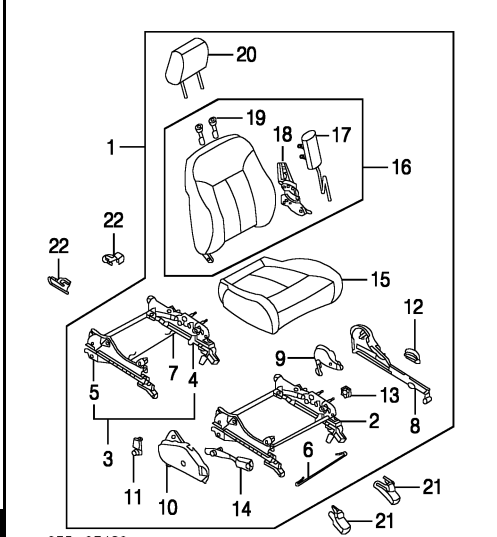

0.35-03489

1 Seat Assy	
Hatchback-Serviced by Components	
Sedan	
1999-00	
DX Model	
Beige/Brown	R BJ0G-57-100K-90
	L BJ0G-57-150F-90
Gray	R BJ0G-57-100H-43
	L BJ0G-57-150F-43
LX Model	
w/Side Air Bags	
Beige/Brown	R BJ0L-57-100B-90
	L BJ0L-57-150E-90
Gray	R BJ0L-57-100B-43
	L BJ0L-57-150E-43
w/o Side Air Bags	
Beige/Brown	R BJ0F-57-100H-90
	L BJ0F-57-150K-90
Gray	R BJ0F-57-100K-43
	L BJ0F-57-150K-43
ES, SE Model	
w/Side Air Bags	
Gray	R BK2L-57-100E-44
	L BK2L-57-150E-44
w/o Side Air Bags	
Gray	R BJ0E-57-100K-44
	L BJ0E-57-150E-44
2001-03-Serviced by Components	
2 Adjuster, Seat (a)	
1 Piece	
Hatchback	
Driver Side	BJ0E-88-H50B
Sedan	
Driver Side	BJ0E-88-H50B
LX, ES Model	
BJ0E-88-H50B	
3 Adjuster Assy, Seat (a)	
2 Piece	
Hatchback	
Passenger Side	B25D-88-A00B
Sedan	
Passenger Side	B25D-88-A00B
Driver Side	B25D-88-A50B
DX Model	
4 Adjuster, Outer (a) (b)	
2 Piece	
Passenger Side	B25D-88-102A
Driver Side	B25D-88-153A
DX Model	
5 Adjuster, Inner (a) (b)	
2 Piece	
Passenger Side	B25D-88-103A
Driver Side	B25D-88-152A
DX Model	
<i>(b) Included w/Seat Adjuster Assy</i>	
6 Wire, Release (a)	R/L B25D-88-026A
7 Wire, Support (a)	
Hatchback	R/L B25D-88-029
Sedan	
DX Model	R/L B25D-88-029
LX, ES Model	R B25D-88-029
8 Cover, Outer (a)	
1999-00	
Brown	R/L B25D-88-1G1-90
Gray	R B25D-88-1G1-43
	L B25D-88-1H3-43
2001-03	
Beige	R B25D-88-1G1-80
	L B25D-88-1H3-80
Black	R B25D-88-1G1-65
	L B25D-88-1H3-65
Gray	R B25D-88-1G1-05
	L B25D-88-1H3-05
9 Shield, Outer Cover (a)	
1999-00	
Brown	R B25D-88-1F4-90

MAZDA PROTEGE/PROTEGE5 1999-03

	Gray	L B25D-88-1G7-90 R B25D-88-1F4-43 L B25D-88-1G7-43
2001-03	Beige	R B25D-88-1F4-80 L B25D-88-1G7-80
	Black	R B25D-88-1F4-65 L B25D-88-1G7-65
	Gray	R B25D-88-1F4-05 L B25D-88-1G7-05
10 Cover, Inner (a)		
1999-00	Brown	R B25D-88-1G3A-90 L B25D-88-1H1A-90
	Gray	R B25D-88-1G3A-43 L B25D-88-1H1A-43
2001-03	Beige	R B25D-88-1G3A-80 L B25D-88-1H1A-80
	Black	R B25D-88-1G3A-65 L B25D-88-1H1A-65
	Gray	R B25D-88-1G3A-05 L B25D-88-1H1A-05
11 Cover, Hinge (a)		
1999-00	Brown	R/L B25D-88-1J2-90
	Gray	R/L B25D-88-1J2-43
2001-03	Beige	R/L B25D-88-1J2-80
	Black	R/L B25D-88-1J2-65
	Gray	R/L B25D-88-1J2-05
12 Knob, Recliner (a)		
1999-00	Brown	R B25D-88-1G5-90 L B25D-88-1H5-90
	Gray	R B25D-88-1G5-43 L B25D-88-1H5-43
2001-03	Beige	R B25D-88-1G5-80 L B25D-88-1H5-80
	Black	R B25D-88-1G5-65 L B25D-88-1H5-65
	Gray	R B25D-88-1G5-05 L B25D-88-1H5-05
13 Dial, Support (a) (2)		
1999-00	Brown	GE4T-88-1L1-90
	Gray	GE4T-88-1L1-43
2001-03	Beige	GE4T-88-1L1-80
	Black	GE4T-88-1L1-65
	Gray	GE4T-88-1L1-05
14 Buckle, Seat Belt (a)		
1999-00	Brown	R B25D-57-680-90 L B25D-57-620B-90
	Gray	R B25D-57-680-43 L B25D-57-620B-43
2001-03	Brown/Beige	R B25D-57-680-82 L B25D-57-620B-82
	Black	R B25D-57-680-66 L B25D-57-620B-66
	Gray/Light Gray	R B25D-57-680-05 L B25D-57-620B-05
15 Cushion, Seat (a)		
1999-00	DX Model	
	Beige/Brown	R B25D-88-110B-90 L B25D-88-160B-90
	Gray	R B25D-88-110B-43 L B25D-88-160B-43
	LX Model	
	Beige/Brown	R BJ0F-88-110B-90 L BJ0F-88-160B-90
	Gray	R BJ0F-88-110B-43 L BJ0F-88-160-43
	ES, SE Model	
	Gray	R BJ0E-88-110B-44 L BJ0E-88-160B-44
2001-03 (b)		R BL8H-88-110-65 L BLBH-88-160A-65
16 Back Assy, Seat (a)		
1999-00	DX Model	
	Beige/Brown	R B25D-88-130C-90 L B25D-88-180C-90
	Gray	R B25D-88-130C-43 L B25D-88-180C-43
	LX Model	
	w/ Side Air Bags	R B25K-88-130E-90 L B25K-88-180F-90
	Beige/Brown	R B25K-88-130E-43 L B25K-88-180F-43
	Gray	R B25K-88-130E-65 L B25K-88-180F-65
	w/o Side Air Bags	R B25J-88-130C-90 L B25J-88-180C-90
	Beige/Brown	R B25J-88-130C-43 L B25J-88-180C-43
	Gray	R B25J-88-130C-65 L B25J-88-180C-65
	ES, SE Model	
	w/ Side Air Bags	R B25G-88-130E-44
	Gray	
	w/o Side Air Bags	R B25E-88-130C-44 L BJ0E-88-180B-44
	Gray	
2001-03 (b)		
	w/ Side Air Bags	R BL8H-88-130A-65 L BL8H-88-180A-65
	Beige/Brown	R BL8D-88-130-65 L BL8D-88-180-65
	Gray	
	w/o Side Air Bags	R BL8H-88-130A-65 L BL8D-88-180-65
	Beige/Brown	
	Gray	
		(b) Black listed, Order by Application

17 Module, Side Air Bag-See Air Bag System Section		
18 Knuckle, Recliner (a) (b)		R B25D-88-101 L B25D-88-155
19 Guide, Headrest (a) (b)		
1999-00	Passenger Side	
	Brown	R B25D-88-1G8A-90 L B25D-88-1G9A-90
	Gray	R B25D-88-1G8A-43 L B25D-88-1G9A-43
	Driver Side	
	Brown	R B25D-88-1G8A-90 L B25D-88-1G9A-90
	Gray	R B25D-88-1G8A-43 L B25D-88-1G9A-43
2001-03	Passenger Side	
	Beige	R B25D-88-1G8A-80 L B25D-88-1G9A-80
	Black	R B25D-88-1G8A-65 L B25D-88-1G9A-65
	Gray	R B25D-88-1G8A-05 L B25D-88-1G9A-05
	Driver Side	
	Beige	R/L B25D-88-1G8A-80
	Black	R B25D-88-1G8A-65 L B25D-88-1G9A-65
	Gray	R B25D-88-1G8A-05 L B25D-88-1G9A-05
		(b) Included w/Seat Back Assy
20 Headrest (a)		
1999-00	DX Model	
	Beige/Brown	R/L B25D-88-140-90
	Gray	R/L B25D-88-140-43
	LX Model	
	Beige/Brown	R/L B25J-88-140-90
	Gray	R/L B25J-88-140-43
	ES Model	
	Gray	R/L B25E-88-140-44
2001-03 (b)		R/L B25E-88-140-65
		(a) Included w/Seat Assy
		(b) Black listed, Order by Application
21 Cover, Front Adjuster		
1999-00	Passenger Side	
	Brown	R GE4T-57-041B-90 L GE4T-57-042B-90
	Gray	R GE4T-57-041B-43 L GE4T-57-042B-43
	Driver Side	
	Brown	R GE4T-57-043B-90 L GE4T-57-044A-90
	Gray	R GE4T-57-043B-43 L GE4T-57-044B-43
2001-03	Passenger Side	
	Beige	R GE4T-57-041B-80 L GE4T-57-042B-80
	Black	R GE4T-57-041B-65 L GE4T-57-042B-65
	Gray	R GE4T-57-041B-05 L GE4T-57-042B-05
	Driver Side	
	Beige	R GE4T-57-043B-80 L GE4T-57-044B-80
	Black	R GE4T-57-043B-65 L GE4T-57-044B-65
	Gray	R GE4T-57-043B-05 L GE4T-57-044B-05
22 Cover, Rear Adjuster		
1999-00	Passenger Side	
	Brown	R B25D-57-051B-90 L GE4T-57-052B-90
	Gray	R B25D-57-051B-43 L GE4T-57-052B-43
	Driver Side	
	Brown	R GE4T-57-053B-90 L B25D-57-054B-90
	Gray	R GE4T-57-053B-43 L B25D-57-054B-43
2001-03	Passenger Side	
	Beige	R B25D-57-051B-80 L GE4T-57-052B-80
	Black	R B25D-57-051B-65 L GE4T-57-052B-65
	Gray	R B25D-57-051B-05 L GE4T-57-052B-05
	Driver Side	
	Beige	R GE4T-57-053B-80 L B25D-57-054B-80
	Black	R GE4T-57-053B-65 L B25D-57-054B-65
	Gray	R GE4T-57-053B-05 L B25D-57-054B-05

REAR SEAT

SEAT BELTS

FRONT

035-03264

1 Belt & Retractor, Seat		
1999-00	Brown	R BJ0E-57-630A-90 L B25D-57-690B-90
	Gray	R BJ0E-57-630A-43 L B25D-57-690B-43
2001-03	Black/Off Black	R BL8D-57-L30B-03 L B30D-57-L90E-03
	Brown/Beige	R BL8D-57-L30B-82 L B30D-57-L90E-82
	Gray	R BL8D-57-L30B-05 L B30D-57-L90E-05
2 Buckle, Seat Belt-See Front Seat Section		
3 Adjuster, Shoulder		
1999-00		R/L B25D-57-960C-48
2001-03	Beige	R/L B25D-57-960C-80
	Gray	R/L B25D-57-960C-03
4 Cover, Belt Anchor		
1999-00		R/L B25D-57-631-48
2001-03	Beige	R/L B25D-57-631-80
	Gray	R/L B25D-57-631-03
		†Gray listed, Order by Application

REAR HATCHBACK

035-03806

1 Belt/Retractor, Outer Belt		R B25H-57-730E-66 L B25H-57-790E-66
2 Belt/Retractor, Center Seat		BN5V-57-740-66
3 Buckle Set, Right Seat		BN5V-57-720-66
4 Buckle Set, Left Seat		BN5V-57-780-66
5 Screen, Retractor		R/L GG3E-57-988
6 Bracket Assy, Retractor		R B25H-57-92XE L B25H-57-99XE
7 Plate, Seat Belt†		R/L B25H-57-985B
		†Included w/Retractor Bracket Assy
8 Cover, Center Belt Anchor		H260-57-631-03

REAR SEDAN


Illustration Located in Next Column

1 Belt & Retractor, Outer Seat		
1999-00	Brown	R BJ0E-57-730F-43 L BJ0E-57-790E-90
	Gray	R BJ0E-57-730F-43 L BJ0E-57-790F-43
2001-03	Black	R B30D-57-730A-66 L B30D-57-790A-66
	Brown/Beige	R B30D-57-730A-82 L B30D-57-790A-82
	Gray/Light Gray	R B30D-57-730A-05 L B30D-57-790A-05

MAZDA PROTEGE/PROTEGE5 1999-03

SEAT BELTS Cont'd


REAR
SEDAN Cont'd

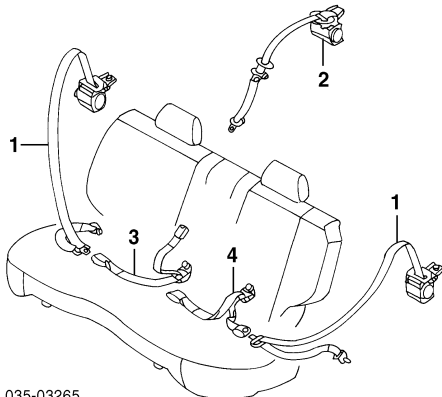

035-03265

- 1 B30D-57-790A-05
- 2 Belt/Retractor, Center Seat**
1999-00 Brown BJOE-57-740C-90
Gray BJOE-57-740D-43
2001-03 Black BL8D-57-740A-66
Brown/Beige BL8D-57-740B-82
Gray BL8D-57-740B-05
- 3 Buckle Set, Right Seat**
1999-00 Brown B25D-57-720A-90
Gray B25D-57-720A-43
2001-03 Black B30D-57-720-66
Brown/Beige B30D-57-720-82
Gray B30D-57-720-05
- 4 Buckle Set, Left Seat**
1999-00 Brown BJ1V-57-780B-90
Gray BJ1V-57-780B-43
2001-03 Black B30D-57-790A-66
Brown/Beige B30D-57-790-92
Gray B30D-57-790A-05

FRONT DOOR SHEET METAL

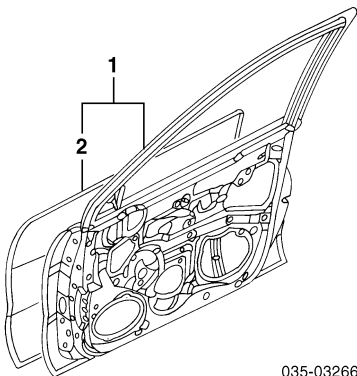


035-03266

- 1 Shell Assy, Door** R BJ0G-58-020D
L BJ0G-59-020D
- 2 Panel, Door Repair** R B25D-58-031D
L B25D-59-031D
†Included w/Door Shell Assy

EXTERIOR TRIM

Illustration Located in Next Column

- 1 Moulding Assy, Outer Belt** R B25D-50-640A
L B25D-50-650A
- 2 Protector, Moulding** R B25D-50-645
L B25D-50-655
†Included w/Outer Belt Moulding Assy
- 3 Sash, Door** R BL2C-50-8V3-00
L BL2C-50-8W3-00

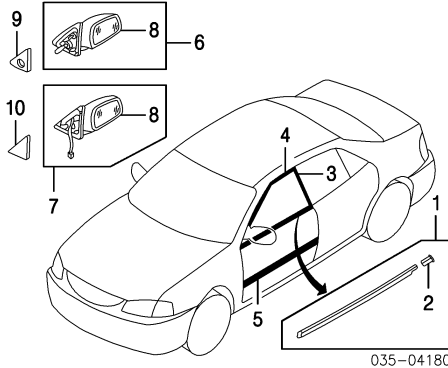

035-04180

- 4 Tape, Black-Out** R BL2C-50-8V1-00
L BL2C-50-8W1-00
- 5 Moulding, Side (Adhesive)**
Black R BJOE-50-682
L BJOE-50-692
- Body Color
Aroma Red (Code 18U) R BJ0F-50-682-13
L BJ0F-50-692-13
Black Mica (Code 16W) R BJ0F-50-682-08
L BJ0F-50-692-08
Blazing Yellow (Code 26S) R BJ0F-50-682-76
L BJ0F-50-692-76
Champagne Silver (Code 4F) R BJ0F-50-682-4F
L BJ0F-50-692-4F
Chaste White (Code PT) R BJ0F-50-682-PT
L BJ0F-50-692-PT
Classic Red (Code A3E) R BJ0F-50-682-SU
L BJ0F-50-692-SU
Galaxy Gold (Code 23F) R BJ0F-50-682-27
L BJ0F-50-692-27
Garnet Red (Code 25F) R BJ0F-50-682-21
L BJ0F-50-692-21
Grace Green (Code 18J) R BJ0F-50-682-46
L BJ0F-50-692-46
Highlight Silver (Code 18G) R BJ0F-50-682-92
L BJ0F-50-692-92
Moonlight Gray (Code 12M) R BJ0F-50-682-25
L BJ0F-50-692-25
Orient Green (Code 23G) R BJ0F-50-682-91
L BJ0F-50-692-91
Passion Red (Code 22K) R BJ0F-50-682-15
L BJ0F-50-692-15
Pure White (Code A3D) R BJ0F-50-682-09
L BJ0F-50-692-09
Sparkling Silver (Code 24E) R BJ0F-50-682-28
L BJ0F-50-692-28
Spicy Orange (Code 25T) R BJ0F-50-682-35
L BJ0F-50-692-35
Starry Blue (Code 24A) R BJ0F-50-682-52
L BJ0F-50-692-52
Sunburst Yellow (Code HZ) R BJ0F-50-682-HZ
L BJ0F-50-692-HZ
Sunlight Silver (Code 22V) R BJ0F-50-682-67
L BJ0F-50-692-67
Supreme Blue (Code 22A) R BJ0F-50-682-50
L BJ0F-50-692-50
Titanium Gray (Code 25G) R BJ0F-50-682-66
L BJ0F-50-692-66
Twilight Blue (Code 12K) R BJ0F-50-682-57
L BJ0F-50-692-57
- 6 Mirror Assy, Manual Rear View**
R BJOE-69-120B
L BJOE-69-180B
- 7 Mirror Assy, Power Rear View**
w/Speakers
2 Speaker System
Black Mica (Code 16W) R BP7H-69-120-08
L BP7H-69-180-08
Blazing Yellow (Code 26S) R BP7H-69-120-76
L BP7H-69-180-76
Spicy Orange (Code 25T) R BP7H-69-120-35
L BP7H-69-180-35
Titanium Gray (Code 25G) R BP7H-69-120-66
L BP7H-69-180-66
- 4 Speaker System**
Black R BJ0G-69-120A
L BJ0G-69-180A
- Body Color
Aroma Red (Code 18U) R BJ0J-69-120D-13
L BJ0J-69-180E-13
Black Mica (Code 16W) R BN6B-69-120-08
L BN6B-69-180-08
Blazing Yellow (Code 26S) R BJ0J-69-120E-76
L BJ0J-69-180E-76
Champagne Silver
Champagne Silver (Code 4F) R BJ0J-69-120E-4F
L BJ0J-69-180E-4F
Chaste White (Code PT) R BN6B-69-120D-PT
L BN6B-69-180-PT
Classic Red (Code A3E) R BN6B-69-120-SU
L BJ0J-69-180E-13
Galaxy Gold (Code 23F) R BN6B-69-120-27
L BN6B-69-180-27
Grace Green (Code 18J) R BN6B-69-120-46
L BN6B-69-180-46
Garnet Red (Code 25F) R BN6B-69-120-21
L BN6B-69-180-21
Highlight Silver (Code 18G) R BJ0J-69-120E-92

- Moonlight Gray (Code 12M) L BJ0J-69-180E-92
Orient Green (Code 23G) R BJ0J-69-120E-25
L BJ0J-69-180E-25
Passion Red (Code 22K) R BN6B-69-120-91
L BN6B-69-180-91
Pure White (Code A3D) R BJ0J-69-120E-15
L BJ0J-69-180E-15
Sparkling Silver (Code 24E) R BN6B-69-120-09
L BN6B-69-180-09
Spicy Orange (Code 25T) R BN6B-69-120-28
L BN6B-69-180-28
Starry Blue (Code 24A) R BJ0J-69-120E-35
L BJ0J-69-180E-35
Sunburst Yellow (Code HZ) R BJ0J-69-120E-52
L BJ0J-69-180E-52
Sunlight Silver (Code 22V) R BN6B-69-120-HZ
L BN6B-69-180-HZ
Supreme Blue (Code 22A) R BN6B-69-120-67
L BN6B-69-180-67
Titanium Gray (Code 25G) R BN6B-69-120-50
L BN6B-69-180-50
Twilight Blue (Code 12K) R BJ0J-69-120E-66
L BJ0J-69-180E-66

- 6 Speaker System**
Black R BN6A-69-120
L BN6A-69-180

- Body Color
Black Mica (Code 16W) R BN6B-69-120-08
L BN6B-69-180-08
Blazing Yellow (Code 26S) R BN6B-69-120-76
L BN6B-69-180-76
Galaxy Gold (Code 23F) R BN6B-69-120-27
L BN6B-69-180-27
Grace Green (Code 18J) R BN6B-69-120-46
L BN6B-69-180-46
Galaxy Gold (Code 23F) R BN6B-69-120-21
L BN6B-69-180-21
Orient Green (Code 23G) R BN6B-69-120-91
L BN6B-69-180-91
Pure White (Code A3D) R BN6B-69-120-09
L BN6B-69-180-09
Sparkling Silver (Code 24E) R BN6B-69-120-28
L BN6B-69-180-28
Spicy Orange (Code 25T) R BN6B-69-120-35
L BN6B-69-180-35
Starry Blue (Code 24A) R BN6B-69-120-52
L BN6B-69-180-52
Sunburst Yellow (Code HZ) R BN6B-69-120-HZ
L BN6B-69-180-HZ
Sunlight Silver (Code 22V) R BN6B-69-120-67
L BN6B-69-180-67
Supreme Blue (Code 22A) R BN6B-69-120-66
L BN6B-69-180-66

- w/o Speakers
Black Mica (Code 16W) R BL9M-69-120-08
L BL9M-69-180-08
Blazing Yellow (Code 26S) R BL9M-69-120-76
L BL9M-69-180-76
Champagne Silver (Code 4F) R BL9M-69-120-35
L BL9M-69-180-35
Starry Blue (Code 24A) R BL9M-69-120-52
L BL9M-69-180-52
Sunburst Yellow (Code HZ) R BL9M-69-120-HZ
L BL9M-69-180-HZ
Sunlight Silver (Code 22V) R BL9M-69-120-66
L BL9M-69-180-66


- 8 Glass, Mirror**
Manual† R BJ0E-69-123
L BJ0E-69-183
- Power (a)
Black Mirror R BJ0E-69-123
L BJ0E-69-183
Body Color Mirror R B21M-69-1G1
L B21M-69-1G7A
†Included w/Manual Rear View Mirror Assy
(a) Included w/Power Rear View Mirror Assy
- Garnish, Inner Mirror**
9 Manual R B25D-69-111C
L B25D-69-171C
- 10 Power R B26R-69-111C
L B26R-69-171C

INTERIOR TRIM

Illustration Located in Next Column

- 1 Panel Assy, Trim**
Hatchback R BN5V-68-420B-65
L BL8G-68-450B-65
- Sedan
1999-00
DX Model
Beige/Brown R BJ0V-68-420T-90
L BJ0E-68-450T-90
Gray R BJ0V-68-420U-43
L BJ0E-68-450U-43
- LX Model
Beige/Brown R BJ0J-68-420K-90
L BJ0J-68-450M-90
Gray R BJ0J-68-420K-43
L BJ0J-68-450M-43
- ES, SE Model
Gray R BJ0T-68-420K-43
L BJ0N-68-450N-43
- 2001-03†

MAZDA PROTEGE/PROTEGE5 1999-03

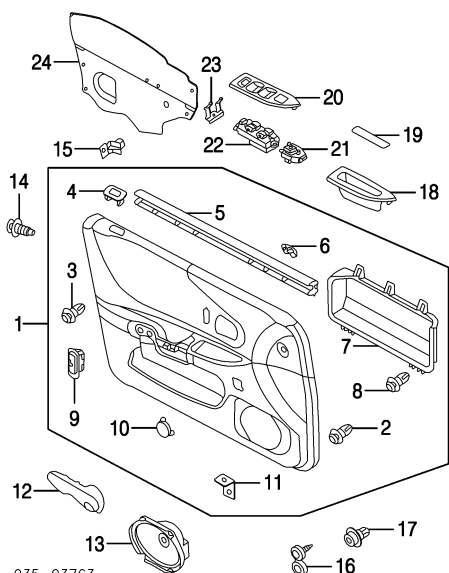

035-03763

Man Windows R BL8E-68-420C-67
L BL8E-68-450E-67
Pwr Windows R BL8F-68-420B-67
L BL8F-68-450D-67

(Gray listed, Order by Application)


- 2 Fastener, Front Trim Panel (a)**
(2/Side) R/L GA2A-68-AB1A
- 3 Fastener, Rear Trim Panel (a)**
(2/Side) R/L B21M-68-AB1
- 4 Vessel, Lock Knob (a)**
Hatchback R/L B25D-68-421A-65
Sedan R/L B25D-68-421A-90
1999-00 Brown R/L B25D-68-421A-90
Gray R/L B25D-68-421A-43
2001-03 Beige R/L B25D-68-421A-65
Black R/L B25D-68-421A-80
Gray R/L B25D-68-421A-05
5 Moulding, Inr Belt (a)
R B25D-58-821A
L B25D-59-821A
R/L B25D-64-996
- 6 Nut, Expansion (a)**
- 7 Pocket, Trim Panel (a)**
Hatchback R B25D-68-4C1-65
L B25D-68-4N1-65
Sedan 1999-00 R B25D-68-4C1-90
Brown L B25D-68-4N1-90
Gray R B25D-68-4C1-43
L B25D-68-4N1-43
2001-03 Beige R B25D-68-4C1-80
L B25D-68-4N1-80
Black R B25D-68-4C1-65
L B25D-68-4N1-65
Gray R B25D-68-4C1-05
L B25D-68-4N1-05
- 8 Fastener, Pocket (a)**
1999-00 (2/Side) R/L B21M-68-AB1
2001-03 (4/Side) R/L G350-68-AB1
- 9 Switch, Door Lock (a)**
Hatchback L BJOE-66-660A-65
Sedan L BJOE-66-660A-43
1999-00 L BJOE-66-660A-80
2001-03 Beige L BJOE-66-660A-65
Black L BJOE-66-660A-65
Gray L BJOE-66-660A-05
- 10 Spacer (a)**
Sedan Man Windows 1999-00 Brown R B25D-68-DF1B-90
L B25D-68-DF2B-80
Gray R B25D-68-DF1B-43
L B25D-68-DF2A-43
2001-03 Beige R B25D-68-DF1B-80
L B25D-68-DF2B-80
Black R B25D-68-DF1B-65
L B25D-68-DF2B-65
Gray R B25D-68-DF1B-05
L B25D-68-DF2B-05
- 11 Bracket, Trim (a)**
Sedan R/L B25D-68-414
(a) Included w/Trim Panel Assy
- 12 Handle, Pull**
Hatchback R B25D-68-D61C-65
L BJOE-68-D81B-65
Sedan 1999-00 R BJOE-68-D61B-90
Brown L BJOE-68-D81B-90
Gray R BJOE-68-D61B-43

- 2001-03 L BJOE-68-D81B-43
Black R B25D-68-D61C-65
L BJOE-68-D81B-65
Brown R B25D-68-D61C-22
L BJOE-68-D81B-22
- 13 Speaker, Door** 99-00 R/L 0000-81-2022
01-03 R/L LC64-66-960
- 14 Fastener, Trim Panel**
1999-00 R/L B467-68-AC3-90
Brown R/L B467-68-AC3-29
Gray
2001-03 Black R/L B467-68-AC3-02
Brown R/L B467-68-AC3-22
R/L B25D-68-403A
- 15 Bracket, Trim Panel**
- 16 Cap, Screw**
Hatchback R/L B501-68-D11B-09
Sedan 1999-00 R/L B501-68-D11B-90
Brown R/L B501-68-D11B-43
Gray
2001-03 Brown R/L B501-68-D11B-22
Gray R/L B501-68-D11B-09
R/L GD7A-68-AD5
- 17 Grommet, Screw**
- 18 Pocket, Trim**
Sedan Man Windows 1999-00 Brown R GE4T-68-4L1F-90
L GE4T-68-4L6E-90
Gray R GE4T-68-4L1F-43
L GE4T-68-4L6D-43
2001-03 Beige R GE4T-68-4L1F-80
L GE4T-68-4L6F-80
Black R GE4T-68-4L1F-65
L GE4T-68-4L6F-65
Gray R GE4T-68-4L1F-05
L GE4T-68-4L6F-05
- 19 Cover, Recess**
Sedan Man Windows 1999-00 R/L GE4T-68-424
2001 To 10-16-00 R/L GE4T-68-424
From 10-16-00 Beige R/L B30D-68-424-80
Black R/L B30D-68-424-02
Gray R/L B30D-68-424-05
2002-03 Beige R/L B30D-68-424-90
Black R/L B30D-68-424-02
Gray R/L B30D-68-424-05
- 20 Panel, Switch**
Hatchback R BJ2A-68-4L1D-20
L BJOE-68-D81B-65
Sedan Pwr Windows 1999-00 Brown R GE4V-68-4L1H-90
L GE6T-68-4L6F-90
Gray R GE4V-68-4L1H-43
L GE6T-68-4L6F-43
2001-03 Beige R GE4V-68-4L1H-80
L GE6T-68-4L6F-80
Black R GE4V-68-4L1H-65
L GE6T-68-4L6F-65
Gray R GE4V-68-4L1H-05
L GE6T-68-4L6F-05
L GE4T-66-600
- 21 Switch, Mirror** BL8M-66-350
- 22 Switch, Window**
Hatchback R GE4T-66-370A
Sedan L GE4T-66-350
1999-00
2001-03 Right GE4T-66-370A
Left BL8M-66-350
Amber Illuminated BL8M-66-350
Green Illumination BJON-66-350
- 23 Clip, Spring** R/L GE4T-68-8N1
- 24 Shield, Moisture**
Man Windows R BJOE-58-861C
L BJOE-59-861C
Pwr Windows R BJOF-58-861C
L BJOF-59-861C

HARDWARE

Illustration Located in Next Column

- 1 Latch Assy, Door**
Man Lock R BJOE-58-310D
L BJOE-59-310D
Pwr Locks R BJOF-58-310E
L BJOF-59-310E
- 2 Clip, Rod** R/L 9927-80-307
- 3 Clip, Rod** (2/Side) R B25D-58-315
L B25D-59-315
(Included w/Door Latch Assy)
- 4 Holder, Rod** R/L B001-58-309A
- 5 Rod Assy, Lock Knob**
1999-00 R B25D-58-390-90

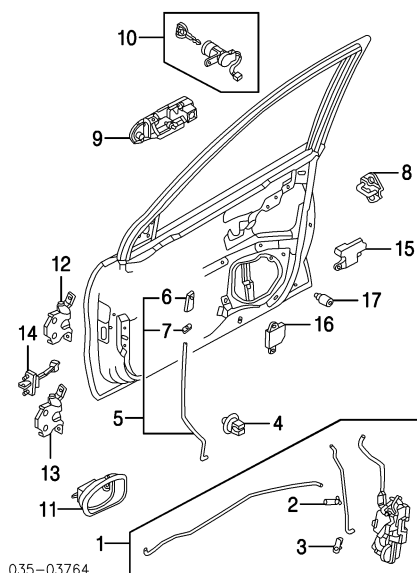

035-03764

Off Black L B25D-58-390-90
R B25D-58-390-65
L B25D-58-390-65
2001-03 Beige R B25D-58-390-80
L B25D-58-390-80
Black R B25D-58-390-65
L B25D-58-390-65
Gray R B25D-58-390-05
L B25D-58-390-05

- 6 Knob, Lock** (a)
1999-00 Brown R/L B455-58-316B-90
Gray R/L B455-58-316B-43
2001-03 Beige R/L B455-58-316B-80
Black R/L B455-58-316B-65
Gray R/L B455-58-316B-05
R/L B455-58-393
- 7 Cover, Lock Knob** (a)
(Included w/Lock Knob Rod Assy)
R/L B25D-58-361A
- 8 Striker, Latch** R B25D-58-410C
- 9 Handle, Outside** Black L B25D-59-410C

Body Color
Aroma Red (Code 18U)99-00 RB25E-58-410D-13
L B25E-59-410D-13
Black Mica (Code 16W)99-00 RB25E-58-410D-08
L B25E-59-410D-08
01-03 R C100-58-410B-08
L C100-59-410B-08
Blazing Yellow (Code 26S) 01-03 R C100-58-410B-76
L C100-59-410B-76
Champagne Silver (Code 4F) 99-00 R B25E-58-410D-4F
L B25E-59-410D-4F
01-03 R C100-58-410B-4F
L C100-59-410B-4F

Chaste White (Code PT) 99-00 R B25E-58-410D-PT
L B25E-59-410D-PT
01 R C100-58-410B-PT
L C100-59-410B-PT

Classic Red (Code A3E) 99-00 R B25E-58-410D-SU
L B25E-59-410D-SU
01 R C100-58-410B-10
L C100-59-410B-10
Galaxy Gold (Code 23F) 01-02 R C100-58-410B-27
L C100-59-410B-27

Garnet Red (Code 25F)01-03 RC100-58-410B-21
L C100-59-410B-21

Grace Green (Code 18J) 99-00 R B25E-58-410D-46
L B25E-59-410D-46
01-03 R C100-58-410B-46
L C100-59-410B-46

Highlight Silver (Code 18G) 99-00 R B25E-58-410D-92
L B25E-59-410D-92
01 R C100-58-410B-92
L C100-59-410B-92

Moonlight Gray (Code 12M)
Moonlight Gray (Code 12M) 99-00 R B25E-58-410D-25
L B25E-59-410D-25
01 R C100-58-410B-25
L C100-59-410B-25

Orient Green (Code 23G) 01-03 R C100-58-410B-91
L C100-59-410B-91

Passion Red (Code 22K) 99-00 R B25E-58-410D-15
L B25E-59-410D-15
01-03 R C100-58-410B-15
L C100-59-410B-15

Pure White (Code A3D)01-03 RC100-58-410B-09
L C100-59-410B-09


Sparkling Silver (Code 24E) 01-03 R C100-58-410B-28
L C100-59-410B-28

Spicy Orange (Code 25T) 01-03 R C100-58-410B-35
L C100-59-410B-35

Starry Blue (Code 24A)02-03 RC100-58-410B-52

MAZDA PROTEGE/PROTEGE5 1999-03


FRONT DOOR Cont'd	
HARDWARE Cont'd	
Sunburst Yellow (Code HZ) 02-03 R	L C100-59-410B-52 L C100-58-410B-HZ L C100-59-410B-HZ
Sunlight Silver (Code 22V) 01-03 R	L C100-58-410B-67 L C100-59-410B-67
Supreme Blue (Code 22A) 99-00 R	L B25E-58-410D-50 L B25E-59-410D-50
01 R	L C100-58-410B-50 L C100-59-410B-50
Titanium Gray (Code 25G) 01-03 R	L C100-58-410B-66 L C100-59-410B-66
Twilight Blue (Code 12K) 99-00 R	L B25E-58-410D-57 L B25E-59-410D-57
01 R	L C100-58-410B-57 L C100-59-410B-57
10 Cylinder/Key, Lock	
Hatchback-Serviced w/Vehicle Lock Set	
Sedan	
Man Lock	R B2YD-76-210A L B2YD-76-220A
Pwr Locks	R BJYE-76-210B L BJYE-76-220B
11 Handle, Inside	
1999-00	
Brown	R GA2K-58-330B-90 L GA2K-59-330B-90
Gray	R GA2K-58-330B-43 L GA2K-59-330B-43
2001	
DX, ES, LX, SE Model	
Beige	R S54N-58-330B-80 L S54N-59-330B-80
Black	R S54N-58-330B-65 L S54N-59-330B-65
Gray	R S54N-58-330B-05 L S54N-59-330B-05
MP3 Model	R B28V-58-330B-65 L B28V-59-330B-65
2002-03	
DX, ES, LX, SE Model	
Beige	R S54N-58-330B-80 L S54N-59-330B-80
Black	R S54N-58-330B-65 L S54N-59-330B-65
Gray	R S54N-58-330B-05 L S54N-59-330B-05
MAZDASPEED Model	R B33M-58-330-25 L B33M-59-330-25
12 Hinge, Upper	R EA01-58-240C L EA01-58-240C
13 Hinge, Lower	R EA01-58-240C L EA01-58-240C
14 Check, Door	R/L B25D-58-270B
15 Pad, Upper	R BJ0E-58-950C L BJ0E-59-950C
16 Pad, Lower	R B25D-58-960A L B25D-59-960A
17 Cushion, Rubber	R/L G067-58-873

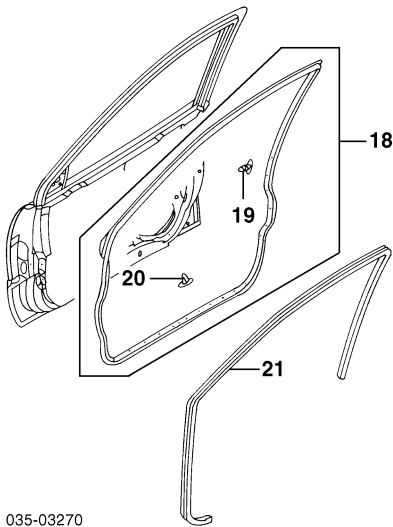

18 Weatherstrip Assy, Door	R B25D-58-760E L B25D-59-760E
19 Fastener, Upper †	R/L D061-58-763
20 Fastener, Lower † (18/Side)	R/L BC1D-58-763
†Included w/Door Weatherstrip Assy	
21 Welt, Seaming	
1999	
Man Trans	
To 6-1-99	
Brown	R B25D-68-911-90 L B25D-68-912-90
Gray	R B25D-68-911-43 L B25D-68-912-43
From 6-1-99	

Brown	R BJ0E-68-911-90 L BJ0E-68-912-90
Gray	R BJ0E-68-911-43 L BJ0E-68-912-43
Auto Trans	
To 6-1-99	
Brown	R BJ1V-68-911B-90 L BJ1V-68-912B-90
Gray	R BJ1V-68-911B-43 L BJ1V-68-912B-43
From 6-1-99	
Brown	R BJ0K-68-911-90 L BJ0K-68-912-90
Gray	R BJ0K-68-911-43 L BJ0K-68-912-43
2000	
Man Trans	
Brown	R BJ0E-68-911-90 L BJ0E-68-912-90
Gray	R BJ0E-68-911-43 L BJ0E-68-912-43
Auto Trans	
Brown	R BJ0K-68-911-90 L BJ0K-68-912-90
Gray	R BJ0K-68-911-43 L BJ0K-68-912-43
2001	
Man Trans	
To 2-1-01	
Beige	R BJ0E-68-911-80 L BJ0E-68-912-80
Black	R BJ0E-68-911-65 L BJ0E-68-912-65
Gray	R BJ0E-68-911-05 L BJ0E-68-912-05
From 2-1-01	
Beige	R BJ0K-68-911-80 L BJ0K-68-912-80
Black	R BJ0K-68-911-65 L BJ0K-68-912-65
Gray	R BJ0K-68-911-05 L BJ0K-68-912-05
Auto Trans	
Beige	R B30D-68-911A-80 L B30D-68-912A-80
Black	R B30D-68-911A-65 L B30D-68-912A-65
Gray	R B30D-68-911A-05 L B30D-68-912A-05
2002-03	
Man Trans	
Beige	R BJ0K-68-911-80 L BJ0K-68-912-80
Black	R BJ0K-68-911-65 L BJ0K-68-912-65
Gray	R BJ0K-68-911-05 L BJ0K-68-912-05
Auto Trans	
Beige	R B30D-68-911A-80 L B30D-68-912A-80
Black	R B30D-68-911A-65 L B30D-68-912A-65
Gray	R B30D-68-911A-05 L B30D-68-912A-05


GLASS & PARTS

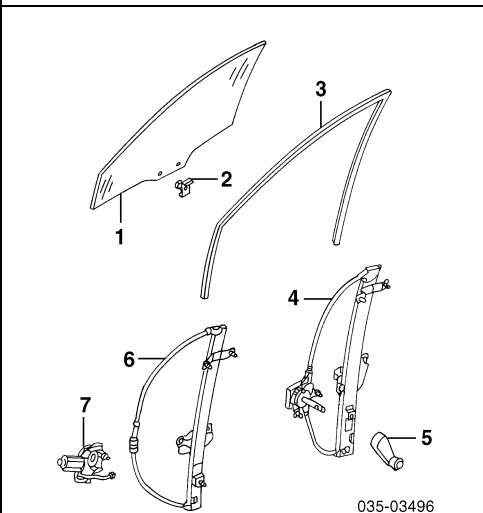

1 Glass, Front Door	
Mazda	
1999-00	R B25D-58-511C L B25D-59-511C
2001	
To 3-19-01	R B25D-58-511C L B25D-59-511C
From 3-19-01	R B30D-58-511A L B30D-59-511A
2002-03	
	R B30D-58-511A L B30D-59-511A
2 Grommet, Screw (2/Side)	
Hatchback	
Sedan	R/L GJ21-58-502A R/L S084-58-502


3 Run, Glass	R B25D-58-605C L B25D-59-605C
4 Regulator, Manual	R B25D-58-560 L B25D-59-560
5 Handle, Regulator	
1999-00	
Brown	R/L B25D-58-580A-90
Gray	R/L B25D-58-580A-43
2001-03	
Beige	R/L B25D-58-580A-80
Black	R/L B25D-58-580A-65
Gray	R/L B25D-58-580A-05
6 Regulator, Power	99-01 R BJ0E-58-590D L B25E-59-590D
	L B25F-58-590 L B25F-59-590
7 Motor, Regulator	99-01 R BJ0E-58-58XA L B25E-59-58XA
	L B25F-58-58X L B25F-59-58X

REAR DOOR SHEET METAL

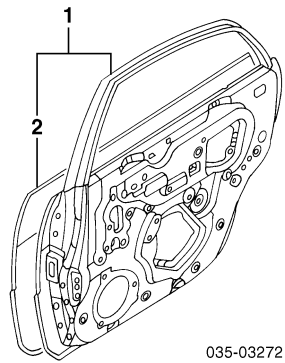

1 Shell Assy, Door	
Hatchback	
	R B25H-72-020H L B25H-73-020H
Sedan	
	R B25D-72-020H L B25D-73-020H
2 Panel, Door Repair†	
Hatchback-Serviced w/Door Shell Assy	
Sedan	
1999-00	R B25D-72-031D L B25D-73-031D
2001	
To 6-01-01	R B25D-72-031D L B25D-73-031D
From 6-01-01	R B25D-72-031D L B25D-73-031D
2002-03	R B25D-72-031D L B25D-73-031D
†Included w/Door Shell Assy	

EXTERIOR TRIM

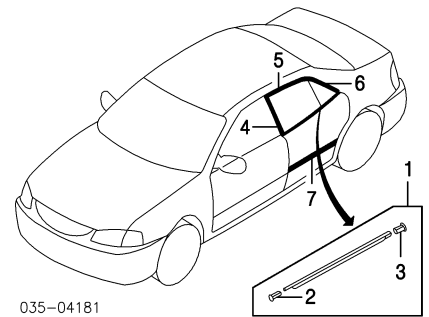


1 Moulding Assy, Outer Belt	R B25D-50-660D L B25D-50-670D
2 Protector, Frt Moulding †	R B25D-50-664 L B25D-50-674
3 Protector, Rear Moulding †	R B25D-50-665 L B25D-50-675
†Included w/Outer Belt Moulding Assy	
4 Sash, Door	99-02 R BL2C-50-8V4-00 L BL2C-50-8W4-00
	03 R BL2M-50-8V4 L BL2M-50-8W4
5 Tape, Upper Black-Out	
Hatchback	
	R BL2L-50-8V2A L BL2L-50-8W2A
Sedan	
	R BL2C-50-8V2-00 L BL2C-50-8W2-00
6 Tape, Rear Black-Out	
Hatchback	
	R BL2L-50-8V4 L BL2L-50-8W4
7 Moulding, Side (Adhesive)	

MAZDA PROTEGE/PROTEGE5 1999-03

Black	R BJ0E-50-683 L BJ0E-50-693
Body Color	
Aroma Red (Code 18U)	R BJ0F-50-683-13 L BJ0F-50-683-13
Black Mica (Code 16W)	R BJ0F-50-683-08 L BJ0F-50-683-08
Blazing Yellow (Code 26S)	R BJ0F-50-683-76 L BJ0F-50-683-76
Champagne Silver (Code 4F)	R BJ0F-50-683-4F L BJ0F-50-683-4F
Chaste White (Code PT)	R BJ0F-50-683-PT L BJ0F-50-683-PT
Classic Red (Code A3E)	R BJ0F-50-683-SU L BJ0F-50-683-SU
Galaxy Gold (Code 23F)	R BJ0F-50-683-27 L BJ0F-50-683-27
Garnet Red (Code 25F)	R BJ0F-50-683-21 L BJ0F-50-683-21
Grace Green (Code 18J)	R BJ0F-50-683-46 L BJ0F-50-683-46
Highlight Silver (Code 18G)	R BJ0F-50-683-92 L BJ0F-50-683-92
Moonlight Gray (Code 12M)	R BJ0F-50-683-25 L BJ0F-50-683-25
Orient Green (Code 23G)	R BJ0F-50-683-91 L BJ0F-50-683-91
Passion Red (Code 22K)	R BJ0F-50-683-15 L BJ0F-50-683-15
Pure White (Code A3D)	R BJ0F-50-683-09 L BJ0F-50-683-09
Sparkling Silver (Code 24E)	R BJ0F-50-683-28 L BJ0F-50-683-28
Spicy Orange (Code 25T)	R BJ0F-50-683-35 L BJ0F-50-683-35
Starry Blue (Code 24A)	R BJ0F-50-683-52 L BJ0F-50-683-52
Sunburst Yellow (Code HZ)	R BJ0F-50-683-HZ L BJ0F-50-683-HZ
Sunlight Silver (Code 22V)	R BJ0F-50-683-67 L BJ0F-50-683-67
Supreme Blue (Code 22A)	R BJ0F-50-683-50 L BJ0F-50-683-50
Titanium Gray (Code 25G)	R BJ0F-50-683-66 L BJ0F-50-683-66
Twilight Blue (Code 12K)	R BJ0F-50-683-57 L BJ0F-50-683-57


INTERIOR TRIM

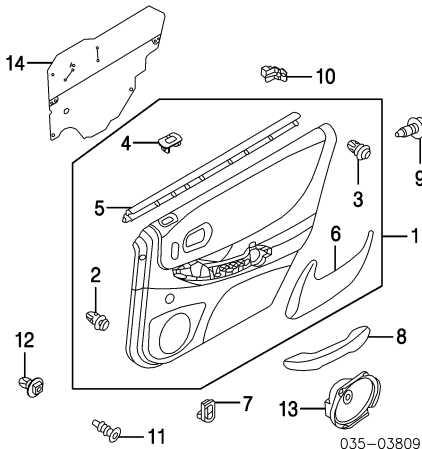

1 Panel Assy, Trim Hatchback	R B30N-68-520-65 L B30N-68-550-65
Sedan	
1999-00	
DX Model	
Beige/Brown	R B25D-68-520J-90 L B25D-68-550J-90
Gray	R B25D-68-520J-43 L B25D-68-550J-43
LX Model	
Beige/Brown	R BJ0J-68-520J-90 L BJ0J-68-550J-90
Gray	R BJ0J-68-520J-43 L BJ0J-68-550J-43
ES, SE Model	
Gray	R B26R-68-520J-43 L B26R-68-550J-43
2001-03†	
Man Windows	R B30F-68-520-67 L B30F-68-550-67
Pwr Windows	R B30G-68-520-67 L B30F-68-550-67
†Gray listed, Order by Application	
2 Fastener, Front Trim Panel (a) (2/Side)	R/L GA2A-68-AB1A
3 Fastener, Rear Trim Panel (a) (3/Side)	R/L B21M-68-AB1
4 Vessel, Lock Knob (a)	
1999-00	
Brown	R/L B25D-68-421A-90
Gray	R/L B25D-68-421A-43
2001-03	

Beige	R/L B25D-68-421A-80
Black	R/L B25D-68-421A-65
Gray	R/L B25D-68-421A-05
5 Moulding, Inr Belt (a)	R B25D-72-821 L B25D-73-821
6 Pocket, Door Trim (a) Hatchback	R BJ3D-68-5C1A-65 L BJ3D-68-5N1A-65
(a) Included w/Trim Panel Assy	
7 Switch, Power Window	
1999-00	
Brown	R/L GE4T-66-380C-90
Gray	R/L GE4T-66-380C-43
2001-03	
Beige	R/L GE4T-66-380C-80
Black	R/L GE4T-66-380C-65
Gray	R/L GE4T-66-380C-05
8 Handle, Pull	
1999-00	
Brown	R B25D-68-D71C-90 L B25D-68-D91C-90
Gray	R B25D-68-D71C-43 L B25D-68-D91C-43
2001-03	
Black	R B25D-68-D71C-65 L B25D-68-D91C-65
Brown	R B25D-68-D71C-22 L B25D-68-D91C-22
9 Fastener, Trim Panel (2/Side)	
1999-00	
Brown	R/L B467-68-AC3-90
Gray	R/L B467-68-AC3-29
2001-03	
Black	R/L B467-68-AC3-02
Brown	R/L B467-68-AC3-22
10 Bracket, Trim (2/Side)	R/L B25D-68-403A
11 Fastener, Trim Panel	
1999-00	
Brown	R/L GD7A-68-AA5-90
Gray	R/L GD7A-68-AA5-29
2001-03	
Black	R/L GD7A-68-AA5-02
Brown	R/L GD7A-68-AA5-22
12 Grommet, Screw	99-00 R/L GD7B-68-AD5 01-03 R/L B25D-68-AD5
13 Speaker, Door Hatchback	R/L LC64-66-960
14 Shield, Moisture Man Windows	R B25D-72-861C L B25E-73-861C
Pwr Windows	R B25E-72-861C L B25E-73-861C

HARDWARE

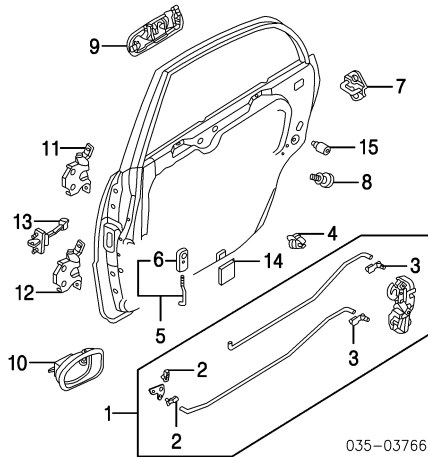


1 Latch Assy, Door Man Lock	R B25D-72-310C L B25D-73-310C
Pwr Locks	R B25E-72-310D L B25E-73-310D
2 Clip, Front Rod† (2/Side)	R G030-58-315 L G030-59-315
3 Clip, Rod† (2/Side)	R/L 9927-80-307
†Included w/Door Latch Assy	
4 Holder, Rod	R/L B001-58-309A
5 Rod Assy, Lock Knob	
1999-00	
Brown	R/L B25D-72-390-90
Black	R/L B25D-72-390-65
2001-03	
Beige	R/L B25D-72-390-90
Black	R/L B25D-72-390-65
Gray	R/L B25D-72-390-05
6 Knob, Lock†	
1999-00	
Brown	R/L B455-58-316B-90
Gray	R/L B455-58-316B-43
2001-03	
Beige	R/L B455-58-316B-80
Black	R/L B455-58-316B-65
Gray	R/L B455-58-316B-05
†Included w/Lock Knob Rod Assy	

7 Striker, Latch	R/L B25D-58-361A
8 Pin, Check	R/L B25D-72-917
9 Handle, Outside	
Black	99-00 R B25D-72-410A L B25D-73-410A
	01-03 R B25E-72-410B L B25D-73-410B
Body Color	
Aroma Red (Code 18U)99-00	RB25E-72-410A-13 L B25E-73-410A-13
Black Mica (Code 16W)99-00	RB25E-72-410A-08 L B25E-73-410A-08
	01-03 R C100-72-410B-08 L C100-73-410B-08
Blazing Yellow (Code 26S)	R C100-72-410B-76 L C100-73-410B-76
Champagne Silver (Code 4F)	99-00 R B25E-72-410A-4F L B25E-73-410A-4F
	01-02 R C100-72-410B-4F L C100-73-410B-4F
Chaste White (Code PT)	99-00 R B25E-72-410A-PT L B25E-73-410A-PT
Classic Red (Code A3E)	99-00 R B25E-72-410A-SU L B25E-73-410A-SU
	01-03 R C100-72-410B-SU L C100-73-410B-SU
Galaxy Gold (Code 23F)	01-03 R C100-72-410B-27 L C100-73-410B-27
Garnet Red (Code 23F)	R C100-72-410B-21 L C100-73-410B-21
Grace Green (Code 18J)	99-00 R B25E-72-410A-46 L B25E-73-410A-46
	01-03 R C100-72-410B-46 L C100-73-410B-46
Highlight Silver (Code 22V)	99-00 R B25E-72-410A-92 L B25E-73-410A-92
Moonlight Gray (Code 12M)	99-00 R B25E-72-410A-25 L B25E-73-410A-25
Orient Green (Code 23G)	01-03 R C100-72-410B-91 L C100-73-410B-91
Passion Red (Code 22K)	99-00 R B25E-72-410A-15 L B25E-73-410A-15
	01 R C100-72-410B-15 L C100-73-410B-15
Pure White (Code A3D)01-03	RC100-72-410B-09 L C100-73-410B-09
Sparkling Silver (Code 24E)	R C100-72-410B-28 L C100-73-410B-28
Spicy Orange (Code 25T)	R C100-72-410B-35 L C100-73-410B-35
Starry Blue (Code 24A)02-03	R C100-72-410B-52 L C100-73-410B-52
Sunburst Yellow (Code HZ)	01-03 R C100-72-410B-HZ L C100-73-410B-HZ
Sunlight Silver (Code 22V)	01-03 R C100-72-410B-67 L C100-73-410B-67
Supreme Blue (Code 22A)	99-00 R B25E-72-410A-50 L B25E-73-410A-50
	01-03 R C100-72-410B-50 L C100-73-410B-50
Titanium Gray (Code 25G)	R C100-72-410B-66 L C100-73-410B-66
Twilight Blue (Code 12K)	99-00 R B25E-72-410A-57 L B25E-73-410A-57
10 Handle, Inside	
1999	
Brown	
To 7-28-99	R GA2K-58-330B-90 L GA2K-59-330B-90
From 7-28-99	R 554N-58-330A-90 L 554N-59-330A-90
Gray	
To 7-28-99	R GA2K-58-330B-43 L GA2K-59-330B-43
From 7-28-99	R 554N-58-330A-43 L 554N-59-330A-43
2000	
Brown	R 554N-58-330A-90 L 554N-59-330A-90
Gray	R 554N-58-330A-43 L 554N-59-330A-43
2001-03	
Beige	R S54N-58-330B-80 L S54N-59-330B-80
Black	R S54N-58-330B-65 L S54N-59-330B-65
Gray	R S54N-58-330B-05 L S54N-59-330B-05
11 Hinge, Upper	R BC1D-72-210C L BC1D-73-210C
12 Hinge, Lower	R BC1D-72-240C L BC1D-73-240C
13 Check, Door Pad	R/L B25D-72-270B R/L GE4T-72-863
15 Cushion, Rubber	R/L G067-58-873
Illustration Located in Next Column	
16 Weatherstrip Assy, Door	
Hatchback	R B25H-72-760D L B25H-73-760D
Sedan	R B25D-72-760F L B25D-73-760F
17 Clip, Weatherstrip†	R/L S084-58-763
Hatchback	R/L BC1D-58-762
18 Fastener† (19/Side)	†Included w/Door Weatherstrip Assy
19 Welt, Seaming	

MAZDA PROTEGE/PROTEGE5 1999-03

REAR DOOR Cont'd


HARDWARE Cont'd

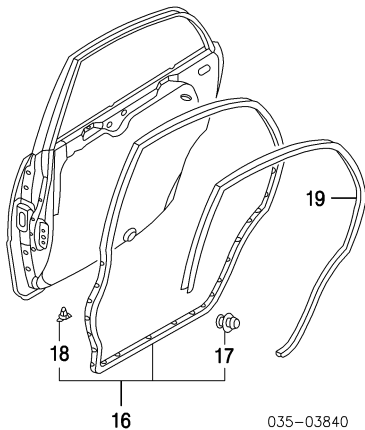

035-03840

- 1999-00
Rear Fixed Bench Seat
1999
Brown
To 6-1-99 R B25D-68-913-90
L B25D-68-914-90
From 6-1-99 R BJ0E-68-913-90
L BJ0E-68-914-90
Gray
To 6-1-99 R B25D-68-913-43
L B25D-68-914-43
From 6-1-99 R BJ0E-68-913-43
L BJ0E-68-914-43
2000
Brown R BJ0E-68-913-90
L BJ0E-68-914-90
Gray R BJ0E-68-913-43
L BJ0E-68-914-43
Rear Split Bench Seat
1999
Brown
To 6-1-99 R B26R-68-913A-90
L B26R-68-914A-90
From 6-1-99 R BJ0F-68-913-90
L BJ0F-68-914-90
Gray
To 6-1-99 R B26R-68-913A-43
L B26R-68-914A-43
From 6-1-99 R BJ0F-68-913-43
L BJ0F-68-914-43
2000
Brown R BJ0F-68-913-90
L BJ0F-68-914-90
Gray R BJ0F-68-913-43
L BJ0F-68-914-43
2001-03
Beige R BJ0F-68-913-80
L BJ0F-68-914-80
Black R BJ0F-68-913-65
L BJ0F-68-914-65
Gray R BJ0F-68-913-05
L BJ0F-68-914-05

GLASS & PARTS

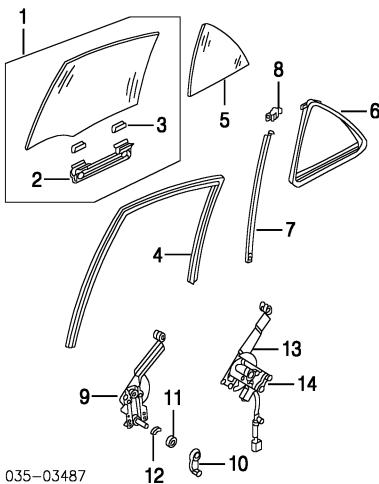


035-03487

- 1 Glass Assy, Rear Door
Mazda

- Hatchback R B25H-72-510B
L B25H-73-510B
Sedan DX, ES, LX, MP3, SE Model R B25D-72-510C
L B25D-73-510C
MAZDASPEED Model R B25E-72-510
L B25E-73-510
2 Bracket, Lift R/L G030-72-520B
3 Strip, Rubber (2/Side) R/L S001-58-502
*Included w/Rear Door Glass Assy
4 Run, Glass Hatchback R B25H-72-605D
L B25H-73-605D
Sedan R B25D-72-605C
L B25D-73-605C
5 Glass, Rear Vent Mazda (Green) Hatchback R B25H-72-661B
L B25H-73-661B
Sedan DX, ES, LX, MP3, SE Model R B25D-72-661B
L B25D-73-661B
MAZDASPEED Model R B25E-72-661
L B25E-73-661
6 Weatherstrip, Vent Glass Hatchback R B25H-72-651E
L B25H-73-651E
Sedan R B25D-72-651D
L B25D-73-651D
7 Channel, Glass Guide Hatchback R B25H-72-602A
L B25H-73-602A
Sedan R B25D-72-602
L B25D-73-602
8 Protector, Channel Hatchback R LB82-72-608A
L LB82-73-608A
Sedan R B455-72-608
L B455-73-608
9 Regulator, Manual R B25D-72-560A
L B25D-73-560A
10 Handle, Regulator 1999-00 R/L B25D-58-580A-90
Brown R/L B25D-58-580A-43
Gray 2001-03 Beige R/L B25D-58-580A-80
Black R/L B25D-58-580A-65
Gray R/L B25D-58-580A-05
11 Gasket, Handle R/L 0259-58-305B
12 Pad, Handle R/L GE4T-58-863A
13 Regulator, Power R B25E-72-590
L B25E-73-590
14 Motor, Regulator R B25E-72-58X
L B25E-73-58X

- 7 Reinf, Front B25H-70-66XA
8 Reinf, Rear B25R-70-663
9 Header, Rear B25D-70-700
*Included w/Roof Panel Assy
10 Bracket, Side Roof w/Roof Rack R/L GF4K-56-28X
w/o Roof Rack R/L BJ3K-56-47Z
11 Reinf, Outer Roof w/o Sunroof R/L B25D-70-635C
12 Bracket, Front Sunroof R B25K-70-621
L B25K-71-621
13 Bracket, Rear Sunroof R/L B25K-70-623
14 Rail, Inner Roof R B25R-70-050C
L B25R-71-050C
15 Moulding Assy, Roof w/Roof Rack R B25R-50-9H0A
L B25R-50-9L0A
w/o Roof Rack R BJ3D-50-9H0E
L BJ3D-50-9L0E
16 Protector, Moulding R B25R-501-9H1A
L B25R-501-9L1A
*Included w/Roof Moulding Assy

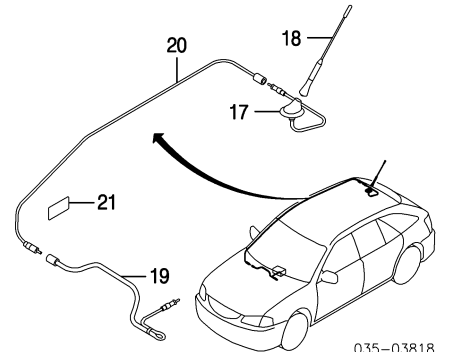


035-03818

- 17 Antenna, Radio B25H-66-930B
18 Mast, Antenna B25T-66-930
19 Cable, Front Antenna BN5W-66-940
20 Cable, Rear Antenna BN5V-66-940A
21 Pad, Protector G001-67-061


SHEET METAL/EXTERIOR TRIM SEDAN

ROOF SHEET METAL/EXTERIOR TRIM HATCHBACK

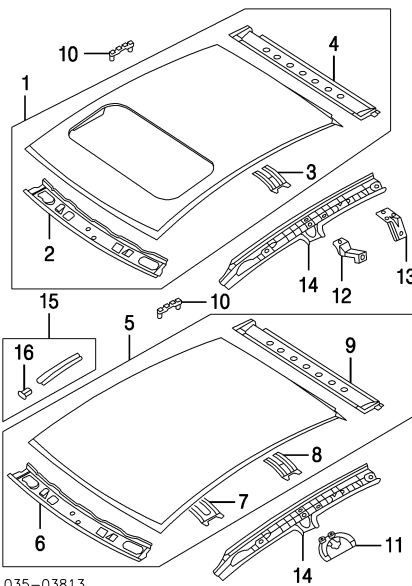

035-03813

- 1 Panel Assy, Roof w/Sunroof B2YV-70-60X
w/Roof Rack BJYL-70-60X
w/o Roof Rack B25D-70-641
2 Header, Front B25D-70-641
3 Reinf, Roof B25R-70-663
4 Header, Rear B25R-70-700
*Included w/Roof Panel Assy
5 Panel Assy, Roof w/o Sunroof B2YR-70-60X
w/Roof Rack BJYE-70-60X
w/o Roof Rack B25D-70-641
6 Header, Front

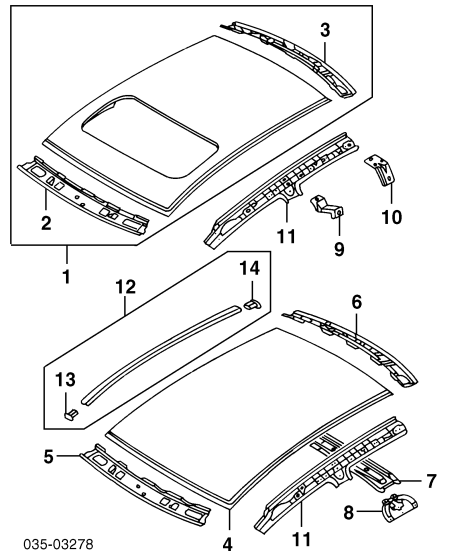

035-03278


- 1 Panel Assy, Roof w/Sunroof B2YK-70-60X
2 Header, Front B25D-70-641
3 Header, Rear B25D-70-700
*Included w/Roof Panel Assy
4 Panel, Roof w/o Sunroof B2YD-70-600
5 Header, Front B25D-70-641
6 Header, Rear B25D-70-700
7 Reinf, Center Roof w/o Sunroof B25D-70-66XB
8 Reinf, Outer Roof w/o Sunroof R/L B25D-70-635B
9 Bracket, Front Sunroof R B25K-70-621
L B25K-71-621
10 Bracket, Rear Sunroof R/L B25K-70-623
11 Rail, Inner Roof R B25D-70-050D
L B25D-71-050D
12 Moulding Assy, Roof R B25D-50-9H0B
L B25D-50-9L0B

MAZDA PROTEGE/PROTEGE5 1999-03

- 13 Protector, Front Midg¶ R B25D-50-9H1A
L B25D-50-9L1A
- 14 Protector, Rear Midg¶ R B25D-50-9H2A
L B25D-50-9L2A

¶Included w/Roof Moulding Assy

INTERIOR TRIM HATCHBACK

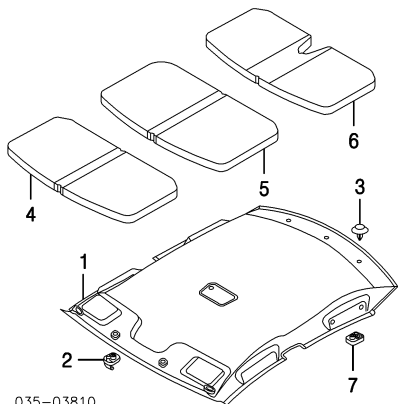


035-03810

- 1 Headliner, Roof¶
w/Sunroof Beige BN6A-68-030B-03
Gray BN6A-68-030F-03
w/o Sunroof Beige BN5V-68-030B-80
Gray BN5V-68-030D-03

¶Order by Application

- 2 Clip, Visor-See Windshield Section
- 3 Fastener, Headliner (4) GJ21-68-885B-03
B25E-68-021
- 4 Insulator, Front Roof GE4V-68-021
- 5 Insulator, Center Roof B25H-68-023A
- 6 Insulator, Rear Roof
- 7 Spacer, Assist Handle
Front (2) R G14S-69-445
Rear (2/Side) R/L G14S-69-445

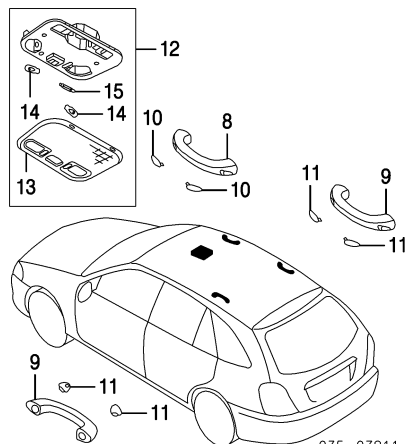


035-03811

- 8 Handle, Front Assist R B100-69-471-03
- 9 Handle, Rear Assist R/L B100-69-471-03
- 10 Cap, Front Assist Handle (2) R G030-69-472A-03
- 11 Cap, Rear Assist Handle (2/Side) R/L G030-69-472A-03
- 12 Lamp Assy, Interior
w/Sunroof Beige BL2A-51-310-80
Gray BL2A-51-310-03
w/o Sunroof Beige B30E-51-310A-80
Gray B30E-51-310A-03
- 13 Lens, Lamp¶
w/Sunroof B25K-51-311
w/o Sunroof B25F-51-311
- 14 Bulb, Interior Lamp¶
w/Sunroof 9970-05-100L
w/o Sunroof (2) 0000-11-0194
- 15 Bulb, Reading Lamp¶ (2) 9970-05-080L

¶Included w/Interior Lamp Assy

INTERIOR TRIM SEDAN

Illustration Located in Next Column

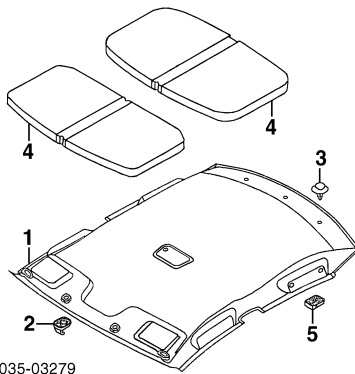


035-03279

- 1 Headliner, Roof
1999-00¶ w/Sunroof BJ0F-68-030E-48
w/o Sunroof BJ0E-68-030B-48
- 2001-02 w/Sunroof Beige BK7F-68-030A-80
Gray BK7F-68-030B-03
w/o Sunroof Beige BK7K-68-030C-80
Gray BK7K-68-030C-03
- 2003 w/Sunroof Beige BP3F-68-030-80
Gray BP3F-68-030-03
w/o Sunroof Beige BK7K-68-030C-80
Gray BK7K-68-030C-03

¶Gray listed, Order by Application

- 2 Clip, Visor-See Windshield Section
- 3 Fastener, Headliner (4) GJ21-68-885B-48
- 1999-00
- 2001-03 Beige GJ21-68-885B-80
Gray GJ21-68-885B-03
- 4 Insulator, Roof
Front B25E-68-021
Rear GJ21-68-016
- 5 Spacer, Assist Handle
Front (2) R G14S-69-445
Rear (2/Side) R/L G14S-69-445

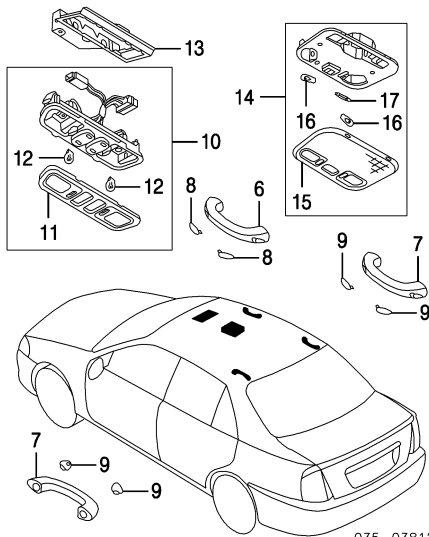

035-03812

- 6 Handle, Front Assist
1999-00¶ w/Sunroof R B500-69-471-48
w/o Sunroof R BE5W-69-470-48
- 2001-03 w/Sunroof Beige R B500-69-471-80
Gray R B500-69-471-03
w/o Sunroof Beige R LC62-69-470A-80
Gray R LC62-69-470A-03
- 7 Handle, Rear Assist
1999-00¶ w/Sunroof R/L B500-69-471-48
w/o Sunroof R/L BE6A-69-470-48
- 2001-03 w/Sunroof Beige R/L B500-69-471-80
Gray R/L B500-69-471-03
w/o Sunroof

- Beige R/L BJ0N-69-470-80
- Gray R/L BJ0N-69-470-03

- 8 Cap, Front Assist Handle (2)
1999-00¶ w/Sunroof R/L B500-69-472-48
w/o Sunroof R BE5W-69-474-48
L BE5W-69-472-48
- 2001-03 w/Sunroof Beige R B500-69-472-80
Gray R B500-69-472-03

- 9 Cap, Rear Assist Handle
1999-00¶ w/Sunroof R/L B500-69-472-48
w/o Sunroof R BE5W-69-474-48
L BE5W-69-472-48
- 2001-03 Beige R/L B500-69-472-80
Gray R/L B500-69-472-03

- 10 Panel Assy, Switch
w/Sunroof 1999-00¶ GA2L-69-970D-48
2001-03 Beige BL2A-69-970-80
Gray BL2A-69-970A-03

¶Gray listed, Order by Application

- 11 Lens, Panel (a) GA2L-69-877A
- 12 Bulb, Lamp (a) (2) 0000-11-0194
- (a) Included w/Switch Panel Assy
- 13 Bracket, Switch Panel GE4V-69-98XD


- 14 Lamp Assy, Interior
1999-00¶ w/Sunroof B25K-51-310C-48
w/o Sunroof w/Reading Lamp B25F-51-310A-48
w/o Reading Lamp B25D-51-310B-48
- 2001-03 w/Sunroof Beige BL2A-51-310-80
Gray BL2A-51-310-03
w/o Sunroof Beige B30E-51-310A-80
Gray B30E-51-310A-03

¶Gray listed, Order by Application

- 15 Lens, Lamp (a) w/Sunroof B25K-51-311
w/o Sunroof 1999-00 w/Reading Lamp B25F-51-311
w/o Reading Lamp B25D-51-311
- 2001-03 B25F-51-311
- 16 Bulb, Interior Lamp (a) w/Sunroof 9970-05-100L
w/o Sunroof 9970-05-080L
- 17 Bulb, Reading Lamp (a) (2) 0000-11-0194

(a) Included w/Interior Lamp Assy

ROOF LUGGAGE RACK

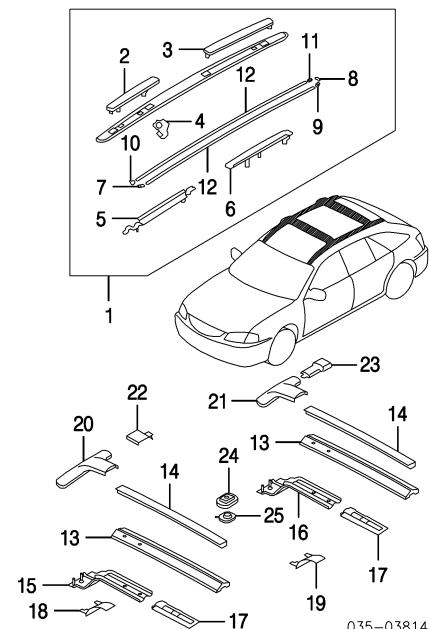

035-03814

- 1 Rack Assy, Roof R B25H-51-T10C
L B25H-51-T20C
- 2 Cover, Front Roof Rack¶ R B25H-51-T12B
L B25H-51-T22B
- 3 Cover, Rear Roof Rack¶ R B25H-51-T16B
L B25H-51-T26B
- 4 Spring, Upper¶ (4/Side) R/L B25H-64-345
- 5 Stay, Front Roof Rack¶ R/L B25H-51-T13A
- 6 Stay, Rear Roof Rack¶ R B25H-51-T14A
L B25H-51-T24A
- 7 Protector, Outer Front¶ R/L B30D-51-U79
- 8 Protector, Outer Rear¶ R/L B25H-51-T18A
- 9 Gasket, Outer Rear¶ R/L B25H-51-U89A


MAZDA PROTEGE/PROTEGE5 1999-03

ROOF Cont'd

ROOF LUGGAGE RACK Cont'd

- | | | | |
|----------------------------|-------------------------------------|-----|--------------|
| 10 | Protector, Inner Front | R/L | B30D-51-U89 |
| 11 | Gasket, Inner Rear | R/L | B25H-51-U79A |
| 12 | Protector, Center (2/Side) | R/L | B25H-51-U37B |
| *Included w/Roof Rack Assy | | | |
| 13 | Cross Bar, Front/Rear (2) | | BN5W-51-6A8A |
| 14 | Protector, Cross Bar Front/Rear (2) | | BN5W-51-RG2 |
| 15 | Stay, Front Crossbar | R/L | BN5W-51-V32 |
| 16 | Stay, Rear Crossbar | R | BN5W-51-T14 |
| | | L | BN5W-51-T24 |
| 17 | Brace, Front/Rear Stay (2/Side) | R/L | BN5W-50-B11 |
| 18 | Bracket, Front Stay | R | BN5W-51-U32 |
| | | L | BN5W-51-U42 |
| 19 | Bracket, Rear Stay | R | BN5W-51-T13 |
| | | L | BN5W-51-T23 |
| 20 | Cover, Front Crossbar | R | BN5W-51-5D1 |
| | | L | BN5W-51-V34 |
| 21 | Cover, Rear Crossbar | R | BN5W-51-5G1A |
| | | L | BN5W-51-5G2A |
| 22 | Cap, Front | R | BN5W-51-T12 |
| | | L | BN5W-51-T22 |
| 23 | Cap, Rear | R | BN5W-51-T16 |
| | | L | BN5W-51-T26 |
| 24 | Spacer, Roof Rack | R/L | BN5W-51-7P3 |
| 25 | Stay, Spacer | R/L | BN5W-51-V34 |


SUNROOF HATCHBACK

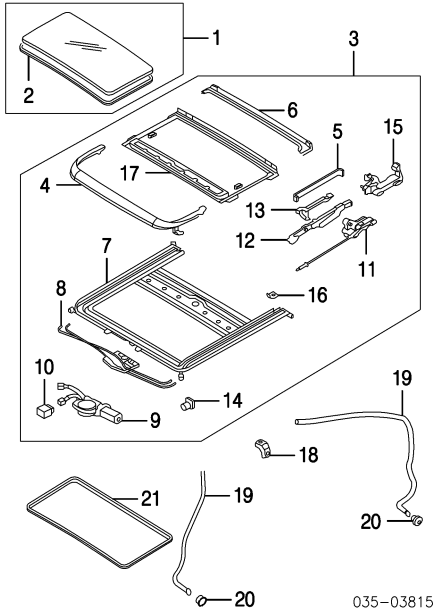

035-03815

- | | | | |
|--------------------------------|-------------------------|-------|-----------------|
| 1 | Panel Assy, Sunroof | 99-01 | GE5B-69-810 |
| | | 02-03 | GE4V-69-810D |
| 2 | W/Strip, Sunroof | 99-01 | GE5B-69-825 |
| | | 02-03 | GE4V-69-825 |
| *Included w/Sunroof Panel Assy | | | |
| 3 | Frame Assy, Sunroof (a) | | G14T-69-830B-03 |
| (a) Order by Application | | | |
| 4 | Deflector | 99-01 | G14T-69-880A |
| | | 02-03 | BL2M-69-880 |
| 5 | Link, Deflector | R/L | GE5B-69-884 |
| 6 | Rail, Drip | | GE5B-69-867 |
| 7 | Housing, Sunroof | | G14T-69-840 |
| 8 | Casing, Cable Guide | | GE5B-69-861 |
| 9 | Motor, Sunroof | 99-01 | GE5B-69-870 |
| | | 02-03 | BL2M-69-870 |
| 10 | Relay, Motor | | BC1S-69-873 |
| 11 | Cable, Drive | R/L | GE5B-69-864-5 |
| 12 | Guide, Front | R/L | GE5B-69-862-3 |
| 13 | Guide, Rear | R/L | GE5B-69-858-9 |
| 14 | Cover, Guide Rail | R/L | GE5B-69-853-4 |
| 15 | Slider, Sunroof | R/L | GE5B-69-836-7 |
| 16 | Stopper, Sunroof | R/L | GE5B-69-857 |
| 17 | Shade, Sunroof | 99-01 | GE5B-69-890-03 |
| | | 02-03 | GE4V-69-890-03 |
| *Included w/Sunroof Frame Assy | | | |
| 18 | Bracket, Sunroof | R/L | B26L-69-842 |
| 19 | Hose, Drain | | |
| | Front | R/L | B26L-69-921A |
| | Rear | R/L | B26L-69-922A |
| 20 | Grommet, Drain Hose | | |
| | Front | R/L | GJ22-69-928 |
| | Rear | R/L | E002-69-928A |
| 21 | Weit, Seaming | | BJOF-69-981-03 |


SEDAN

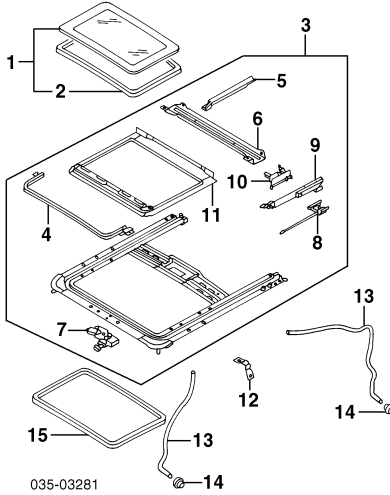

035-03281

- | | | |
|--------------------------------|-------------------------|--------------------------------|
| 1 | Panel Assy, Sunroof | GE4V-69-810D |
| 2 | W/Strip, Sunroof | GE4V-69-825 |
| | | *Included w/Sunroof Panel Assy |
| 3 | Frame Assy, Sunroof (a) | |
| | 1999-00 | BJOF-69-830B-48 |
| | 2001-03 | GE4V-69-830B-48 |
| | Beige | BJOF-69-830A-80 |
| | Gray | BJOF-69-830B-03 |
| (a) Order by Application | | |
| 4 | Deflector | BJOF-69-880A |
| 5 | Link, Deflector | R GE4V-69-9H6 |
| | | L GE4V-69-9H7 |
| 6 | Rail, Drip | GE4V-69-867 |
| 7 | Motor, Sunroof | GE4V-69-870 |
| 8 | Cable, Drive | R/L GE4V-69-912-3 |
| 9 | Guide, Front | R/L GE4V-69-862-3 |
| 10 | Guide, Rear | R/L GE4V-69-864-5 |
| 11 | Shade, Sunroof (a) | |
| | 1999-00 | GE4V-69-890-48 |
| | 2001-03 | GE4V-69-890-80 |
| | Beige | GE4V-69-890-80 |
| | Gray | GE4V-69-890-03 |
| *Included w/Sunroof Frame Assy | | |
| (a) Order by Application | | |
| 12 | Bracket, Sunroof | R BJOF-69-843A |
| | | L BJOF-69-844A |
| 13 | Hose, Drain | |
| | Front | R/L B26L-69-921A |
| | Rear | R/L BJOF-69-922A |
| 14 | Grommet, Drain Hose | |
| | Front | R/L GJ22-69-928 |
| | Rear | R/L E002-69-928A |
| 15 | Weit, Seaming | |
| | 1999-00 | BJOF-69-981-48 |
| | 2001-03 | BJOF-69-981-80 |
| | Beige | BJOF-69-981-80 |
| | Gray | BJOF-69-981-03 |
| *Order by Application | | |

BACK WINDOW

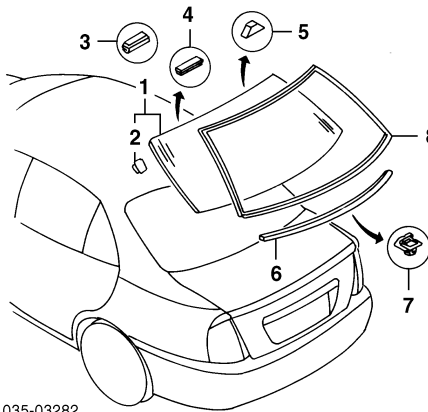

035-03282


- | | | |
|------------------------------------|---------------------------|--------------|
| 1 | Glass Assy, Back Window | |
| Mazda | | |
| | DX, ES, LX, SE, MP3 Model | B25D-63-930B |
| | MAZDASPEED Model | B27D-63-930B |
| 2 | Terminal, Glass | FB01-63-959 |
| *Included w/Back Window Glass Assy | | |

Fastener, Back Window

- | | | | |
|---|--------------------------|-----|--------------|
| 3 | No. 1 | R/L | B25D-50-896 |
| 4 | No. 2 | R/L | D203-50-896A |
| 5 | Spacer, Upper Window (3) | | C001-50-897 |
| 6 | Dam, Back Window | | GA7B-50-899 |
| 7 | Spacer, Lower Window | R/L | B467-50-891A |
| 8 | Moulding, Back Window | | B25D-50-611A |


SIDE BODY

SHEET METAL HATCHBACK

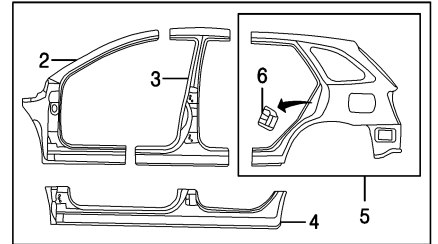

035-04124

- | | | | |
|---|---------------------------|-----|--------------|
| 1 | Body Assy, Side | R | B2YR-70-20X |
| | | L | B2YR-71-20X |
| 2 | Pillar, Outer Hinge | R | B2YR-70-221 |
| | | L | B2YR-71-221 |
| 3 | Pillar, Outer Center | R | B2YR-70-351 |
| | | L | B2YR-71-351 |
| 4 | Panel, Outer Rocker | R | B2YR-70-270 |
| | | L | B2YR-71-270 |
| 5 | Panel Assy, Outer Quarter | R | B2YR-70-410 |
| | | L | B2YR-71-410 |
| 6 | Plate, Nut (a) | R/L | GE4T-70-46X |
| *Included w/Side Body Assy | | | |
| (a) Included w/Outer Quarter Panel Assy | | | |
| 7 | Door, Fuel Filler | L | B25R-42-410A |
| 8 | Bumper, Door (2) | L | GJ6A-42-459 |
| 9 | Spring, Door | L | GA5R-42-451C |
| 10 | Opener, Door | L | EA01-56-890D |
| 11 | Cable, Door Release | L | BJOJ-56-880F |

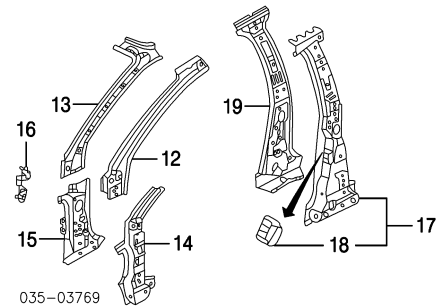


035-03769

- | | | | |
|--|-----------------------------------|-----|--------------|
| 12 | Reinf, Windshield Pillar | R | B25D-70-242 |
| | | L | B25D-71-242 |
| 13 | Pillar, Windshield Inner | R | B25D-70-240 |
| | | L | B25D-71-240 |
| 14 | Reinf, Hinge Pillar | R | BJOJ-70-030 |
| | | L | BJOJ-71-030 |
| 15 | Pillar, Inner Hinge | R | B25D-70-230 |
| | | L | B25D-71-230 |
| 16 | Bracket, Inst Panel | R | B25D-70-260C |
| | | L | B25D-71-260C |
| 17 | Reinforcement Assy, Center Pillar | R | B30P-70-36Z |
| | | L | B30P-71-36Z |
| 18 | Plate, Nut | R/L | GE4T-70-46X |
| *Included w/Center Pillar Reinforcement Assy | | | |
| 19 | Pillar, Inner Center | R | BJOJ-70-080 |
| | | L | BJOJ-71-080 |

Illustration Located in Next Column


- | | | | |
|----|----------------------------|---|--------------|
| 20 | Panel Assy, Inner Quarter | R | BL2L-70-100 |
| | | L | BL2L-71-100 |
| 21 | Pillar Assy, Inner Quarter | R | BJ3K-70-11XA |
| | | L | BJ3K-71-11XA |
| 22 | Plate, End (a) | R | B25D-70-112 |
| | | L | B25D-71-112 |
| 23 | Reinf, Rear Pillar (a) | R | B25R-70-120 |
| | | L | B25R-71-120 |
| 24 | Panel, Rear (a) | R | B25R-70-113A |

MAZDA PROTEGE/PROTEGE5 1999-03

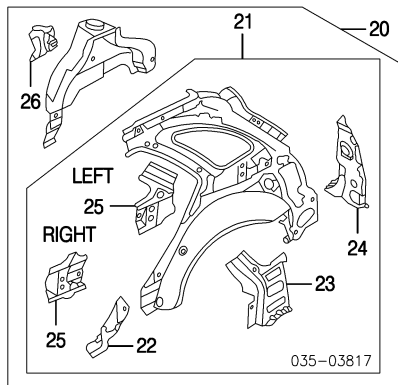


- 25 Brkt, Seat Belt Anchor (a) L B25R-71-113A
R B25R-70-1B0A
L B25R-71-1B0B
- (a) Included w/Inner Quarter Pillar Assy
- 26 Gusset, Wheelhouse (a) R GE4T-70-16Y
L GE4T-71-16Y
- (a) Included w/Inner Quarter Panel Assy

SHEET METAL SEDAN

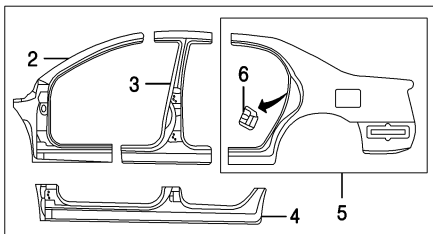


035-03823

- 1 Body Assy, Side R BJYJ-70-20X
L BJYJ-71-200
- 2 Pillar, Outer Hinge (a) R BJYJ-70-221
L BJYJ-71-220
- 3 Pillar, Outer Center (a) R B2YD-70-351
L B2YD-71-351
- 4 Panel, Outer Rocker (a) R B2YD-70-270
L B2YD-71-270
- 5 Panel Assy, Outer Quarter (a) R B2YD-70-410
L B2YD-71-410
- 6 Plate, Nut (a) R/L GE4T-70-46X
- (a) Included w/Side Body Assy
- (a) Included w/Outer Quarter Panel Assy
- 7 Door, Fuel Filler L B25D-42-410
- 8 Bumper, Door (2)
- 1999 To 3-1-99 L GJ6A-42-459
- From 3-1-99 L GJ6A-42-459
- 2000-03 L GJ6A-42-459
- 9 Spring, Door 99-00 L GA5R-42-451C
01-03 L D061-42-451B
- 10 Opener, Door L EA01-56-890D
- 11 Cable, Door Release L BJUJ-56-880F

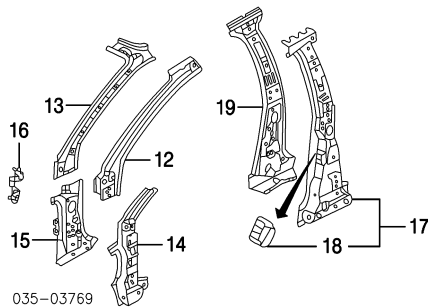


- 12 Reinf, Windshield Pillar R B25D-70-242
L B25D-71-242
- 13 Pillar, Windshield Inner 1999 To 5-1-99 R B25D-70-241A
L B25D-71-241

- From 5-1-99 R B25D-70-240
L B25D-71-240
- 2000-03 R B25D-70-240
L B25D-71-240
- 14 Reinf, Hinge Pillar R BJUJ-70-030
L BJUJ-71-030
- 15 Pillar, Inner Hinge R B25D-70-230
L B25D-71-230
- 16 Bracket, Inst Panel 1999 To 3-1-99 R B25D-70-260B
L B25D-71-260B
- From 3-1-99 R B25D-70-260C
L B25D-71-260C
- 2000-03 R B25D-70-260C
L B25D-71-260C
- 17 Reinforcement Assy, Center Pillar R B25D-70-362Z
L B25D-71-362Z
- 18 Plate, Nut (a) R/L GE4T-70-46X
- (a) Included w/Center Pillar Reinforcement Assy
- 19 Pillar, Inner Center 1999 To 5-1-99 R B25D-70-080B
L B25D-71-080B
- From 5-1-99 R BJUJ-70-080
L BJUJ-71-080
- 2000-03 R BJUJ-70-080
L BJUJ-71-080

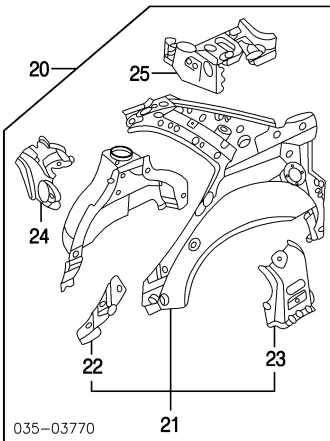

- 20 Panel Assy, Inner Quarter R BJUJ-70-100
L BJUJ-71-100
- 21 Pillar Assy, Inner Quarter (a) R BJUJ-70-11X
L BJUJ-71-11X
- 22 Plate, End (a) R B25D-70-112
L B25D-71-112
- 23 Reinf, Rear Pillar (a) R B25D-70-120
L B25D-71-120
- (a) Included w/Inner Quarter Pillar Assy
- 24 Gusset, Package Tray (a) 99-00 R B25D-70-18ZA
L B25D-71-18Z
- 01-03 R B25D-70-18ZA
L B25D-71-18ZA
- 25 Ext, Package Tray (a) 99-00 R B25D-70-180A
L B25D-71-180
- 01-03 R B25D-70-180A
L B25D-71-180A
- (a) Included w/Inner Quarter Panel Assy


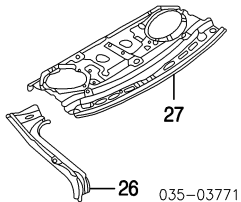


- 26 Rail, Rear R B25D-70-441
L B25D-71-441
- 27 Tray, Package B25D-70-500D

EXTERIOR TRIM HATCHBACK


Illustration Located in Next Column

- 1 Moulding Assy, Rocker Grace Green (Code 18J) R BN3V-51-P40C-46
L BN3V-51-P50C-46
- Paint to Match R BNYV-51-P40
L BNYV-51-P50
- 2 Cap, Rear End (a) R BN3V-51-981A
L BN3V-51-9C1A

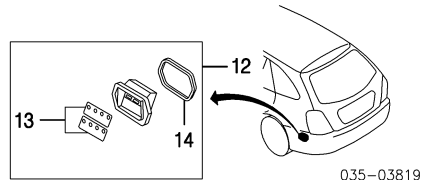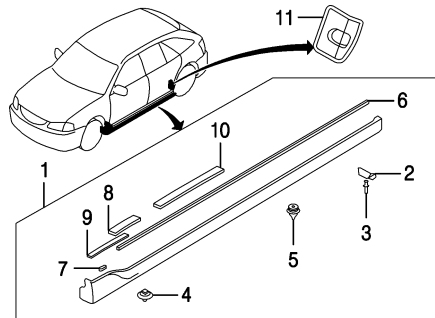

- 3 Rivet, End Cap (a) R/L 9025-84-814
- 4 Clip, No. 1 Mid (a) (5/Side) R/L KA80-51-RE5A
- 5 Clip, No. 2 Mid (a) (9/Side) R/L G18K-51-SJ3
- 6 Seal, Moulding (a) R/L B28V-51-PK2
- 7 Protector, Front End (a) R/L BN3V-51-PK2
- 8 Protector, Upper (a) R/L B28V-51-RE2
- 9 Protector, Lower (a) R/L BN3V-51-RC2
- 10 Protector, Center (a) R/L B28V-51-RG2
- (a) Included w/Rocker Moulding Assy
- 11 Cover, Side R B25D-56-061D-65
L B25D-56-065D-65
- 12 Extractor Assy, Air R/L E016-51-920G
- 13 Valve, Extractor (a) R/L E016-51-923C
- 14 Gasket, Extractor (a) R/L E016-51-922
- (a) Included w/Air Extractor Assy

EXTERIOR TRIM SEDAN

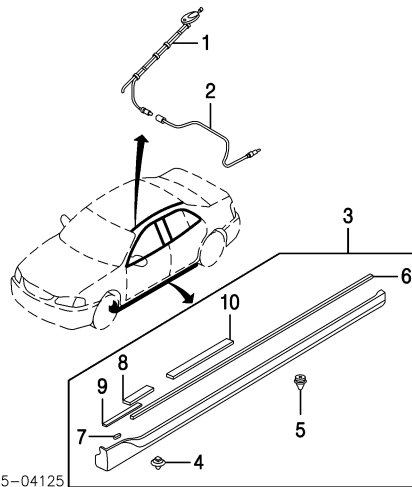

- 1 Mast, Antenna L 0000-81-9172
- 2 Cable, Antenna 99-00 BJ0E-66-940B
01-03 BL4C-66-940B
- 3 Moulding Assy, Rocker Black Mica (Code 16W) R BP7H-51-P40-08
L BP7H-51-P50-08
- Galaxy Gold (Code 23F) R BP7H-51-P40-27
L BP7H-51-P50-27
- Garnet Red (Code 25F) R BP7H-51-P40-21
L BP7H-51-P50-21
- Grace Green (Code 18J) R BP7H-51-P40-46
L BP7H-51-P50-46
- Orient Green (Code 23G) R BP7H-51-P40-91
L BP7H-51-P50-91
- Pure White (Code A3D) R BP7H-51-P40-09
L BP7H-51-P50-09
- Sparkling Silver (Code 24E) R BP7H-51-P40-28
L BP7H-51-P50-28
- Spicy Orange (Code 25T) R BP7H-51-P40-35
L BP7H-51-P50-35
- Starry Blue (Code 24A) R BP7H-51-P40-52
L BP7H-51-P50-52
- Sunburst Yellow (Code HZ) R BP7H-51-P40-HZ
L BP7H-51-P50-HZ
- Sunlight Silver (Code 22V) R BP7H-51-P40-67
L BP7H-51-P50-67
- 4 Clip, No. 1 Mid (a) (5/Side) R/L G043-50-753
- 5 Clip, No. 2 Mid (a) (9/Side) R/L G18K-51-SJ3

MAZDA PROTEGE/PROTEGE5 1999-03

SIDE BODY Cont'd

EXTERIOR TRIM

SEDAN Cont'd

6 Seal, Moulding	R/L B28V-51-PK2
7 Protector, Front End	R/L BN3V-51-PK2
8 Protector, Upper	R/L B28V-51-RE2
9 Protector, Lower	R/L BN3V-51-RC2
10 Protector, Center	R/L B28V-51-RG2

†Included w/Rocker Moulding Assy

035-04126

11 Mudguard, Rear	R BJOE-51-870
	L BJOE-51-880
12 Clip (3/Side)	R/L B092-51-861
13 Extractor Assy, Air	C001-51-920D
14 Retainer, Extractor	GE4T-51-924
15 Valve, Extractor	GE4T-51-923
16 Gasket, Extractor	GE4T-51-922

†Included w/Air Extractor Assy

| 17 Grommet, Screw | 9991-00-407 |

INTERIOR TRIM

HATCHBACK

035-03820

1 Moulding, W/S Garnish-See Windshield Section	R BJOE-68-3CXA
2 Bracket, Garnish Mldg	L BJOE-68-3CYA
3 Panel Assy, Cowl Trim	R BJOE-68-370-65
	L BJOE-68-390-65
4 Cover, Left Cowl Trim	BJOE-68-381-65
5 Fastener, Cowl Trim	R/L GJ21-68-885B-02

†Included w/Cowl Trim Panel Assy

6 Clip, Cowl Trim	R/L GJ21-68-885B-02
7 Cover, Side Trim	R/L GE4T-68-6G1E-65
8 Fastener, Side Trim	R/L GJ21-68-885B-02
9 Panel Assy, Upper Center Pillar	R/L BN6A-68-190A-03
	w/Sunroof
	L BL8E-68-190-03
	w/o Sunroof
10 Spacer, Upper Trim	R BN6A-68-DF1A
	w/Sunroof
	L BN6A-68-DF2A
	R B25E-68-DF1C
	L B25E-68-DF2C
11 Extension Spacer	R/L BN6B-68-DF1A
12 Spacer, Lower Trim	R BJOE-68-DF1A
	L BJOE-68-DF2A

†Included w/Upper Center Pillar Panel Assy

13 Bracket, Upper	R BJOE-68-DL1A
	L BJOE-68-DL6A
14 Panel, Lwr Ctr Pillar Trim	R B30D-68-220-65
	L B30D-68-230-65
15 Garnish, Lower Trim Panel	R/L B25D-68-2C1-65
16 Plate Assy, Front Scuff	R B25D-68-710A-65
	L B25D-68-720A-65

17 Clip, Scuff Plate	(4/Side) R/L G25D-68-AD3
	<i>†Included w/Front Scuff Plate Assy</i>
18 Plate Assy, Rear Scuff	R B25F-68-730A-65
	L B25F-68-740A-65
19 Clip, Front	(2/Side) R/L G25D-68-AD3
20 Clip, Rear	R/L B003-68-712

†Included w/Rear Scuff Plate Assy

21 Bezel, Opener Lever	GA5R-68-6F1E-65
22 Carpet, Floor	BN5V-68-670B-02
23 Fastener, Center (2)	H380-68-885
24 Fastener, Rear (3)	G032-68-865A-00

035-03821

25 Trim Assy, Upper Quarter	R/L BL2L-68-250B-03
26 Spring, Upper Trim	(3/Side) R/L H260-64-345
27 Clip, Upper Trim	(2/Side) R/L GJ12-68-865

†Included w/Upper Quarter Trim Assy

28 Fastener, Upper Trim	R/L GJ21-68-885B-02
29 Insulator, Wheelhouse	R B25H-68-655A
30 Trim Assy, Side Lower	R BJ3D-68-760A-65
	L BJ3D-68-770A-65
31 Clip, Trim	R/L GA2A-68-712

†Included w/Side Lower Trim Assy

32 Fastener, Trim (3/Side)	R/L GJ21-68-885B-02
33 Trim Assy, Upper Luggage Compartment	R B25H-68-84ZA-65
	L BJ3D-68-86ZA-65
	R/L S47P-64-345

†Included w/Upper Luggage Compartment Trim Assy

35 Trim Assy, Lower Luggage Compartment	R BL2L-68-850-65
	L BN5V-68-870-65
36 Spring, Plate	R/L J001-64-345
37 Fastener, Trim	R/L GE4T-68-865A
38 Holder, Trim Hinge	R D101-68-855-65
	L D101-68-875-65
39 Cover, Hole	(3/Side) R/L B25H-68-6D1-65
40 Lid, Right Quarter Trim	B25H-68-870-65

†Included w/Lower Luggage Compartment Trim Assy

| 41 Fastener, Lower Trim (4/Side) | R/L GJ21-68-885B-02 |

035-03822

42 Tray Assy, Rear Package	B26H-68-310D-65
43 Strap, Tray	R/L B25H-68-315
44 Hinge, Strap	R B25H-68-313
	L B25T-68-313
45 Cushion, Tray	R/L B060-68-318
46 Hook, Tray	B25H-68-323A

†Included w/Rear Package Tray Assy

47 Hanger, Tray	R/L E001-68-301
48 Hook Assy, Front	R/L B27F-69-56XA
49 Band, Hook	R/L B27F-69-501A

†Included w/Front Hook Assy

| 50 Hook, Rear | R/L BJ3D-69-56XA |

INTERIOR TRIM

SEDAN

035-03251

1 Moulding, W/S Garnish-See Windshield Section	
2 Panel Assy, Cowl Trim	1999-00
	Brown R BJOE-68-370-90
	Gray L BJOE-68-390-90
	R BJOE-68-370-43
	L BJOE-68-390-43
	2001-03
	Beige R BJOE-68-370-80
	L BJOE-68-390-80
	Black R BJOE-68-370-65
	L BJOE-68-390-65
	Gray R BJOE-68-370-05
	L BJOE-68-390-05

3 Cover, Left Cowl Trim	1999-00
	Brown BJOE-68-381-90
	Gray BJOE-68-381-43
	2001-03
	Beige BJOE-68-381-80
	Black BJOE-68-381-65
	Gray BJOE-68-381-05

4 Fastener, Cowl Trim	R/L GE4T-68-865A
-----------------------	------------------

†Included w/Cowl Trim Panel Assy

5 Cover, Side Trim	1999-00
	Black R GE4T-68-6G1E-65
	L GE4T-68-6G4D-65
	Brown R GE4T-68-6G1E-90
	L GE4T-68-6G4D-90
	2001-03
	Beige R GE4T-68-6G1E-80
	L GE4T-68-6G4D-80
	Black R GE4T-68-6G1E-65
	L GE4T-68-6G4D-65
	Gray R GE4T-68-6G1E-05
	L GE4T-68-6G4D-05

6 Fastener	Side Trim (2/Side)
	1999-00
	Black R/L GJ21-68-885B-02
	Brown R/L GJ21-68-885B-90
	2001-03
	Beige R/L GJ21-68-885B-80
	Black R/L GJ21-68-885B-02
	Gray R/L GJ21-68-885B-05
	Cowl Trim
	1999-00
	Brown R/L GJ21-68-885B-90
	Gray R/L GJ21-68-885B-29
	2001-03
	Beige R/L GJ21-68-885B-80
	Black R/L GJ21-68-885B-02
	Gray R/L GJ21-68-885B-05

7 Panel Assy, Upper Center Pillar Trim	1999-00
	R B25D-68-190D-48
	L B25D-68-210D-48
	2001-03
	Beige R BL8E-68-190-80
	L BL8E-68-210-80
	Gray R BL8E-68-190-03
	L BL8E-68-210-03

†Light Gray listed, Order by Application

8 Spacer, Trim Panel (a)	R/L B25E-68-DF1C
--------------------------	------------------

(a) †Included w/Upper Center Pillar Trim Panel Assy


9 Panel, Lower Center Pillar Trim	1999-00
	Brown R B25D-68-220B-90
	L B25D-68-230B-90
	Gray R B25D-68-220B-43
	L B25D-68-230B-43
	2001-03
	Beige R BJOE-68-220-05
	L BJOE-68-230-05

†Gray listed, Order by Application

10 Garnish, Lower Trim Panel	1999-00
	Brown R B25D-68-2C1-90
	Gray L B25D-68-2D1-90
	R B25D-68-2C1-43
	L B25D-68-2D1-43
	2001-03
	Beige R B25D-68-2C1-80

MAZDA PROTEGE/PROTEGE5 1999-03

Black	L B25D-68-2D1-80 R B25D-68-2C1-65
Gray	L B25D-68-2D1-65 R B25D-68-2C1-05
11 Plate Assy, Front Scuff	
1999-00	
Brown	R B25D-68-710A-90 L B25D-68-720A-90
Gray	R B25D-68-710A-43 L B25D-68-720A-43
2001-03	
Beige	R B25D-68-710A-80 L B25D-68-720A-80
Black	R B25D-68-710A-65 L B25D-68-720A-65
Gray	R B25D-68-710A-05 L B25D-68-720A-05
12 Clip (4/Side)	R/L G25D-68-AD3
*Included w/Front Scuff Plate Assy	
13 Plate Assy, Rear Scuff	
1999-00	
Brown	R B25F-68-730A-90 L B25F-68-740A-90
Gray	R B25F-68-730A-43 L B25F-68-740A-43
2001-03	
Beige	R B25F-68-730A-80 L B25F-68-740A-80
Black	R B25F-68-730A-65 L B25F-68-740A-65
Gray	R B25F-68-730A-05 L B25F-68-740A-05
14 Clip, Front (2/Side)	R/L G25D-68-AD3
15 Clip, Rear	R/L B003-68-712
*Included w/Rear Scuff Plate Assy	
16 Bezel, Opener Lever	
1999-00	
Brown	GA5R-68-6F1E-90
Gray	GA5R-68-6F1E-43
2001-03	
Beige	GA5R-68-6F1E-80
Black	GA5R-68-6F1E-65
Gray	GA5R-68-6F1E-05
17 Carpet, Floor	
1999-00	
1.6L Eng	
Gray	BJ0F-68-670D-43
Grayish Taupe	BJ0F-68-670C-32
1.8L Eng	
Gray	BJ0R-68-670D-43
Grayish Taupe	BJ0R-68-670E-32
2001-03	
1.6L Eng	BJ0F-68-670E-05
2.0L Eng	BJ0R-68-670E-05
*Gray listed, Order by Application	
18 Fastener, Center (2)	H380-68-885
19 Fastener, Rear (3)	G032-68-865A-00

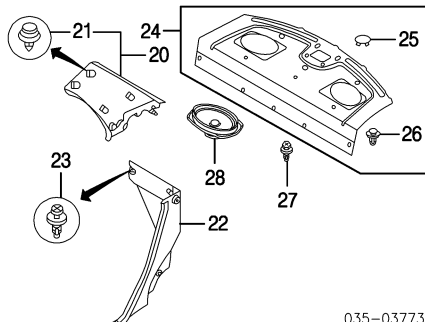


035-03773

20 Trim Assy, Upper	
1999-00	
Black	R B25D-68-250-48 L B25D-68-260-48
2001-03	
Beige	R B30D-68-250-80 L B30D-68-260-80
Gray	R B30D-68-250-03 L B30D-68-260-03
*Gray listed, Order by Application	
21 Fastener, Uptr Trim (a) (2/Side)	R/L GE4T-68-865A
*Included w/Upper Trim Assy	
22 Trim, Lower	
1999-00	
Brown	R B25D-68-760B-90 L B25D-68-770B-90
Gray	R B25D-68-760B-43 L B25D-68-770B-43
2001-03	
Beige	R B25D-68-760B-80 L B25D-68-770B-80
Black	R B25D-68-760B-65 L B25D-68-770B-65
Gray	R B25D-68-760B-05 L B25D-68-770B-05
23 Fastener, Trim (3/Side)	
1999-00	
Brown	R/L B467-68-AC3-90
Gray	R/L B467-68-AC3-29
2001-03	
Beige	R/L B467-68-AC3-80
Black	R/L B467-68-AC3-02

Gray	R/L B467-68-AC3-05
24 Tray Assy, Package	
1999-00	
Brown	BJ0F-68-3A0B-90
Gray	BJ0F-68-3A0B-43
2001-03	
w/Rear Spoiler	BL8E-68-3A0A-80
Beige	BL8E-68-3A0A-65
Black	BL8E-68-3A0A-05
Gray	BL8E-68-3A0A-05
w/o Rear Spoiler	BL8D-68-3A0A-80
Beige	BL8D-68-3A0A-65
Black	BL8D-68-3A0A-05
Gray	BL8D-68-3A0A-05
25 Cap, Seat Belt Anchor (3)	
1999-00	
Brown	B455-68-272-90
Gray	B455-68-272-43
2001-03	
Outer	
Beige	R BL8D-68-3R1A-80
Black	R BN1C-68-3R1A-80
Black	R BL8D-68-3R1A-65
Black	L BN1C-68-3R1A-65
Gray	R BL8D-68-3R1A-05
Inner	L BN1C-68-3R1A-05
Beige	BL8E-68-3R1A-80
Black	BL8E-68-3R1A-65
Gray	BL8E-68-3R1A-05
26 Fastener, Tray (3)	B21M-68-AB1
*Included w/Package Tray Assy	
27 Fastener, Tray	
1999-00	
USA (5)	
Brown	B467-68-AC3-90
Gray	B467-68-AC3-43
Canada (7)	
Brown	N.A.
Gray	N.A.
2001-03	
Beige	B467-68-AC3-80
Black	B467-68-AC3-02
Gray	B467-68-AC3-05
28 Speaker, Rear	R/L 0000-81-C01

QUARTER GLASS

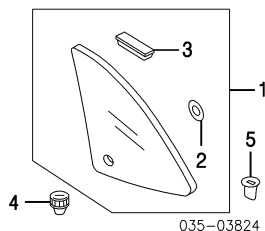

035-03824


1 Glass Assy, Quarter	
Mazda (Green)	R B25R-50-G10E L B25R-50-G20E
2 Gasket, Glass Garnish (1)	R/L B25R-50-M37
3 Spacer, Glass (1)	R/L D203-50-896A
*Included w/Quarter Glass Assy	
4 Fastener, Upper Glass	R/L G14T-50-896A
5 Fastener, Lower Glass	R/L B130-51-919

LUGGAGE LID

SHEET METAL

Illustration Located in Next Column


1 Lid, Luggage	
w/Rear Spoiler	BJ0F-52-610B
w/o Rear Spoiler	BJ0E-52-610D
2 Latch Assy, Lid	
1999-00	B25E-56-820B
2001-03	
w/Room Lamp	BL8E-56-820
w/o Room Lamp	BL8D-56-820
3 Clip, Rod (2)	G030-58-315
4 Bushing, Latch (1)	H001-58-318
*Included w/Lid Latch Assy	
5 Striker, Latch	
1999	
To 1-1-99	BC1D-56-840B
From 1-1-99	B25D-56-840A
2000-03	B25D-56-840A
2000-03	BC1M-56-823A
6 Cover, Latch	
7 Fastener, Cover	9926-50-625
8 Cylinder/Key, Lock (1)	B2YD-76-230A
*Included w/Vehicle Lock Set-listed in Steering Wheel/Column Section	
9 Plug, Front Hole	R/L B092-56-052
10 Plug, Rear Hole	R/L KA01-66-9A1
11 Cushion, Rubber	R/L LA01-58-873A
12 Pad, Cushion	R/L G043-62-864A
13 Damper, Lid Dynamic	

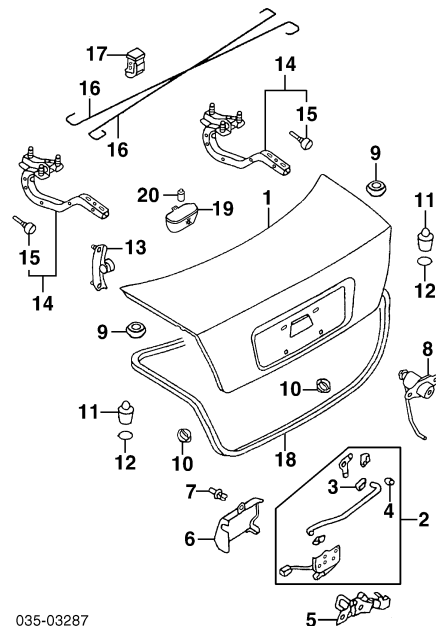

035-03287

w/o Rear Spoiler	B25D-56-982B
14 Hinge Assy, Lid	R/L B25D-52-710C
15 Cushion, Hinge (1)	R/L GJ21-56-802A
*Included w/Lid Hinge Assy	
16 Spring, Balance	
w/Rear Spoiler	R B25E-52-791C
DX, LX, ES, SE Model	L B25E-52-792C
MAZDASPEED, MP3 Model	R/L BNYH-52-791-2
w/o Rear Spoiler	R B25D-52-791C
	L B25D-52-792C
	BC1M-56-894C
17 Clip, Spring	B25D-56-951C
18 Weatherstrip, Lid	B100-51-441
19 Lens, Compartment Lamp	0000-11-0194
20 Bulb, Lamp	

EXTERIOR TRIM

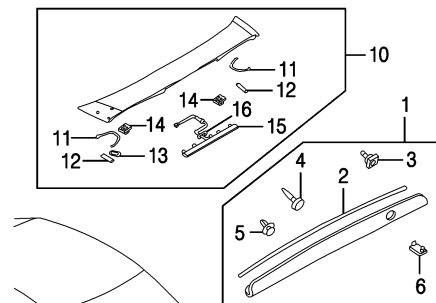

035-04127


1 Garnish Assy, Luggage Lid	
Aroma Red (Code 18U)	99-00 B25F-50-810B-13
Black Mica (Code 16W)	B25F-50-810B-08
Champagne Silver (Code 4F)	B25F-50-810B-4F
Chaste White (Code PT)	99-00 B25F-50-810B-PT
Chrome	BK2H-50-810
Classic Red (Code A3E)	99-01 B25F-50-810B-SU
	02-03 B25F-50-810B-10
Galaxy Gold (Code 23F)	01-03 B25F-50-810B-27
Garnet Red (Code 25F)	B25F-50-810B-21
Grace Green (Code 18J)	B25F-50-810B-46
Highlight Silver (Code 18G)	99-00 B25F-50-810B-92
Moonlight Gray (Code 12M)	99-00 B25F-50-810B-25
Orient Green (Code 23G)	01-03 B25F-50-810B-91
Passion Red (Code 22K)	B25F-50-810B-15
Pure White (Code A3D)	01-03 B25F-50-810B-09
Sparkling Silver (Code 24E)	B25F-50-810B-28
Spicy Orange (Code 25T)	B25F-50-810B-35
Starry Blue (Code 24A)	02-03 B25F-50-810B-52
Sunburst Yellow (Code HZ)	B25F-50-810B-HZ
Sunlight Silver (Code 22V)	01-03 B25F-50-810B-67
Supreme Blue (Code 22A)	99-01 B25F-50-810B-50

MAZDA PROTEGE/PROTEGE5 1999-03

LUGGAGE LID Cont'd

EXTERIOR TRIM Cont'd	
Twilight Blue (Code 12K)	99-00 B25F-50-810B-57
2 Protector, Garnish	B25D-50-814A
3 Bolt, Garnish (2)	BW1N-51-3F4
4 Retainer, Garnish (2)	M001-51-3F4
5 Fastener, Garnish	G043-50-742
6 Cap, Garnish	
Aroma Red (Code 18U)	99-00 B25D-50-819B-13
Black Mica (Code 16W)	B25D-50-819B-08
Champagne Silver (Code 4F)	B25D-50-819B-4F
Chaste White (Code PT)	99-00 B25D-50-819B-PT
Chrome	BK2H-50-819
Classic Red (Code A3E)	B25D-50-819B-SU
Galaxy Gold (Code 23F)	01-03 B25D-50-819B-27
Garnet Red (Code 25F)	B25D-50-819B-21
Grace Green (Code 18J)	B25D-50-819B-46
Highlight Silver (Code 18G)	99-00 B25D-50-819B-92
Moonlight Gray (Code 12M)	99-00 B25D-50-819B-25
Orient Green (Code 23G)	B25D-50-819B-91
Passion Red (Code 22K)	B25D-50-819B-15
Pure White (Code A3D)	01-03 B25D-50-819B-09
Sparkling Silver (Code 24E)	B25D-50-819B-28
Spicy Orange (Code 25T)	B25D-50-819B-35
Starry Blue (Code 24A)	02-03 B25D-50-819B-52
Sunburst Yellow (Code HZ)	B25D-50-819B-HZ
Sunlight Silver (Code 22V)	01-03 B25D-50-819B-67
Supreme Blue (Code 22A)	99-00 B25D-50-819B-50
Twilight Blue (Code 12K)	99-00 B25D-50-819B-57
*Included w/Luggage Lid Garnish Assy	
7 Emblem (Adhesive)	B25D-51-730B
Nameplate (Adhesive)	
8 "MAZDA"	B25D-51-710A
9 "Protege"	BJ0E-51-720A
Nameplate (Adhesive)	
"MP3"	N.A.
10 Spoiler Assy	
Black Mica (Code 16W)	B25F-51-960C-08
Champagne Silver (Code 4F)	B25F-51-960C-4F
Chaste White (Code PT)	99-00 B25F-51-960C-PT
Classic Red (Code A3E)	B25F-51-960C-10
Galaxy Gold (Code 23F)	01-03 B25F-51-960C-27
Garnet Red (Code 25F)	B25F-51-960C-21
Glacial Silver (Code 22L)	02-03 B25F-51-960C-55
Grace Green (Code 18J)	B25F-51-960C-46
Highlight Silver (Code 18G)	99-00 B25F-51-960C-92
Innocent Blue (Code 20P)	02-03 B25F-51-960C-40
Moonlight Gray (Code 12M)	99-00 B25F-51-960C-25
Orient Green (Code 23G)	01-03 B25F-51-960C-91
Passion Red (Code 22K)	B25F-51-960C-15
Pure White (Code A3D)	01-03 B25F-51-960C-09
Sparkling Silver (Code 24E)	B25F-51-960C-28
Spicy Orange (Code 25T)	B25F-51-960C-35
Starry Blue (Code 24A)	02-03 B25F-51-960C-52
Sunburst Yellow (Code HZ)	B25F-51-960C-HZ
Sunlight Silver (Code 22V)	01-03 B25F-51-960C-67
Supreme Blue (Code 22A)	99-03 B25F-51-960C-50
Twilight Blue (Code 12K)	99-00 B25F-51-960C-57
11 Protector, Outer Spoiler	R/L B25F-51-982
12 Protector, Inner Spoiler	R/L A083-51-979
13 Fastener, Spoiler	R/L B173-50-852A
14 Gasket, Spoiler	B25F-51-965
15 Lamp, Stop	B25F-51-580B
16 Gasket, Lamp	B22H-51-9M9
*Included w/Spoiler Assy	



LIFTGATE SHEET METAL

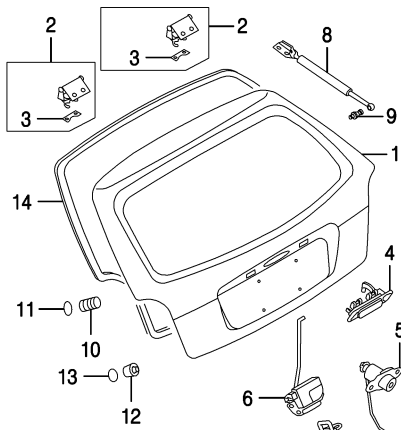

1 Shell, Liftgate	BJ3E-62-020F
2 Hinge Assy, Liftgate	R/L D201-62-210A
3 Gasket, Hinge	R/L B001-62-212
*Included w/Liftgate Hinge Assy	
4 Handle, Outside	B25R-62-410A
5 Cylinder, Lock	*See Steering Wheel/Column Section
*Serviced w/Vehicle Lock Set	
6 Latch, Liftgate	B25W-62-310C


7 Striker, Latch	B25R-62-361
8 Stay, Prop	R B25R-62-620C
	L B25R-63-620C
9 Ball, Stud	R/L S084-62-625A
10 Stop, Liftgate	R/L P100-58-873B
11 Protector, Stop	R/L C001-56-864A
12 Buffer, Liftgate	R/L C100-62-877
13 Protector, Buffer	R/L C001-56-864A
14 Weatherstrip, Liftgate	B25R-62-761D

EXTERIOR TRIM

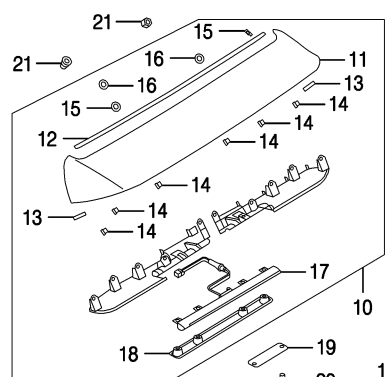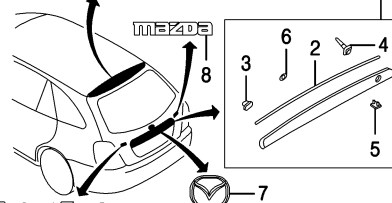
1 Garnish Assy, Liftgate	
Black Mica (Code 16W)	B25R-50-810B-08
Classic Red (Code A3E)	B25R-50-810B-10
Grace Green (Code 18J)	B25R-50-810B-46
Pure White (Code A3D)	B25R-50-810B-09
Starry Blue (Code 24A)	B25R-50-810B-52
Sunburst Yellow (Code HZ)	B25R-50-810B-HZ
Sunlight Silver (Code 22V)	B25R-50-810B-67
Supreme Blue (Code 22A)	B25R-50-810B-50
B25R-50-814A	B25R-50-814A
173-50-852A	B173-50-852A
2 Protector, Garnish	R/L B25R-51-3F4
3 Fastener, Garnish	R/L B173-50-852A
4 Bolt, Garnish	R/L B25R-51-3F4
5 Cap, Garnish	
Black Mica (Code 16W)	R/L B25R-50-819B-08
Classic Red (Code A3E)	R/L B25R-50-819B-10
Grace Green (Code 18J)	R/L B25R-50-819B-46
Pure White (Code A3D)	R/L B25R-50-819B-09
Starry Blue (Code 24A)	R/L B25R-50-819B-52
Sunburst Yellow (Code HZ)	R/L B25R-50-819B-HZ
Sunlight Silver (Code 22V)	R/L B25R-50-819B-67
Supreme Blue (Code 22A)	R/L B25R-50-819B-50
B25H-50-818	R/L B25H-50-818
*Included w/Liftgate Garnish Assy	
7 Emblem (Adhesive)	DC01-51-730A
Nameplate (Adhesive)	
8 "MAZDA"	B25R-51-710A
9 "Protege 5"	BN5W-51-720
10 Spoiler Assy	
Black Mica (Code 16W)	B25T-51-960C-08
Classic Red (Code A3E)	B25T-51-960D-SU
Grace Green (Code 18J)	B25T-51-960C-46
Pure White (Code A3D)	B25T-51-960C-09
Starry Blue (Code 24A)	B25T-51-960D-52
Sunburst Yellow (Code HZ)	B25T-51-960D-HZ
Sunlight Silver (Code 22V)	B25T-51-960D-67
Supreme Blue (Code 22A)	B25T-51-960C-50
11 Spoiler, Upper	
Black Mica (Code 16W)	B25T-51-971A-08
Classic Red (Code A3E)	B25T-51-971A-SU
Grace Green (Code 18J)	B25T-51-971A-46
Pure White (Code A3D)	B25T-51-971A-09
Starry Blue (Code 24A)	B25T-51-971A-52
Sunburst Yellow (Code HZ)	B25T-51-971A-HZ
Sunlight Silver (Code 22V)	B25T-51-971A-67
Supreme Blue (Code 22A)	B25T-51-971A-50
12 Protector, Upper	B25T-51-972
13 Protector, Lwr Outer	R/L B255-51-979
14 Protector, Lwr Inr (6)	G14V-51-954
15 Gasket, Otr Mtg (2)	R/L B22H-50-818
16 Gasket, Ctr Mtg (2)	R/L EA01-50-812
17 Lamp, Stop	B25T-51-580B
18 Cover, Stop Lamp	B25T-51-9N4
*Included w/Spoiler Assy	
19 Plate, Stop Lamp Seal	B25T-51-587A
20 Rivet, Seal Plate (2)	FB01-56-964
21 Fastener, Spoiler	R/L B01A-51-146

INTERIOR TRIM

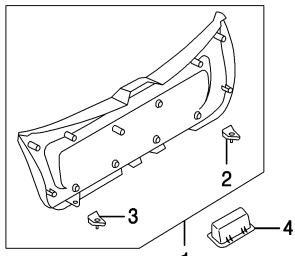


1 Trim Assy, Liftgate	B25H-68-960C-65
2 Clip, Trim (8)	GJ12-68-865
3 Fastener, Trim (4)	S09B-68-865
*Included w/Liftgate Trim Assy	
4 Cover, Lower Trim	B25H-68-966-65

GLASS & PARTS

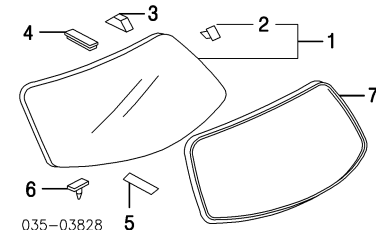

1 Glass Assy, Liftgate	
Mazda	B25R-63-930C
2 Terminal, Glass (2)	FB01-63-959
*Included w/Liftgate Glass Assy	
3 Spacer, Glass	C001-50-897
4 Fastener, Glass (5)	S09A-50-896A
5 Tape, Glass (3)	S09A-50-898A
6 Stud, Glass (2)	B25R-63-938
7 Moulding, Glass	B25R-50-611A

WIPER SYSTEM

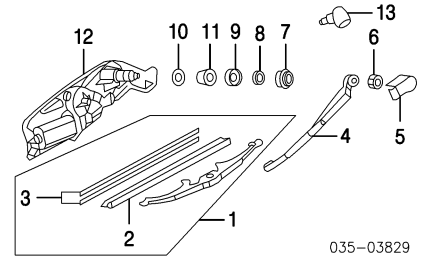

1 Blade Assy, Wiper	B25H-67-330
2 Blade, Wiper	B25H-67-333
3 Insert, Wiper	B25H-67-332
*Included w/Wiper Blade Assy	
4 Arm, Wiper	B25H-67-421
5 Cover, Wiper Arm	G14T-67-395
6 Nut, Otr Wiper Arm	9994-00-601
7 Cap, Seal	G14T-67-366
8 Nut, Inr Wiper Arm	D101-76-605
9 Washer, Outer Pivot	G14T-67-308
10 Washer, Inr Pivot	B25H-67-308
11 Bushing, Wiper	B25H-67-407
12 Motor, Wiper	B25H-67-450B
13 Nozzle, Washer	B25H-67-510B

REAR SUSPENSION

Illustration Located in Next Column

1 Cap, Hub	
Drum Brakes	R/L B455-26-071
Disc Brakes	R/L GA2A-26-071
2 Nut, Axle	
Drum Brakes	R/L GJ21-33-042B
Disc Brakes	R/L LA01-33-042B
3 Drum, Brake	R/L B596-26-251D
4 Rotor, Brake	
DX, ES, LX, SE, MP3 Model	R/L GTFYF-26-251C
MAZDASPEED Model	R/L GFYY-26-251
5 Hub Assy	

MAZDA PROTEGE/PROTEGE5 1999-03

035-03774

Drum Brakes	R/L B603-26-15XC
w/ABS	R/L B455-26-15XA
Disc Brakes	R/L G14V-26-15XB
w/ABS	R/L GF4K-26-15XB

6 Stud, Wheel (4/Side)
 Drum Brakes R/L B455-33-062
 Disc Brakes R/L LA01-33-042B

7 Rotor, ABS Sensor
 Drum Brakes R/L B603-26-471A
 Disc Brakes R/L G14V-26-471
Included w/Hub Assy

8 Sensor, Rear ABS-See ABS/Brakes Section

9 Shoe Set, Brake B2YD-26-38ZA

10 Pad Set, Brake
 DX, ES, LX, SE, MP3 Model BKYT-26-43ZB
 MAZDASPEED Model GGYB-26-43Z

11 Plate, Backing R B25D-26-280
 L B25D-26-290

12 Shield, Splash R GE7C-26-261
 L GE7C-26-271

13 Caliper Assy, Brake
 DX, ES, LX, SE, MP3 Model R BKZT-26-98ZA
 L BKZT-26-99ZA
 MAZDASPEED Model R BPYH-26-98Z
 L BPYH-26-99Z

14 Caliper, Brake
 DX, ES, LX, SE, MP3 Model R BK1T-26-61XA
 L BK1T-26-71XA
 MAZDASPEED Model R BP7H-26-61X
 L BP7H-26-71X

15 Support, Caliper
 DX, ES, LX, SE, MP3 Model R BK1T-26-28X
 L BK1T-26-29X
 MAZDASPEED Model R/L BP7H-26-281
Included w/Brake Caliper Assy

16 Hose, Brake R/L GA7B-43-810

17 Spindle
 Drum Brakes R B25D-26-111
 w/ABS L B25D-26-115
 w/o ABS R BJ0E-26-111
 L BJ0E-26-115

Disc Brakes
 w/ABS R G14T-26-1A0
 L G14T-26-1B0
 w/o ABS R GF4K-26-1A0
 L GF4K-26-1B0

Illustration Located in Next Column

18 Strut, Rear
 1999-00 R B26R-28-700E
 L B26R-28-900E

2001
 MP3 Model R BN7H-28-700A
 L BN7H-28-900A

DX, ES, LX, SE Model
 w/Rear Disc Brakes R/L B30P-28-620A
 w/o Rear Disc Brakes R/L B30K-28-620A

2002-03
 Hatchback
 To 4-1-02 R B30P-28-700A
 L B30P-28-900A
 From 4-1-02 R BL8P-28-700A
 L BL8P-28-900A

Sedan
 w/Rear Disc Brakes R BL8P-28-700A
 DX, ES, LX, SE Model L BL8P-28-900A
 MAZDASPEED Model R BP7H-34-700B
 L BP7H-34-900B

035-03775

w/o Rear Disc Brakes R B30H-28-700B
 L B30H-28-900B

19 Seat, Spring R/L B25D-28-0A3

20 Spring, Coil R/L BJ0E-28-011

1999-00
 2001
 DX, ES, LX, SE Model
 1.6L Eng R/L BJ0E-28-011
 w/ABS R/L B26E-28-011
 w/o ABS
 2.0L Eng R/L BJ3D-28-011
 w/Rear Disc Brakes R/L B26E-28-011
 w/o Rear Disc Brakes R/L BN7H-28-011
 MP3 Model
 2002-03
 Hatchback R/L B26H-28-011
 Sedan
 1.6L Eng R/L BJ0E-28-011
 w/ABS R/L B26E-28-011
 w/o ABS
 2.0L Eng R/L BJ3D-28-011
 DX, ES, LX, SE Model R/L BP7H-28-011
 MAZDASPEED Model R/L B26E-28-011
 w/o Rear Disc Brakes

21 Stopper, Lower R/L B25D-28-111
 DX, ES, LX, SE Model R/L BN7H-34-111
 MAZDASPEED, MP3 Model R/L B01C-28-0A5A
 R/L B01D-28-3A0

22 Boot, Dust R/L B01D-28-3A0

23 Stopper, Upper

24 Mount, Strut R BJ3D-28-380
 Hatchback L BJ3D-28-390
 Sedan R B25D-28-380B
 L B25D-28-390B

25 Washer, Mount R/L B25D-28-343

26 Cap, Strut R/L B25D-28-019A

27 Plate, Adjust R/L GA2A-28-003
 Hatchback R/L BC1D-28-0A1A
 Sedan R BJ0E-28-200A
 L BJ0E-28-250A
 01-03 R BL8D-28-200B
 L BL8D-28-250B

28 Link, Trailing R/L GJ21-28-313
 R/L H380-34-318B

29 Bolt, Front Link R/L

30 Bolt, Rear Link R/L

31 Link, Front Lateral R/L B25D-28-620B

1999-00
 2001-03
 w/Rear Disc Brakes R/L B30P-28-620A
 w/o Rear Disc Brakes R/L B30K-28-620A

32 Bolt, Inner Front Link R/L 9YA0-21-221

33 Link, Rear Lateral R/L B25D-28-600A

1999-00
 2001-03
 w/Rear Disc Brakes R/L B30P-28-620A
 w/o Rear Disc Brakes R/L B30K-28-620A

34 Bolt, Outer Link R/L 9YA1-11-204

35 Bolt, Inner Rear Link R/L BC1F-28-66Z

36 Crossmember B30D-28-800A
 DX, ES, LX, SE Model BN7H-28-800A
 MAZDASPEED, MP3 Model

37 Bracket, Crossmember BN5V-28-8C0A
 Hatchback B30D-28-8C0
 Sedan

38 Bolt, Xmbr (2/Side) R/L GA2A-28-89X

035-03776

39 Bar, Stabilizer B26R-28-151A
 1999-00
 2001
 DX, ES, LX, SE Model
 w/Rear Disc Brakes BL2J-28-151
 w/o Rear Disc Brakes B30H-28-151
 MP3 Model BN7H-28-151B

2002
 w/Rear Disc Brakes BL2J-28-151
 DX, ES, LX, SE Model BP7H-28-151A
 MAZDASPEED Model B30H-28-151
 w/o Rear Disc Brakes

40 Link, Stabilizer Bar DX, ES, LX, SE Model 99-00 R/L BJ0E-28-170
 01-03 R/L B30H-28-170B
 MAZDASPEED, MP3 Model R/L B26R-28-170

41 Bracket, Stabilizer Bar DX, ES, LX, SE Model R/L GA2A-28-155A
 MAZDASPEED, MP3 Model R/L BN7H-28-155A

42 Bushing, Stabilizer Bar DX, ES, LX, SE Model R/L G564-28-156A
 MAZDASPEED, MP3 Model R/L BN7H-28-156E

FUEL TANK

035-03292

1 Cap, Filler BJOE-42-250B
 1999 To 7-28-99 BJOE-42-250B
 From 7-28-99 BJOE-42-250B
 2000-03 BJOE-42-250B

2 Cover Assy, Dust GE4T-42-24ZA

3 Gasket, Outer GE4T-42-244

4 Gasket, Inner GE4T-42-243
Included w/Dust Cover Assy

5 Pipe Assy, Filler BL8M-42-210A
 Hatchback
 Sedan
 1999 To 7-28-99 BJOE-42-210
 From 7-28-99 BK7K-42-210
 2000 BK7K-42-210
 2001 BL8M-42-210
 2002 To 9-18-01 BL8M-42-210A
 From 9-18-01 BN5V-42-210B
 2003 BN5V-42-210B
 GE60-42-243

6 Gasket, Filler Pipe GE60-42-243
Included w/Filler Pipe Assy

7 Valve, Non-Return GD7A-42-270C

8 Hose, Filler BN5V-42-231
 Hatchback
 Sedan
 1999-01 BJOE-42-231
 2002 To 9-18-01 BJOE-42-231
 From 9-18-01 BN5V-42-231
 2003 BN5V-42-231


9 Protector, Filler Pipe B26H-42-298A
 DX, ES, LX, SE, MP3 Model C177-42-298
 MAZDASPEED Model

10 Fastener, Protector (3) BC1D-56-145


MAZDA PROTEGE/PROTEGE5 1999-03

FUEL TANK Cont'd		
11 Tank, Fuel	1.6L, 1.8L Eng	BJ0E-42-110J
	2.0L Eng	
	Hatchback	BN5V-42-110A
	Sedan	BL8M-42-110B
12 Pump Assy, Fuel		ZL01-13-35Z
13 Pump, Fuel		ZL01-13-350
14 Strainer, Fuel Pump		ZL01-13-ZE1
	¶Included w/Fuel Pump Assy	
15 Gauge, Fuel Tank	1.6L, 1.8L Eng	B25D-60-960A
	2.0L Eng	BJ3D-60-960A
16 Plate, Cover		BJ0E-42-16XE
17 Gasket, Fuel Pump		B25D-42-166
18 Pad, Upper		GE4T-42-761
19 Pad, Lower (2)		B455-42-761
20 Insulator, Fuel Tank		BJ0E-42-74XB

REAR BODY SHEET METAL HATCHBACK

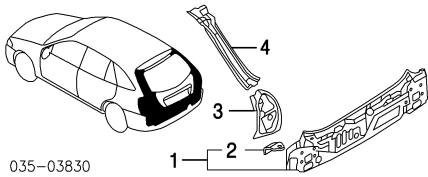


- 035-03830
- Panel Assy, Rear End
 - Bracket, Rear Bumper
 - Plate, Corner
 - Rail, Rear Pillar

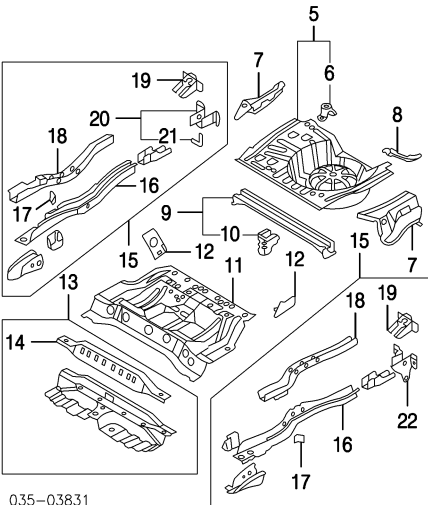


- 035-03831
- Pan Assy, Luggage Compartment
 - Bracket, Spare Tire
 - Panel, Side Floor
 - Reinf, Floor
 - Crossmember Assy, Rear
 - Bracket, Crossmember
 - Pan, Rear Floor
 - Bracket, Seat
 - Crossmember Assy, Front
 - Crossmember, Upper
 - Frame Assy, Rear Side
 - Frame, Front Side
 - Bracket, Frame
 - Reinf, Frame
 - Bracket, Rear Bumper
 - Bracket Assy, Hook
 - Hook, Tie-Down
 - Bracket, Hook

SHEET METAL SEDAN

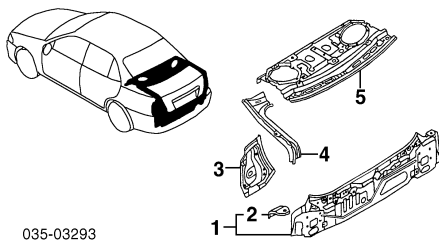

- 035-03293
- Panel Assy, Rear End
 - Bracket, Rear Bumper
 - Plate, Corner
 - Rail, Rear-See Side Body Section
 - Tray, Package-See Side Body Section

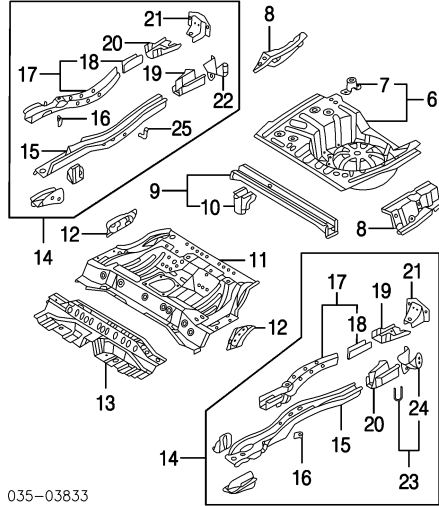


- 035-03833
- Pan Assy, Luggage Compartment
 - Bracket, Spare Tire
 - Panel, Side Floor
 - Crossmember Assy, Rear
 - Bracket, Crossmember
 - Pan, Rear Floor
 - Bracket, Seat
 - Crossmember, Front
 - Frame Assy, Rear Side
 - Frame, Front Side
 - Bracket, Frame
 - Reinforcement Assy, Frame
 - Ext, Frame
 - Frame, Side Rear
 - Reinf, Frame
 - Bracket, Rear Bumper
 - Bracket, Hook
 - Bracket Assy, Hook
 - Bracket, Tie-Down
 - Hook, Tie-Down

INTERIOR TRIM HATCHBACK

- 1 Trim Assy, Rear Panel
- 035-03834

2 Clip, Trim	(4)	GJ12-68-865
3 Cover, Trim		BN5V-68-3R1-65
4 Nut, Trim	(2)	9957-83-000
	¶Included w/Rear Panel Trim Assy	
5 Fastener, Trim		R/L GJ21-68-885B-02
6 Trim Assy, Rear Lower-See Side Body Section		
7 Cover Assy, Spare Tire		BN5V-68-81X-02
8 Clip, Cover	(3)	M020-68-839
9 Strap, Cover		B26H-68-3B0A
	¶Included w/Spare Tire Cover Assy	


INTERIOR TRIM SEDAN

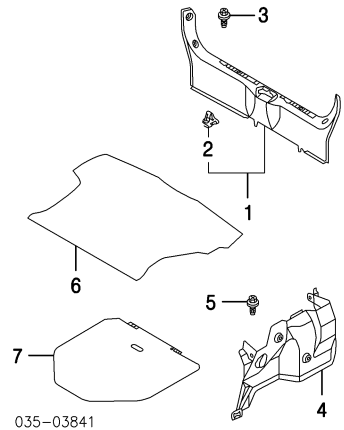

- 035-03841
- Trim Assy, Rear Panel
 - Clip, Trim
 - Fastener, Trim
 - Trim, Side
 - Fastener, Trim
 - Mat, Luggage Comp
 - Cover, Spare Tire

REAR LAMPS

COMBINATION LAMP HATCHBACK

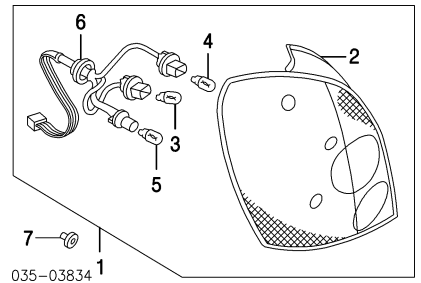


- 035-03834
- Lamp Assy, Combination
 - Lens & Housing
 - Bulb, Tail
 - Bulb, Back-Up
 - Bulb, Turn Signal
 - Harness, Socket

MAZDA PROTEGE/PROTEGE5 1999-03

7 Grommet, Screw R/L GA7B-51-146


COMBINATION LAMP SEDAN

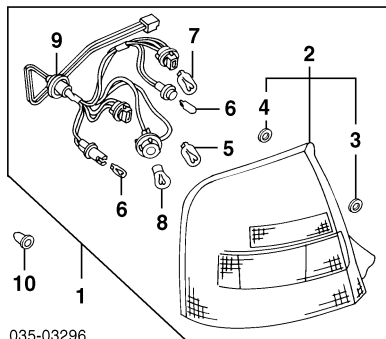

035-03296

- Lamp Assy, Combination
DX, ES, LX, SE Model R BL8D-51-150
L BL8D-51-160
MAZDASPEED Model R BP7H-51-150
L BP7H-51-160
- Lens & Housing Assy[¶]
DX, ES, LX, SE Model R BJ0E-51-170B
L BJ0E-51-180B
MAZDASPEED Model R BP7H-51-170
L BP7H-51-180
- Gasket, Upr Lens & Housing[¶] (a) R/L B25D-51-153
- Gasket, Lwr Lens & Housing[¶] (a) R/L GD7A-51-153
(a) Included w/Lens & Housing Assy
- Bulb, Back-Up[¶] R/L 9970-06-210
- Bulb, Marker[¶] R/L 0000-11-0194
- Bulb, Stop/Tail[¶] R/L 9970-08-215
- Bulb, Turn Signal[¶] R/L 9970-13-210Y
- Harness, Socket[¶] R/L BL8D-51-155
¶Included w/Combination Lamp Assy
- Grommet, Screw R/L GA7B-51-146


LICENSE LAMP HATCHBACK

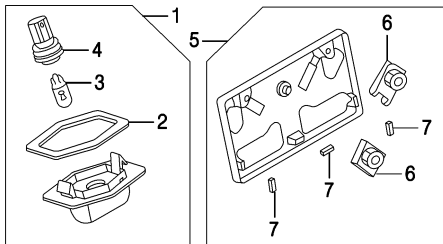

035-03835

- Lamp Assy, License R/L BN5V-51-270
- Gasket, License Lamp[¶] R/L NC10-51-273A
- Bulb, License Lamp[¶] R/L 0000-11-0194
- Socket, License Lamp[¶] R/L NC10-51-272
¶Included w/License Lamp Assy
- Holder Assy, License Plate BN5V-50-2N0
- Fastener, Holder[¶] R/L FB01-50-133C
- Seal, Holder[¶] (3) BN5V-50-2G1
¶Included w/License Plate Holder Assy


LICENSE LAMP SEDAN

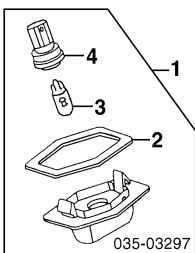

035-03297

- Lamp Assy, License R/L NC10-51-270B
- Gasket, License Lamp[¶] R/L NC10-51-273A
- Bulb, License Lamp[¶] R/L 0000-11-0194
- Socket, License Lamp[¶] R/L NC10-51-272
¶Included w/License Lamp Assy


HIGH MOUNT STOP LAMP ON PACKAGE TRAY

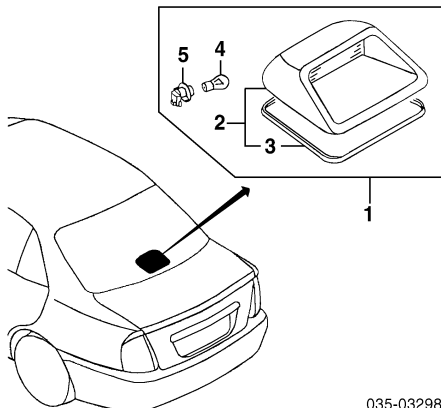

035-03298

- Lamp Assy, Stop
1999-00 B25D-51-580A-90
Gray B25D-51-580A-43
2001-03 B25D-51-580A-80
Beige B25D-51-580A-65
Black B25D-51-580A-05
Gray B25D-51-580A-05
- Lens & Housing Assy[¶]
1999-00 B25D-51-58YA-90
Gray B25D-51-58YA-43
2001-03 B25D-51-58YA-80
Beige B25D-51-58YA-65
Black B25D-51-58YA-05
Gray B25D-51-58YA-05
- Gasket, Lens & Hsg[¶] (a) B25D-51-582A
(a) Included w/Lens & Housing Assy
- Bulb, Stop Lamp[¶] 9970-13-210
- Socket, Stop Lamp[¶] B01A-51-644
¶Included w/Stop Lamp Assy


HIGH MOUNT STOP LAMP ON SPOILER

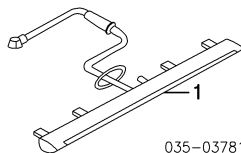

035-03781

- Lamp, Stop
Hatchback-See Liftgate Section
Sedan-See Luggage Lid Section

REAR BUMPER HATCHBACK

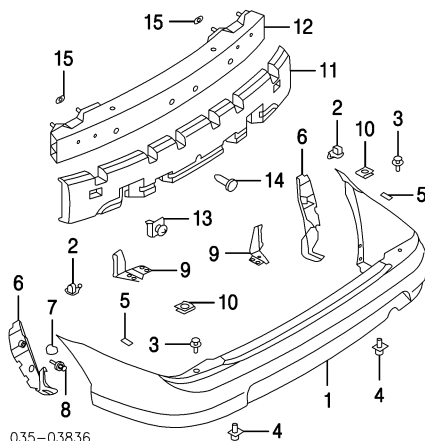


035-03836

- Cover, Rear (P) BN5V-50-221A-AA
(P) Paint to Match
- Grommet, Screw R/L BC1M-50-0Z5
- Fastener, Upper Cover R/L GD7A-50-EA1
- Fastener, Lower Cover R/L BF67-50-033

- Seal, Rubber R/L B25D-50-2G2A
- Shield, Outer Splash R B25D-50-341A
L B25D-50-351A
- Grommet, Screw R/L 9991-00-501
- Rivet, Side Cover R/L 9025-83-208
- Shield, Inner Splash R BN5V-50-342
L BN5V-50-352
- Nut, Clip R/L B455-56-135
- Absorber, Impact BN5V-50-311
- Bar, Reinf BN5V-50-260
- Fastener, Outer R/L BF82-50-233
- Fastener, Center G045-68-865-00
- Gasket, Bumper (2/Side) R/L G030-50-285

SEDAN 1999-00 (TO 7-28-99)

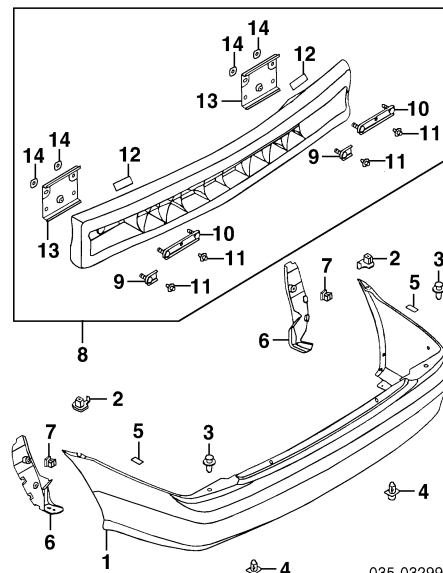

035-03299

- Cover, Rear (P) BJ0J-50-221-8J
(P) Paint to Match
- Grommet, Screw R/L BC1M-50-0Z5
- Fastener, Upper Cover R/L GD7A-50-EA1
- Fastener, Lower Cover R/L BF82-50-233
- Seal, Rubber R/L B25D-50-2G2A
- Shield, Splash R B25D-50-341A
L B25D-50-351A
- Grommet, Screw R/L 9991-00-501
- Bar Assy, Reinforcement BJ0J-50-260A
- Plate, Bolt[¶] BJ0J-50-AC0
- Plate, Bolt[¶] R/L BJ0J-50-AB0
- Fastener, Bolt Plate[¶] R/L 9025-74-808
- Seal, Rubber[¶] R/L BJ0J-50-2G2A
- Stay, Bumper[¶] R/L BJ0J-50-271
- Gasket, Bumper[¶] (2/Side) R/L G030-50-285
¶Included w/Reinforcement Bar Assy

SEDAN 1999-00 (FROM 7-28-99)

Illustration Located in Next Column

- Cover, Rear (P) BJ0J-50-221-8J
(P) Paint to Match
- Grommet, Screw R/L BC1M-50-0Z5
- Fastener, Upper Cover R/L GD7A-50-EA1
- Fastener, Lower Cover R/L BF67-50-033
- Seal, Rubber R/L B25D-50-2G2A
- Shield, Splash R B25D-50-341A
L B25D-50-351A
- Grommet, Screw R/L 9991-00-501
- Absorber, Impact BJ0K-50-311A
- Fastener R/L G045-68-865-00
- Bar Assy, Reinforcement BJ0K-50-26X
- Rivet[¶] (2/Side) R/L 9025-73-205
- Nut, Rivet[¶] (2/Side) R/L 9WAC-00-800
- Stay, Bumper[¶] R/L BJ0K-50-270
¶Included w/Reinforcement Bar Assy
- Gasket, Bumper (2/Side) R/L G030-50-285